



SIM7020 Series_

AT Command Manual

LPWA Module

SIMCom Wireless Solutions Limited

Building B, SIM Technology Building, No.633, Jinzhong Road
Changning District, Shanghai P.R.China

Tel: 86-21-31575100

support@simcom.com

www.simcom.com

Document Title:	SIM7020_Series AT Command Manual
Version:	1.05
Date:	2020.6.10
Status:	Release

GENERAL NOTES

SIMCOM OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS, TO SUPPORT APPLICATION AND ENGINEERING EFFORTS THAT USE THE PRODUCTS DESIGNED BY SIMCOM. THE INFORMATION PROVIDED IS BASED UPON REQUIREMENTS SPECIFICALLY PROVIDED TO SIMCOM BY THE CUSTOMERS. SIMCOM HAS NOT UNDERTAKEN ANY INDEPENDENT SEARCH FOR ADDITIONAL RELEVANT INFORMATION, INCLUDING ANY INFORMATION THAT MAY BE IN THE CUSTOMER'S POSSESSION. FURTHERMORE, SYSTEM VALIDATION OF THIS PRODUCT DESIGNED BY SIMCOM WITHIN A LARGER ELECTRONIC SYSTEM REMAINS THE RESPONSIBILITY OF THE CUSTOMER OR THE CUSTOMER'S SYSTEM INTEGRATOR. ALL SPECIFICATIONS SUPPLIED HEREIN ARE SUBJECT TO CHANGE.

COPYRIGHT

THIS DOCUMENT CONTAINS PROPRIETARY TECHNICAL INFORMATION WHICH IS THE PROPERTY OF SIMCOM WIRELESS SOLUTIONS LIMITED COPYING, TO OTHERS AND USING THIS DOCUMENT, ARE FORBIDDEN WITHOUT EXPRESS AUTHORITY BY SIMCOM. OFFENDERS ARE LIABLE TO THE PAYMENT OF INDEMNIFICATIONS. ALL RIGHTS RESERVED BY SIMCOM IN THE PROPRIETARY TECHNICAL INFORMATION , INCLUDING BUT NOT LIMITED TO REGISTRATION GRANTING OF A PATENT , A UTILITY MODEL OR DESIGN. ALL SPECIFICATION SUPPLIED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

SIMCom Wireless Solutions Limited

Building B, SIM Technology Building, No.633 Jinzhong Road, Changning District, Shanghai P.R.China
Tel: +86 21 31575100
Email: simcom@simcom.com

For more information, please visit:

<https://www.simcom.com/download/list-863-en.html>

For technical support, or to report documentation errors, please visit:

<https://www.simcom.com/ask/> or email to: support@simcom.com

Copyright © 2020 SIMCom Wireless Solutions Limited All Rights Reserved.

Version History

Version	Date	Chapter	What is new
V1.00	2018.4.10		New version
V1.01.	2018.7.16	AT+CATWAKEUP	Delete commands
		AT+CSGACT	Delete commands
		4.2.3 AT+CLTS	Modify parameters
		4.2.15 AT+CPSMSTATUS	Add command
		4.2.17 AT+CRESET	Add command
		4.2.18 AT+CREVHEX	Add command
		5.2.3 AT+CSOB	Add command
		5.2.5 AT+CSODSEND	Add command
		5.2.8 AT+CSORCVFLAG	Add command
		7.2.8 AT+CHTTPPARA	Add command
		10.2.3 +CMQDISCON	Add command
		11.2.1 AT+CCOAPNEW	Add test command
		11.2.2 AT+CCOAPSEND	Add test command
		11.2.3 AT+CCOAPDEL	Add test command
		12.2.1 +CSNTP	Modify parameters
V1.02	2018.12.13	14.2.2 AT+MIPLCREATEEXT	Add test command
		14.2.17 AT+MIPLBOOTSTRAPPARA	Add test command
		15 AT Commands for NVRAM	Add test command
		16 AT Commands for CT IOT Platform	Add test command
		1.1 Scope	Add SIM7020G
		AT+CCOAPSTA	Delete command
		3.2.41 AT+IPCONFIG	Add command
		3.2.54 AT+CEREG	Add parameter <rac>
		3.2.55 AT+CGDATA	Add command
		4.2.5 AT+CBANDSL	Modify command
		4.2.19 AT+CDISAUPDN	Modify command
		4.2.20 AT+CNWRCCFG	Add command
		4.2.21 AT+CURTC	Add command
		4.2.22 AT+CHOMENW	Add command
		4.2.23 AT+CBATCHK	Add command
		4.2.24 AT+CGPIO	Add command
		4.2.25 AT*MEDRXCFCFG	Add command
		5.2.4 AT+RETENTION	Add command
		5.2.12 AT+CSOALIVE	Add command

		Chapter 6	AT Commands for TCPIP Application Toolkit to Compatible with SIM800 Serials
		7.2.2 AT+CHTTPCREATEEXT	Add command
		7.2.7 AT+CHTTPSENDEXT	Add command
		7.2.9 AT+CHTTPTOFS	Add command
		7.2.10 AT+CHTPCLRMULCRTBUF	Add command
		7.2.11 AT+CHTPCLRMULSNDBUF	Add command
		7.2.12 AT+CHTPPRESUMESEND	Add command
		7.2.16 +CHTTPTOFS	Add command
		7.2.17 +CHTTPTOFSOK	Add command
		10.2.8 AT+CMQALICFG	Add command
		10.2.9 AT+CMQALICON	Add command
		16.2.4 AT+CM2MCLIGET	Add command
		Chapter 17 AT Commands for Network Command-DM	Add command
		Chapter 18 AT Commands for FOTA	Add command
		Chapter 19 Supported Unsolicited Result Codes	Add
		Chapter 21 ATC Differences among SIM7020 Series	Add
V1.03	2019.05.10	ATP	Delete command
		ATT	Delete command
		AT+MIPLBOOTSTRAPPARA	Delete command
		3.2.19 AT+CMUX?	Modify range of parameters <port_speed> and <T1>
		3.2.44 AT+CGCONTRDP	Add parameters
		Chapter 4	Add AT commands of 3GPP TS 27.005
		5.2.26 AT*MSACL	Move from Chapter 3 to Chapter 5
		5.2.27 AT*MLACL	Move from Chapter 3 to Chapter 5
		5.2.28 AT*MWACL	Move from Chapter 3 to Chapter 5
		5.2.29 AT*MDACL	Move from Chapter 3 to Chapter 5
		5.2.30 AT+CNBIOTDT	Move from Chapter 3 to Chapter 5
		5.2.31 AT+CNBIOTRAI	Add command
		110.2.10 AT+CMQTTSNEW	Add command
		11.2.11 AT+CMQTTSNEWEXT	Add command
		14.2.6 AT+CSETCA	Add command
		20.4Summary of TLS ERROR Codes	Add
V1.04	2020.03.10	AT+DR	Delete command
		AT+DS	Delete command
		AT+FCLASS	Delete command

	AT+ILRR	Delete command
	AT+MSACL	Delete command
	AT+MLACL	Delete command
	AT+MWACL	Delete command
	AT+MDACL	Delete command
	AT+CMMS	Delete command
	AT+CRES	Delete command
	AT+CSAS	Delete command
	AT+CR	Delete command
	AT+CMAR	Delete command
	AT+GCAP	Delete command
	3.2.49 AT*MGCOUNT	Add command
	5.2.28 AT+ICCID	Add command
	5.2.29 AT+CTRJ	Add command
	5.2.30 AT+NIDD	Add command
	5.2.31 AT+CFGRI	Add command
	6.2.4 AT+CSOLIS	Add command
	6.2.14 AT+CSORXGET	Add command
	11.2.12 AT+CMQAZURECFG	Add command
	11.2.13 AT+CMQAZURECON	Add command
	14.2.7 AT+CSETCIPHER	Add command
	17.2.5 AT+CCTUPNUM	Add command
	17.2.6 AT+CCTLASTSTAT	Add command
	Chapter 20	AT Commands for SIM Toolkit
	Chapter 22	Add difference
V1.05	2020.06.10	All
		Change Format

Contents

Version History.....	1
Contents	4
1 Introduction.....	13
1.1 Scope of the document	13
1.2 Related documents	13
1.3 Conventions and abbreviations	13
1.4 AT Command syntax	13
1.4.1 Basic syntax	14
1.4.2 S Parameter syntax.....	14
1.4.3 Extended Syntax	14
1.4.4 Combining AT commands on the same Command line.....	15
1.4.5 Entering successive AT commands on separate lines.....	15
1.5 Supported character sets	15
1.6 Flow control	15
1.6.1 Software flow control (XON/XOFF flow control)	16
1.6.2 Hardware flow control (RTS/CTS flow control).....	16
1.7 Definitions.....	16
1.7.1 Parameter Saving Mode.....	16
1.7.2 Max Response Time.....	17
2 AT Commands According to V.25TER.....	18
2.1 Overview of AT Commands According to V.25TER	18
2.2 Detailed Description of AT Commands According to V.25TER	19
2.2.1 ATE Set Command Echo Mode	19
2.2.2 ATI Display Product Identification Information	20
2.2.3 ATL Set Monitor Speaker Loudness	20
2.2.4 ATM Set Monitor Speaker Mode.....	21
2.2.5 ATN1 Some PC Modem Driver Initial Setting to Handshake at Highest Speed Larger Than S37	21
2.2.6 ATO Switch from Command Mode to Data Mode	22
2.2.7 ATQ Set Result Code Presentation Mode	22
2.2.8 ATS0 Set Number of Rings before Automatically Answering the call.....	23
2.2.9 ATS1 Ring Counter.....	24
2.2.10 ATS2 Set Escape Sequence Character.....	25
2.2.11 ATS3 Set Command Line Termination Character	26
2.2.12 ATS4 Set Response Formatting	27
2.2.13 ATS5 Set Command Line Editing Character.....	28
2.2.14 ATS6 Pause Before Blind Dialling.....	29
2.2.15 ATS7 Set Number of Seconds to Wait for Connection Completion.....	30

2.2.16	ATS8 Set Number of Seconds to Wait for Comma Dial Modifier Encountered in Dial String of D Command	31
2.2.17	ATS10 Set Disconnect Delay after indicating the Absence of Data Carrier	32
2.2.18	ATS12 Set Escape Code Guard Time	33
2.2.19	ATS25 Set DTR Change Time	34
2.2.20	ATS95 Some PC Modem Driver Initial Setting to Enable Extended Result Codes	35
2.2.21	ATV TA Response Format	35
2.2.22	ATX Set CONNECT Result Code Format and Monitor Call Progress	37
2.2.23	ATZ Reset Default Configuration	38
2.2.24	AT&C Set DCD Function Mode	38
2.2.25	AT&D Set DTR Function Mode	39
2.2.26	AT&F Factory Defined Configuration	40
2.2.27	AT&K Flow Control Setting	40
2.2.28	AT&V Display Current Configuration	41
2.2.29	AT&W Store Active Profile	42
2.2.30	AT+GMI Request Manufacturer Identification	44
2.2.31	AT+GMM Request TA Model Identification	44
2.2.32	AT+GMR Request TA Revision Identification of Software Release	45
2.2.33	AT+GOI Request Global Object Idenitification	46
2.2.34	AT+GSN Request TA Serial Number Identification(IMEI)	46
2.2.35	AT+ICF Set TE-TA Control Character Framing	47
2.2.36	AT+IFC Set TE-TA Local Data Flow Control	48
2.2.37	AT+IPR Set TE-TA Fixed Local Rate	50
3	AT Commands According to 3GPP TS 27.007	52
3.1	Overview of AT Commands According to 3GPP TS 27.007	52
3.2	Detailed Description of AT Commands According to 3GPP TS 27.007	53
3.2.1	AT+CEER Extended Error Report	53
3.2.2	AT+CGMI Request Manufacturer Identification	56
3.2.3	AT+CGMM Request Model Identification	56
3.2.4	AT+CGMR Request TA Revision Identification of Software Release	57
3.2.5	AT+CGOI Request Global Object Identification	58
3.2.6	AT+CGSN Request Product Serial Number Identification	58
3.2.7	AT+CIMI Request International Mobile Subscriber Identity	59
3.2.8	AT+CLK Facility Lock	60
3.2.9	AT+CMEE Report Mobile Equipment Error	61
3.2.10	AT+COPS Operator Selection	62
3.2.11	AT+CPIN Enter PIN	64
3.2.12	AT+CPWD Change Password	65
3.2.13	AT+CREG Network Registration	66
3.2.14	AT+CRSM Restricted SIM Access	68
3.2.15	AT+CSCS Select TE Character Set	69
3.2.16	AT+CSQ Signal Quality Report	71
3.2.17	AT+CMUX Multiplexer Control	72
3.2.18	AT+CNUM Subscriber Number	74
3.2.19	AT+CPOL Preferred Operator List	75

3.2.20	AT+CFUN Set Phone Functionality	76
3.2.21	AT+CLKC Clock.....	77
3.2.22	AT+CSIM Generic SIM Access	79
3.2.23	AT+CBC Battery Charge.....	79
3.2.24	AT+CTZR Time Zone Reporting	80
3.2.25	AT+CTZU Automatic Time Update	81
3.2.26	AT+CPLS Selection of preferred PLMN List	82
3.2.27	AT+CPSMS Power Saving Mode Setting	83
3.2.28	AT+CCIOTOPT CloT optimization configuration.....	85
3.2.29	AT+CEDRXS eDRX Setting.....	86
3.2.30	AT+CEDRXRDP eDRX Read Dynamic Parameters.....	88
3.2.31	AT+CCHO Open UICC Logical Channel.....	89
3.2.32	AT+CCHC Close UICC Logical Channel	90
3.2.33	AT+CGLA Generic UICC Logical Channel Access	91
3.2.34	AT+CPINR Remaining PIN Retries.....	92
3.2.35	AT+CGATT GPRS/Packet Domain Attach or Detach.....	93
3.2.36	AT+CGDCONT Define PDP Context	94
3.2.37	AT+CGACT PDP Context Active or Deactive.....	96
3.2.38	AT+CGPADDR Show PDP Address.....	97
3.2.39	AT+IPCONFIG Show the Complete PDP Address	98
3.2.40	AT+CGEREP Packet Domain Event Reporting	99
3.2.41	AT+CGREG Network Registration Status	102
3.2.42	AT+CGCONTRDP PDP Context Read Dynamic Parameters.....	104
3.2.43	AT+CGPIAF Printing IP Address Format	106
3.2.44	AT+CGDEL Delete Non-Active PDP Contexts	108
3.2.45	AT+CGAUTH Define PDP Context Authentication Parameters.....	108
3.2.46	AT*MCGDEFCONT Set Default PSD Connection Settings.....	109
3.2.47	AT+CEREG EPS Network Registration Status	110
3.2.48	AT+CGDATA Enter Data State.....	113
3.2.49	AT*MGCOUNT GPRS/Packet Domian Packet Counters.....	113
4	AT Commands According to 3GPP TS 27.005.....	116
4.1	Overview of AT Commands According to 3GPP TS 27.005.....	116
4.2	Detailed Description of AT Commands According to 3GPP TS 27.005	116
4.2.1	AT+CMGD Delete SMS Message.....	116
4.2.2	AT+CMGF Select SMS Message Format	118
4.2.3	AT+CMGL List SMS Message from Preferred Store.....	119
4.2.4	AT+CMGR Read SMS Message	122
4.2.5	AT+CMGS Send SMS Message	125
4.2.6	AT+CMGW Write SMS Message to Memory	126
4.2.7	AT+CMSS Send SMS Message From Storage	127
4.2.8	AT+CMGC Send SMS Command.....	128
4.2.9	AT+CNMI New SMS Message Indications.....	129
4.2.10	AT+CPMS Preferred SMS Message Storage	131
4.2.11	AT+CSCA SMS Service Center Address	133
4.2.12	AT+CSDH Show SMS Text Mode Parameters	133

4.2.13	AT+CSMP Set SMS Text Mode Parameters	134
4.2.14	AT+CSMS Select Message Service	135
4.2.15	AT+CNMA New Message Acknowledgement to ME/TA.....	136
5	AT Commands Special for SIMCom	138
5.1	Overview of AT Commands for SIMCom	138
5.2	Detailed Description of AT Commands Special for SIMCom	139
5.2.1	AT+CPOWD Power Off.....	139
5.2.2	AT+CADC Read ADC	139
5.2.3	AT+CLTS Get Local Timestamp	140
5.2.4	AT+CBAND Get and Set Mobile Operation Band	140
5.2.5	AT+CBANDSL Set Modem NB-IOT Search Prefer Band List	141
5.2.6	AT+CENG Report Network State.....	142
5.2.7	AT+CCID Show ICCID.....	146
5.2.8	AT+EXUNSOL Enable or Disable Proprietary Unsolicited Indications	146
5.2.9	AT+GSV Display Product Identification Information.....	147
5.2.10	AT*CELLLOCK Set the List of ARFCN Which Needs to Be Locked	147
5.2.11	AT+SLEDS Set the Timer Period of Net Light.....	148
5.2.12	AT+CNETLIGHT Close the Net Light or Open it to shining.....	149
5.2.13	AT+CSMINS SIM Inserted Status Reporting	150
5.2.14	AT+CSPCHSC Set Scrambling Algorithm for NPDSCH	151
5.2.15	AT+CPSMSTATUS Enbale Deep Sleep Wakeup Indication	151
5.2.16	AT+CSCLK Configure Slow Clock	152
5.2.17	AT+CRESET Trigger WDT Reset	153
5.2.18	AT+CREVHEX Control the Data Output Format.....	153
5.2.19	AT+CDISAUPDN Control the Auto PDN Status.....	154
5.2.20	AT+CNWRCCFG Network Recovery Configure	154
5.2.21	AT+CURTC Control CCLK Show UTC Or RTC Time	155
5.2.22	AT+CHOMENW Display Home Network Information.....	156
5.2.23	AT+CBATCHK Set VBAT Checking Feature ON/OFF	157
5.2.24	AT+CGPIO Control the GPIO by PIN Index.....	157
5.2.25	AT*MEDRXCFG eDRX Configuration.....	158
5.2.26	AT+CNBIOTDT NB-IOT Data Type.....	160
5.2.27	AT+CNBIOTRAI NB-IOT Release Assistance Indication	161
5.2.28	AT+ICCID Show ICCID.....	162
5.2.29	AT+CTRJ Inquire the Value of Timer 3346	162
5.2.30	AT+NIDD Send NIDD(Non-IP Data Delivery)	163
5.2.31	AT+CFGRI Indicate RI When Using URC.....	163
6	AT Command for TCPIP Application	165
6.1	Overview of AT Commands for TCPIP Application	165
6.2	Detailed Description of AT Commands for TCPIP App;ication	165
6.2.1	AT+CSOC Creat a TCP/UDP Socket.....	165
6.2.2	AT+CSOCON Connect Socket to Remote Address and Port	166
6.2.3	AT+CSOB Bind Local Address and Local Port	167
6.2.4	AT+CSOLIS Open Listening Function of the Server.....	168
6.2.5	AT+RETENTION Rentention of Soctet Scene	168

6.2.6	AT+CSOSEND Send Data to Remote Via Socket	169
6.2.7	AT+CSODSEND Send Data to Remote Via Socket With Data Mode	170
6.2.8	AT+CSOCL Close Socket.....	170
6.2.9	AT+CSOSENDFLAG Set TCP Send Flag	171
6.2.10	AT+CSORCVFLAG Set Receive Flag	171
6.2.11	AT+CSOSTATUS Get Socket Status	172
6.2.12	AT+CSOACK Query Previous Connection Data Transmitting State	173
6.2.13	AT+CSOALIVE Set TCP Keepalive Parameters.....	173
6.2.14	AT+CSORXGET Get Data from Network Manually	174
6.2.15	+CSONMI Socket Message arrived indicator	175
6.2.16	+CSOERR Socket Error indicator.....	176
7	AT Commands for TCPIP Application to Compatible with SIM800 Serials	177
7.1	Overview of AT Commands	177
7.2	Detailed Descriptions of Commands	178
7.2.1	AT+CIPMUX Start Up Multi-IP Connection	178
7.2.2	AT+CIPSTART Start Up TCP or UDP Connection	179
7.2.3	AT+CIPSEND Send Data Through TCP or UDP Connection	181
7.2.4	AT+CIPQSEND Select Data Transmitting Mode.....	184
7.2.5	AT+CIPACK Query Previous Connection Data Transmitting State	185
7.2.6	AT+CIPCLOSE Close TCP or UDP Connection	185
7.2.7	AT+CIPSHUT Deactivate GPRS PDP Context.....	186
7.2.8	AT+CLPORT Set Local Port	187
7.2.9	AT+CSTT Start Task and Set APN,USER NAME,PASSWORD	189
7.2.10	AT+CIICR Bring Up Wireless Connection.....	190
7.2.11	AT+CIFSR Get Local IP Address	191
7.2.12	AT+CIPSTATUS Query Current Connection Status.....	192
7.2.13	AT+CDNSCFG Configure Domain Name Server.....	193
7.2.14	AT+CDNSGIP Query the IP Address of Given Domain Name	194
7.2.15	AT+CIPHEAD Add an IP Head at the Beginning of a Package Received.....	195
7.2.16	AT+CIPHEXS Show Data in Hex Mode of a Package Received	196
7.2.17	AT+CIFSREX Get Local IP Address	197
7.2.18	AT+CIPATS Set Auto Sending Time	198
7.2.19	AT+CIPSPRT Set Prompt of '>' When Module Sends Data.....	199
7.2.20	AT+CIPCSGP Set CSD or GPRS for Connection Mode	200
7.2.21	AT+CIPSRIP Show Remote IP Address and Port When Received Data	201
7.2.22	AT+CIPSHOWTP Display Transfer Protocol in IP Head When Received Data	202
7.2.23	AT+CIPUDPMODE UDP Extended Mode	204
7.2.24	AT+CIPRXGET Get Data from Network Manually	205
7.2.25	AT+CIPTKA Set TCP Keepalive Parameters	207
7.2.26	AT+CIPMODE Open Transparent Mode.....	209
7.2.27	AT+CIPCHAN Enter Transparent Mode.....	210
8	AT Commands for HTTP(S) Application	212
8.1	Overview of AT Commands for HTTP(S) Application.....	212
8.2	Detailed Descriptions of AT Commands for HTTP(S) Application.....	212
8.2.1	AT+CHTTPCREATE Create a HTTP Client Instance	212

8.2.2	AT+CHTTPCREATEEXT Create a HTTPS Client Instance by Multi Packages for a Long Size Command.....	214
8.2.3	AT+CHTTPCON Establish the HTTP(S) Connection.....	215
8.2.4	AT+CHTTPDISCON Close the HTTP(S) Connection	216
8.2.5	AT+CHTTPDESTROY Destroy the HTTP(S) Client Instance	217
8.2.6	AT+CHTTPSEND Send HTTP(S) Package.....	218
8.2.7	AT+CHTTPSENDEXT Send HTTP(S) Package by Multi Packages for a Long Size Command.....	220
8.2.8	AT+CHTTPPARA Set Parameter for AT Command of AT+CHTTPSEND	221
8.2.9	AT+CHTTPTOFS Download File to Module System.....	222
8.2.10	AT+CHTPCLRMULCRTBUF Clear Multi Create Buffer of AT+CHTTPCREATEEXT	
	223	
8.2.11	AT+CHTPCLRMULSNDUF Clear Multi Send Buffer of AT+CHTTPSENDEXT	224
8.2.12	AT+CHTPPRESUMESEND Set Resume Send Package or not when HTTP(S) Disconnected.....	224
8.2.13	+CHTTPNMIH Header of the Response from Host	225
8.2.14	+CHTTPNMIC Content of The Response from Host	226
8.2.15	+CHTTPERR HTTP(S) Client Connection Error Indicator	227
8.2.16	+CHTTPTOFS HTTP(S) Download Indicate from Host	228
8.2.17	+CHTTPTOFSOK HTTP(S) Download Finished Indicate	228
9	AT Commands for PING Application.....	229
9.1	Overview of AT Commands for PING Application	229
9.2	Detailed Descriptions of AT Commands for PING Application	229
9.2.1	AT+CIPPING Test IP Network Connectivity to A Remote Host	229
10	AT Commands for LwM2M Application	231
10.1	Overview of AT Commands for LwM2M Application	231
10.2	Detailed Descriptions of AT Commands for LwM2M Application	231
10.2.1	AT+CLMCONF Configure LwM2M Instance and Create the Connection	231
10.2.2	AT+CLMADDOBJ Add LwM2M Object.....	232
10.2.3	AT+CLMDELOBJ Delete LwM2M Object.....	233
10.2.4	AT+CLMREAD Read Notification and Command	233
10.2.5	AT+CLMWRITE Write Notification and Command.....	234
10.2.6	AT+CLMEXECUTE Execute Notification and Command.....	235
10.2.7	AT+CLMNOTIFY Notify Data Change	236
10.2.8	AT+CLMDEL Delete LwM2M Instance	236
10.2.9	+CLMOBSERVE Indicated an observe command.....	237
10.2.10	+CLMPARAMETER Indicated an observer's parameter.....	237
10.2.11	+CLMERR Indicated there are Some Errors	238
11	AT Commands for MQTT Application	239
11.1	Overview of AT Commands for MQTT Application.....	239
11.2	Detailed Descriptions of AT Commands for MQTT Application.....	239
11.2.1	AT+CMQNEW New MQTT	239
11.2.2	AT+CMQCON Send MQTT Connection Packet	240
11.2.3	AT+CMQDISCON Disconnect MQTT	242

11.2.4	AT+CMQSUB Send MQTT Subscribe Packet	243
11.2.5	AT+CMQUNSUB Send MQTT Unsubscribe Packet	243
11.2.6	AT+CMQPUB Send MQTT Publish Packet	244
11.2.7	+CMQDISCON MQTT Disconnect Indication	245
11.2.8	AT+CMQALICFG Configure Alibaba Cloud Parameters	245
11.2.9	AT+CMQALICON Send MQTT Connection Packet to Alibaba Cloud	246
11.2.10	AT+CMQTTNEW New MQTTS	247
11.2.11	AT+CMQTTNEWEXT NEW a MQTTS Instance by Multi Packages for a Long Size Command.....	248
11.2.12	AT+CMQAZURECFG Configure Microsoft Azure IoT Parameters	250
11.2.13	AT+CMQAZURECON Send MQTT Connection Packet to Azure IoT	251
11.2.14	AT+CMQTSYNC Configure MQTT Synchronization Mode.....	252
12	AT Commands for CoAP Application	253
12.1	Overview of AT Commands for CoAP Application	253
12.2	Detailed Descriptions of AT Commands for CoAP Application.....	253
12.2.1	AT+CCOAPNEW Create a CoAP Client Instance.....	253
12.2.2	AT+CCOAPSEND Send CoAP Data	254
12.2.3	AT+CCOAPCSEND Send CoAP Data.....	255
12.2.4	AT+CCOAPDEL Destroy the CoAP Client Instance	257
12.2.5	+CCOAPNMI Content from CoAP server	258
13	AT Commands for SNTP Application	259
13.1	Overview of AT Commands for SNTP Application	259
13.2	Detailed Descriptions of AT Commands for SNTP Application	259
13.2.1	AT+CSNTPSTART Start to Query Network Time.....	259
13.2.2	+CSNTP Received Network Time.....	260
14	AT Commands for TLS Application.....	261
14.1	Overview of AT Commands for TLS Application	261
14.2	Detailed Descriptions of AT Commands for TLS Application	261
14.2.1	AT+CTLSCFG Configure TLS Parameters	261
14.2.2	AT+CTLSCONN Create a TLS Connection	262
14.2.3	AT+CTLSCLOSE Close a TLS Connection	263
14.2.4	AT+CTLSEND Send Data	263
14.2.5	AT+TLSRECV Receive Data.....	264
14.2.6	AT+CSETCA Set the Certificate Parameters	264
14.2.7	AT+CSETCIPHER Set the Encryption Suite Used by the TLS Handshake	265
15	AT Commands for OneNet Application.....	267
15.1	Overview of AT Commands for OneNet Application	267
15.2	Detailed Descriptions of AT Commands OneNet Application.....	267
15.2.1	AT+MIPLCREATE Create a OneNet Instance	268
15.2.2	AT+MIPLCREATEEXT Another Method to Create a OneNet Instance.....	269
15.2.3	AT+MIPLDELETE Delete a OneNet Instance.....	270
15.2.4	AT+MIPLOPEN Register to OneNet	271
15.2.5	AT+MIPLCLOSE Deregister to OneNet	272
15.2.6	AT+MIPLADDOBJ Add an Object.....	273

15.2.7	AT+MIPLDELOBJ Delete an Object	274
15.2.8	AT+MIPLUPDATE Update Registration	275
15.2.9	AT+MIPLREADRSP Read Response from User	275
15.2.10	AT+MIPLWRITERSP Write Response from User	277
15.2.11	AT+MIPLEXECUTERSP Execute Response from User	278
15.2.12	AT+MIPLOBSERVERSP Observe Response from User	279
15.2.13	AT+MIPLDISCOVERRSP Discover Response from User	280
15.2.14	AT+MIPLPARAMETERRSP Set Parameter from User.....	281
15.2.15	AT+MIPLNOTIFY Notify Data Value Change from User.....	282
15.2.16	AT+MIPLVER Read Version	283
15.2.17	+MIPLREAD Read Request to User.....	284
15.2.18	+MIPLWRITE Write Request to User.....	284
15.2.19	+MIPLEXECUTE Execute Request to User	285
15.2.20	+MIPLOBSERVE Observe Request to User	285
15.2.21	+MIPLDISCOVER Discover request to User	286
15.2.22	+MIPLPARAMETER Set Parameter Request to User	286
15.2.23	+MIPLEVENT Event Indication to User	287
16	AT Commands for NVRAM Application	288
16.1	Overview of AT Commands for NVRAM Application.....	288
16.2	Detailed Descriptions of AT Commands for NVRAM Application.....	288
16.2.1	AT+CNVMR Read Data from NVRAM	288
16.2.2	AT+CNVMW Write Data to NVRAM.....	289
16.2.3	AT+CNVMIVD Invalidate a Specific Data Item in NVRAM.....	290
16.2.4	AT+CNVMGET Get all Customer Data Item IDs from NVRAM.....	291
17	AT Commands for CT IOT Platform	292
17.1	Overview of AT Commands for CT IOT Platform	292
17.2	Detailed Descriptions of AT Commands for CT IOT Platform	292
17.2.1	AT+CM2MCLINEW Register to CT IOT Platform.....	292
17.2.2	AT+CM2MCLISEND Send Data to CT IOT Platform	293
17.2.3	AT+CM2MCLIDEL Dereister to CT IOT Platform	293
17.2.4	AT+CM2MCLIGET Get the Latest 6 Received Data	294
17.2.5	AT+CCTUPNUM Set Update Registration Retry Times	294
17.2.6	AT+CCTLASTSTAT Query the Latest Status of IoT	295
17.2.7	+CM2MCLI CT IOT Client Notification	296
17.2.8	+CM2MCLIRECV Receive data from CT IOT Platform	296
18	AT Commands for DM Application.....	298
18.1	Overview of AT Commands for DM Application	298
18.2	Detailed Descriptions of AT Commands for DM Application	298
18.2.1	AT+DMCONFIGEXT Configure parameters for DM.....	298
18.2.2	AT+DMSET Set DM State	299
19	AT Commands for FOTA Application	301
19.1	Overview of AT Commands for FOTA Application.....	301
19.2	Detailed Descriptions of AT Commands for FOTA Application.....	301
19.2.1	AT+CFOTA FOTA Operation	301

19.2.2	AT+CFLE	Flash Erase	302
19.2.3	AT+CFLW	Flash Write	303
19.2.4	AT+CFLR	Flash Read	304
20	AT Commands for SIM Toolkit Application	305
20.1		Overview of AT Commands for SIM Toolkit Application	305
20.2		Detailed Descriptions of AT Commands for SIM Toolkit Application	305
20.2.1	AT*MSTLOCK	APP Registering for SIM Toolkit (and locking to a channel)	305
20.2.2	AT*MSTPD	SIM Toolkit Terminal Profile Download.....	306
20.2.3	AT*MSTMODE	Setting format for SIM Toolkit Output	307
20.2.4	AT*MSTICREC	Obtaining Icon records	308
20.2.5	AT*MSTICIMG	Obtaining Icon image	309
20.2.6	AT*MSTGC	APP request for parameters associated with a previously reported Proactive Command.....	309
20.2.7	AT*MSTCR	APP Informing PS of Response to Proactive Command	310
20.2.8	AT*MSTMS	Menu Selection by User	310
20.2.9	AT*MSTEV	APP specific monitored event occurrence	311
20.2.10	*MSTC:<cmdId>	Proactive Command Indication	313
21	Supported Unsolicited Result Codes and Error Codes	315
21.1		Summary of CME ERROR Codes	315
21.1.1	CME Error Codes Related to mobile equipment or network.	315
21.1.2	CME Error Codes related to PSD and Packet Domain	316
21.1.3	CME Error Codes related to select TE character set.....	320
21.1.4	CME Error Codes related to preferred operator list.....	320
21.1.5	CME Error Codes related to Restricted/Generic SIM Access.....	321
21.1.6	CME Error Codes related to Miscellaneous Proprietary	321
21.1.7	CME Error Codes related to report Network State	322
21.1.8	CME Errors Codes related to SIM Toolkit Operations	322
21.2		Summary of CMS ERROR Codes	323
21.3		Summary of CIS ERROR Codes	325
21.4		Summary of TLS ERROR Codes	325
21.5		Summary of Unsolicited Result Codes	327
22	ATC Differences among SIM7020 Series	329
22.1	AT+CSCLK	329
22.2	AT+CEER	329
22.3	AT+CPLS	329
22.4	AT*MEDRXCFG	329
22.5	OneNet	329

1 Introduction

1.1 Scope of the document

This document presents the AT Command Set for SIMCom SIM7020 Series, including SIM7020C, SIM7020E, SIM7020G, SIM7030, SIM7060, SIM7060C, SIM7060G and SIM7060R.

1.2 Related documents

You can visit the SIMCom Website using the following link:

<http://www.simcom.com>

1.3 Conventions and abbreviations

In this document, the GSM engines are referred to as following term:

ME (Mobile Equipment);

MS (Mobile Station);

TA (Terminal Adapter);

DCE (Data Communication Equipment) or facsimile DCE (FAX modem, FAX board);

In application, controlling device controls the GSM engine by sending AT Command via its serial interface.

The controlling device at the other end of the serial line is referred to as following term:

TE (Terminal Equipment);

DTE (Data Terminal Equipment) or plainly "the application" which is running on an embedded system;

1.4 AT Command syntax

The "AT" or "at" or "aT" or "At" prefix must be set at the beginning of each Command line. To terminate a Command line enter <CR>.

Commands are usually followed by a response that includes "<CR><LF><response><CR><LF>"

Throughout this document, only the responses are presented,<CR><LF> are omitted intentionally.

The AT Command set implemented by SIM7020 Series is a combination of 3GPP TS 27.005, 3GPP TS 27.007 and ITU-T recommendation V.25ter and the AT commands developed by SIMCom.

NOTE

Only enter AT Command through serial port after SIM7020 Series is powered on and Unsolicited Result Code "RDY" is received from serial port. If auto-bauding is enabled, the Unsolicited Result Codes "RDY" and so on are not indicated when you start up the ME, and the "AT" prefix, or "at" prefix must be set at the beginning of each command line.

All these AT commands can be split into three categories syntactically: "**basic**", "**S parameter**", and "**extended**". These are as follows:

1.4.1 Basic syntax

These AT commands have the format of "**AT<x><n>**", or "**AT&<x><n>**", where "<x>" is the Command, and "<n>" is/are the argument(s) for that Command. An example of this is "**ATE<n>**", which tells the DCE whether received characters should be echoed back to the DTE according to the value of "<n>". "<n>" is optional and a default will be used if missing.

1.4.2 S Parameter syntax

These AT commands have the format of "**ATS<n>=<m>**", where "<n>" is the index of the **S** register to set, and "<m>" is the value to assign to it. "<m>" is optional; if it is missing, then a default value is assigned.

1.4.3 Extended Syntax

These commands can operate in several modes, as in the following table:

Table 1: Types of AT commands and responses

Test Command AT+<x>=?	The mobile equipment returns the list of parameters and value ranges set with the corresponding Write Command or by internal processes.
Read Command AT+<x>?	This command returns the currently set value of the parameter or parameters.
Write Command AT+<x>=<...>	This command sets the user-definable parameter values.

Execution Command
AT+<x>

The execution command reads non-variable parameters affected by internal processes in the GSM engine.

1.4.4 Combining AT commands on the same Command line

You can enter several AT commands on the same line. In this case, you do not need to type the "AT" or "at" prefix before every command. Instead, you only need type "AT" or "at" the beginning of the command line. Please note to use a semicolon as the command delimiter after an extended command; in basic syntax or S parameter syntax, the semicolon need not enter, for example: ATE1Q0S0=1S3=13V1X4;+IFC=0,0;+IPR=115200.

The Command line buffer can accept a maximum of 2048 characters (counted from the first command without "AT" or "at" prefix). If the characters entered exceeded this number then none of the Command will executed and TA will return "ERROR".

1.4.5 Entering successive AT commands on separate lines

When you need to enter a series of AT commands on separate lines, please Note that you need to wait the final response (for example OK, CME error, CMS error) of last AT Command you entered before you enter the next AT Command.

1.5 Supported character sets

The SIM7020 Series AT Command interface defaults to the **IRA** character set. The SIM7020 Series supports the following character sets:

GSM format

UCS2

IRA

The character set can be set and interrogated using the "AT+CSCS" Command (3GPP TS 27.007). The character set is defined in GSM specification 3GPP TS 27.005.

The character set affects transmission and reception of SMS and SMS Cell Broadcast messages, the entry and display of phone book entries text field and SIM Application Toolkit alpha strings.

1.6 Flow control

Flow control is very important for correct communication between the GSM engine and DTE. For in the case such as a data or fax call, the sending device is transferring data faster than the receiving side is ready

to accept. When the receiving buffer reaches its capacity, the receiving device should be capable to cause the sending device to pause until it catches up.

There are basically two approaches to achieve data flow control: software flow control and hardware flow control. SIM7020 Series support both two kinds of flow control.

In Multiplex mode, it is recommended to use the hardware flow control.

1.6.1 Software flow control (XON/XOFF flow control)

Software flow control sends different characters to stop (XOFF, decimal 19) and resume (XON, decimal 17) data flow. It is quite useful in some applications that only use three wires on the serial interface.

The default flow control approach of SIM7020 Series is hardware flow control (RTS/CTS flow control), to enable software flow control in the DTE interface and within GSM engine, type the following AT Command:
AT+IFC=1,1

Ensure that any communications software package (e.g. Hyper terminal) uses software flow control.

NOTE

Software Flow control should not be used for data calls where binary data will be transmitted or received (e.g. TCP/IP) as the DTE interface may interpret binary data as flow control characters.

1.6.2 Hardware flow control (RTS/CTS flow control)

Hardware flow control achieves the data flow control by controlling the RTS/CTS line. When the data transfer should be suspended, the CTS line is set inactive until the transfer from the receiving buffer has completed. When the receiving buffer is ok to receive more data, CTS goes active once again.

To achieve hardware flow control, ensure that the RTS/CTS lines are present on your application platform.

1.7 Definitions

1.7.1 Parameter Saving Mode

For the purposes of the present document, the following syntactical definitions apply:

- **NO_SAVE:** The parameter of the current AT command will be lost if module is rebooted or current AT

command doesn't have parameter.

- **AUTO_SAVE:** The parameter of the current AT command will be kept in NVRAM automatically and take in effect immediately, and it won't be lost if module is rebooted.
- **AUTO_SAVE_REBOOT:** The parameter of the current AT command will be kept in NVRAM automatically and take in effect after reboot, and it won't be lost if module is rebooted.
- **AT&W_SAVE:** The parameter of the current AT command will be kept in NVRAM by sending the command of "AT&W".
- -: "-" means this AT command doesn't care the parameter saving mode.

1.7.2 Max Response Time

Max response time is estimated maximum time to get response, the unit is seconds.

"-" means this AT command does not care the response time.

2 AT Commands According to V.25TER

2.1 Overview of AT Commands According to V.25TER

Command	Description
ATE	Set command echo mode
ATI	Display product identification information
ATL	Set monitor speaker loudness
ATM	Set monitor speaker mode
ATN1	Some PC modem driver initial setting to handshake at highest speed larger than S37
ATO	Switch from command mode to data mode
ATQ	Set result code presentation mode
ATS0	Set number of rings before automatically answering the call
ATS1	Ring counter
ATS2	Set escape sequence character
ATS3	Set command line termination character
ATS4	Set response formatting character
ATS5	Set command line editing character
ATS6	Pause before blind dialling
ATS7	Set number of seconds to wait for connection completion
ATS8	Set number of seconds to wait for comma dial modifier encountered in dial string of D command
ATS10	Set disconnect delay after indicating the absence of data carrier
ATS12	Set escape code guard time
ATS25	Set DTR change time
ATS95	Some PC modem driver initial setting to enable extended result codes
ATV	TA response format
ATX	Set connect result code format and monitor call progress
ATZ	Reset default configuration
AT&C	Set DCD function mode
AT&D	Set DTR function mode
AT&F	Factory defined configuration
AT&K	Flow control setting

AT&V	Display current configuration
AT&W	Store Active Profile
AT+GMI	Request manufacturer identification
AT+GMM	Request TA model identification
AT+GMR	Request TA revision identification of software release
AT+GOI	Request global object identification
AT+GSN	Request TA serial number identification (IMEI)
AT+ICF	Set TE-TA control character framing
AT+IFC	Set TE-TA local data flow control
AT+IPR	Set TE-TA fixed local rate

2.2 Detailed Description of AT Commands According to V.25TER

2.2.1 ATE Set Command Echo Mode

ATE Set Command Echo Mode	
Execution Command	Response
ATE<value>	This setting determines whether or not the TA echoes characters received from TE during Command state.
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<value>	0 Echo mode off
	1 Echo mode on

Example

```
ATE0
OK
```

2.2.2 ATI Display Product Identification Information

ATI Display Product Identification Information

Execution Command ATI	Response TA issues product information text.
	Example: SIM7020 R1752
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Example

ATI
SIM7020 R1752

OK

2.2.3 ATL Set Monitor Speaker Loudness

ATL Set Monitor Speaker Loudness

Execution Command ATL<value>	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<value>	0..3 Volume
----------------------	-------------

Example

ATL0
OK

NOTE

- No effect in GSM

2.2.4 ATM Set Monitor Speaker Mode

ATM Set Monitor Speaker Mode

Execution Command	Response
ATM<value>	OK
	Parameters
	<value> 0..2 Mode
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Example**ATM0****OK****NOTE**

- No effect in GSM

2.2.5 ATN1 Some PC Modem Driver Initial Setting to Handshake at Highest Speed Larger Than S37

ATN1 Some PC Modem Driver Initial Setting to Handshake at Highest Speed Larger Than S37

Execution Command	Response
ATN1	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Example

ATN1

OK

2.2.6 ATO Switch from Command Mode to Data Mode

ATO Switch from Command Mode to Data Mode

Execution Command	Response
ATO[n]	TA resumes the connection and switches back from command mode to data mode.
	CONNECT If connection is not successfully resumed
	ERROR else
	TA returns to data mode from command mode CONNECT <text> Note: <text> only if parameter setting ATX>0
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0 Switch from command mode to data mode
-----	---

Example

ATO

CONNECT 150000000

2.2.7 ATQ Set Result Code Presentation Mode

ATQ Set Result Code Presentation Mode

Execution Command	Response
ATQ<n>	This parameter setting determines whether or not the TA transmits any

	result code to the TE. Information text transmitted in response is not affected by this setting.
	If <n>=0:
	OK
	If <n>=1:
	(none)
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0 TA transmit result code 1 Result codes are suppressed and not transmitted
-----	--

Example

ATQ1
OK

NOTE

- This command only affects V.250 AT commands and not all other AT commands in this specification (either 3GPP or MediaTek proprietary).

2.2.8 ATS0 Set Number of Rings before Automatically Answering the call

ATS0 Set Number of Rings before Automatically Answering the call	
Read Command ATS0?	Response <n> OK
Write Command ATS0=<n>	Response This parameter setting determines the number of rings before auto-answer. OK or ERROR
Parameter Saving Mode	-

Max Response Time	-
Reference	

Defined Values

<n>	0 Automatic answering is disabling. 1-255 Number of rings the modem will wait for before answering the phone if a ring is detected.
-----	--

Example

```
ATS0?  
0  
  
OK  
ATS0=3  
OK
```

NOTE

- If <n> is set too high, the calling party may hang up before the call can be answered automatically.
- If using cmux port, ATH and AT+CHUP can hang up the call (automatically answering) only in the CMUX channel 0.
- If using dual-physical serial port, ATH and AT+CHUP can hang up the call (automatically answering) only in UART1.

2.2.9 ATS1 Ring Counter

ATS1 Ring Counter	
Read Command ATS1?	Response <n> OK
Write Command ATS1=<n>	Response This command will not alert the RING counter, but simply display OK or ERROR

Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	The number of " RING " strings sent to the TE as a result of receiving an incoming call. 0-255
-----	--

Example

ATS1?

0

OK

ATS1=3

OK

NOTE

- If "**RING**" is not displayed on a particular channel due to other settings (such as suppression of all unsolicited events (ATQ)) then this value should not be incremented. This value is reset to 0 when receiving a new incoming call. Note that this command should also be made channel specific as with other ATS<x> commands.

2.2.10 ATS2 Set Escape Sequence Character

ATS2 Set Escape Sequence Character	
Read Command ATS2?	Response <n> OK
Write Command ATS2=<n>	Response This parameter setting determines the character recognized by the TA to indicate the escape sequence. OK or ERROR

Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference V.25ter	

Defined Values

<n>	0-43-255 escape sequence character Note: default 43='+'
-----	--

Example

ATS2?	
43	
OK	
ATS2=43	
OK	

2.2.11 ATS3 Set Command Line Termination Character

ATS3 Set Command Line Termination Character	
Read Command ATS3?	Response <n> OK
Write Command ATS3=<n>	Response This parameter setting determines the character recognized by TA to terminate an incoming command line. The TA also returns this character in output. OK or ERROR
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<n>	0-13-127 Command line termination character
-----	---

Example

```
ATS3?  
13  
  
OK  
ATS3=13  
OK
```

NOTE

- Default 13=CR. It only supports default value.

2.2.12 ATS4 Set Response Formatting

ATS4 Set Response Formatting

Read Command	Response <n> OK
Write Command	Response This parameter setting determines the character generated by the TA for result code and information text. OK or ERROR
Parameter Saving Mode	-
Max Response Time	-
Reference	Note

Defined Values

<n>	0-10-127 Response formatting character
-----	--

Example

ATS4?

10

OK

ATS4=10

OK

NOTE

- Default 10=LF. It only supports default value.

2.2.13 ATS5 Set Command Line Editing Character

ATS5 Set Command Line Editing Character

Read Command	Response
ATS5?	<n>
	OK
Write Command	Response
ATS5=<n>	This parameter setting determines the character recognized by TA as a request to delete from the command line the immediately preceding character. OK or ERROR
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<n>	0-8-127 Response formatting character
-----	---------------------------------------

Example

ATS5?

8

OK
ATS5=8
OK

NOTE

- Default 8=Backspace

2.2.14 ATS6 Pause Before Blind Dialling

ATS6 Pause Before Blind Dialling

Read Command ATS6?	Response <n> OK
Write Command ATS6=<n>	Response OK or ERROR
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0-2-10 Time
-----	-------------

Example

ATS6?
2

OK
ATS6=2
OK

NOTE

- No effect in GSM

2.2.15 ATS7 Set Number of Seconds to Wait for Connection Completion

ATS7 Set Number of Seconds to Wait for Connection Completion

Read Command ATS7?	Response <n> OK
Write Command ATS7=<n>	Response This parameter setting determines the amount of time to wait for the connection completion in case of answering or originating a call. OK or ERROR
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	1-60-255 Number of seconds to wait for connection completion
------------------	--

Example

```
ATS7?
60

OK
ATS7=60
OK
```

NOTE

- If called party has specified a high value for ATS0=<n>, call setup may fail. The correlation between ATS7 and ATS0 is important

- Example: Call may fail if ATS7=30 and ATS0=20.
- ATS7 is only applicable to data call.

2.2.16 ATS8 Set Number of Seconds to Wait for Comma Dial Modifier Encountered in Dial String of D Command

ATS8 Set Number of Seconds to Wait for Comma Dial Modifier Encountered in Dial String of D Command

Read Command ATS8?	Response <n> OK
Write Command ATS8=<n>	Response OK or ERROR
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<n>	0 no pause when comma encountered in dial string 1-2-255 The value of this register determines how long the modem should pause when it sees a comma in the dialing string.
-----	---

Example

ATS8?

2

OK

ATS8=2

OK

NOTE

- No effect in GSM

2.2.17 ATS10 Set Disconnect Delay after indicating the Absence of Data Carrier

ATS10 Set Disconnect Delay after indicating the Absence of Data Carrier

Read Command ATS10?	Response <n> OK
Write Command ATS10=<n>	Response This parameter setting determines the amount of time that the TA will remain connected in absence of data carrier. If the data carrier is once more detected before disconnecting, the TA remains connected. OK or ERROR
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<n>	1-15-254 Number of tenths seconds of delay
------------------	--

Example

```
ATS10?  
15  
  
OK  
ATS10=15  
OK
```

NOTE

- This command is not used, as there have been issues with in-band DCD dropping unexpectedly for CSD calls on some networks.

2.2.18 ATS12 Set Escape Code Guard Time

This command sets the escape code guard time in fiftieths of a second. The escape guard time is used to measure when to detect the +++ escape sequence has been entered by the PC in order to drop out of data mode back to AT command mode.

The guard time determines the time that forms a guard period before and after three escape sequence characters. In order to distinguish an escape sequence from just three escape sequence characters in the data stream there is timing associated to the three escape sequence characters of an escape sequence. The time between the last byte of the data stream and the first escape sequence character must be at least the guard time and the time between each escape sequence character of the escape sequence must be less than the guard time and no other byte is received after the third escape sequence character for the time of the guard time. If an escape sequence is detected, the OK result code will be sent to the DTE. Otherwise, the DCE will stay in data mode.

For example: "<Guard time>+++<Guard time>"

ATS12 Set Escape Code Guard Time

Read Command

ATS12?

Response

<n>

OK

NB: <n> is in 3 decimal digits format (e.g. Default value is given as 050).

If error is related to wrong AT syntax:

+CME ERROR: <err>

Write Command

ATS12=<n>

Response

OK

or

ERROR

Parameter Saving Mode

AT&W_SAVE

Max Response Time

-

Reference

Defined Values

<n>	0-50-255 Number of 20 ms.
------------------	---------------------------

Example

ATS12?

50

```
OK
ATS12=50
OK
```

2.2.19 ATS25 Set DTR Change Time

This command sets the S-register 25 Detect DTR change time that contain the threshold for noticing a change in DTR. This time permits to the modem to ignore DTR before taking action specified by &Dn (See AT&D Circuit 108 behavior).

The value unit is in 1/100 seconds. Default value is set to 5 (50ms delay after a DTR drop before the modem acts on it).

ATS25 Set DTR Change Time

Read Command

ATS25?

Response

<n>

OK

NB: <n> is in 3 decimal digits format (e.g. Default value is given as 000).

If error is related to wrong AT syntax:

+CME ERROR: <err>

Write Command

ATS25=<n>

Response

OK

or

ERROR

Parameters

<n> 0-5-255 Number of 10 ms.

Parameter Saving Mode

AT&W_SAVE

Max Response Time

-

Reference

Defined Values

<n>	0-5-255 Number of 10 ms.
-----	--------------------------

Example

```
ATS25?
5
OK
ATS25=5
```

OK

2.2.20 ATS95 Some PC Modem Driver Initial Setting to Enable Extended Result Codes

ATS25 Some PC Modem Driver Initial Setting to Enable Extended Result Codes

Read Command ATS95?	Response <n> OK
Write Command ATS95=<n>	Response OK Some standard PC modem drivers will send this AT command to initialize the setting, but it is meaningless in the 3GPP standard. So we just return "OK" and no effect for the setting.
	Parameters <n> 0-255 Meaningless for the GSM, and GPRS/Packet Domain setting.
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0-255 Meaningless for the GSM, and GPRS/Packet Domain setting.
-----	--

Example

```
ATS95?
000

OK
ATS95=100
OK
```

2.2.21 ATV TA Response Format

ATV TA Response Format

Execution Command ATV<value>	Response This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses. When <value>=0 0 When <value>=1 OK
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

ATV1	ATV0	Description
OK	0	Acknowledges execution of a Command
CONNECT	1	A connection has been established; the DCE is moving from Command state to online data state
RING	2	The DCE has detected an incoming call signal from network
NO CARRIER	3	The connection has been terminated or the attempt to establish a connection failed
ERROR	4	Command not recognized, Command line maximum length exceeded, parameter value invalid, or other problem with processing the Command line
NO DIALTONE	6	No dial tone detected
BUSY	7	Engaged (busy) signal detected
NO ANSWER	8	"@" (Wait for Quiet Answer) dial modifier was used, but remote ringing followed by five seconds of silence was not detected before expiration of the connection timer (S7)
PROCEEDING	9	An AT command is being processed
CONNECT <text>	Manufacturer-specific	Same as CONNECT, but includes manufacturer-specific text that may specify DTE speed, line speed, error control, data compression, or other status

Defined Values

<value>	0 Information response: <text><CR><LF> Short result code format: <numeric code><CR> 1 Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF> The result codes, their numeric equivalents and brief descriptions of the use of each are listed in the following table.
---------	---

Example

ATV0

0

ATV1

OK

2.2.22 ATX Set CONNECT Result Code Format and Monitor Call Progress

ATV Set CONNECT Result Code Format and Monitor Call Progress

Execution Command	Response
ATX<value>	This parameter setting determines whether or not the TA detected the presence of dial tone and busy signal and whether or not TA transmits particular result codes. OK or ERROR
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	Note

Defined Values

<value>	0 CONNECT result code only returned, dial tone and busy detection are both disabled. 1 CONNECT<text> result code only returned, dial tone and busy detection are both disabled. 2 CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled. 3 CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled. 4 CONNECT<text> result code returned, dial tone and busy detection are both enabled.
---------	---

Example

ATX1

OK

ATX2

OK

2.2.23 ATZ Reset Default Configuration

ATZ Reset Default Configuration

Execution Command	Response
ATX[<value>]	TA sets all current parameters to the user defined profile.

OK

or

ERROR

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

Defined Values

<value>	<u>0</u> Restore profile 0
----------------------	----------------------------

Example

ATZ0

OK

2.2.24 AT&C Set DCD Function Mode

AT&C Set DCD Function Mode

Execution Command	Response
AT&C<value>	This parameter determines how the state of circuit 109 (DCD) relates to the detection of received line signal from the distant end.

OK

or

ERROR

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

V.25ter

Defined Values

<value>	0 DCD line is always ON 1 DCD line is ON only in the presence of data carrier
----------------------	--

Example

AT&C1

OK

AT&C0

OK

2.2.25 AT&D Set DTR Function Mode

AT&D Set DTR Function Mode

Execution Command	Response
AT&D<value>	This parameter determines how the TA responds when circuit 108/2 (DTR) is changed from the ON to the OFF condition during data mode. OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<values>	0 TA ignores status on DTR. 1 ON->OFF on DTR: Change to Command mode with remaining the connected call. 2 ON->OFF on DTR: Disconnect call, change to Command mode. During state DTR=OFF is auto-answer off.
-----------------------	---

Example

AT&D1

OK

AT&D0

OK

2.2.26 AT&F Factory Defined Configuration

AT&F Factory Defined Configuration

Execution Command	Response
AT&F[<value>]	TA sets all current parameters to the manufacturer defined profile. OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<values>	<u>0</u> Set all TA parameters to manufacturer defaults.
----------	--

Example

AT&F0**OK**

2.2.27 AT&K Flow Control Setting

AT&K Flow Control Setting

Execution Command	Response
AT&K[<value>]	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<value>	0 No flow control 3 RTS /CTS flow control (hardware) 4 XON/XOFF flow control (software)
----------------------	---

Example

AT&K0

OK

NOTE

This command does not store anything in the profile data because it sets the AT+IFC settings when used:

- AT&K0 is equivalent of entering AT+IFC=0,0
- AT&K3 is equivalent of entering AT+IFC=2,2
- AT&K4 is equivalent of entering AT+IFC=1,1

2.2.28 AT&V Display Current Configuration

AT&V Display Current Configuration

Execution Command	Response
AT&V[<n>]	TA returns the current parameter setting. <current configurations text>
	OK
	or
	ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0 Responses in numeric format
------------------	-------------------------------

Example

AT&V**ACTIVE PROFILE**

E: 1

L: 0

M: 0

Q: 0

V: 1

X: 4

S0: 0

S1: 0

S2: 43

S3: 13

S4: 10

S5: 8

S6: 2

S7: 60

S8: 2

S10: 15

S12: 50

S25: 5

+CR: 0

+CMEE: 0

+IFC: 0,0

+ICF: 3,3

+CSCS: "IRA"

+IPR: 0

&C: 1

&D: 2

+CGEREP: 0

+CEER: 0

+CGPIAF: 0,0,0,0

+CPSMSTATUS: 1

+CMGF: 0

+CSDH: 0

+CSMINS: 0

+CMUX: 0,0,0,31,10,3,30,10,2

OK

2.2.29 AT&W Store Active Profile**AT&W Store Active Profile**

Execution Command

AT&W[<n>]

Response

TA stores the current parameter setting in the user defined profile.

	<current configurations text> OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Parameter stored by &W

Command	Parameter name	Displayed by &v
ATS0	<num>	Y
ATS3	<char>	Y
ATS4	<char>	Y
ATS5	<char>	Y
ATS6	<short>	Y
ATS7	<time>	Y
ATS8	<time>	Y
ATS10	<time>	Y
ATV	<format>	Y
ATE	<echo>	Y
ATQ	<result>	Y
ATX	<result>	Y
AT&C	<behavior>	Y
AT&D	<behavior>	Y
AT+CREG	<n>	Y
AT+CGREG	<n>	Y
AT+CMEE	<n>	Y
AT+CSCS	<chset>	Y
AT+CSMINS	<n>	Y
AT+EXUNSOL	<exunsol>	

Defined Values

<n>	0 Store the current configuration in profile 0
-----	--

Example

AT&W
OK

NOTE

- The user defined profile is stored in non volatile memory.

2.2.30 AT+GMI Request Manufacturer Identification

AT+GMI Request Manufacturer Identification

Test Command AT+GMI=?	Response OK
Execution Command AT+GMI	Response TA reports one or more lines of information text which permit the user to identify the manufacturer. SIMCOM_Ltd
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

Example

AT+GMI
SIMCOM_Ltd

OK

2.2.31 AT+GMM Request TA Model Identification

AT+GMM Request TA Model Identification

Test Command AT+GMM=?	Response OK
Execution Command AT+GMM	Response TA reports one or more lines of information text which permit the user to identify the specific model of device. Model

	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

Defined Values

<model>	Product model identification text
----------------------	-----------------------------------

Example

AT+GMM
SIM7020C
OK

2.2.32 AT+GMR Request TA Revision Identification of Software Release

AT+GMR Request TA Revision Identification of Software Release	
Test Command AT+GMR=?	Response OK
Execution Command AT+GMR	Response TA reports one or more lines of information text which permit the user to identify the revision of software release. <revision>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

Defined Values

< revision >	Revision of software release
---------------------------	------------------------------

Example

AT+GMR

1752B01V01SIM7020C

OK

2.2.33 AT+GOI Request Global Object Identification

AT+GOI Request Global Object Identification

Test Command	Response
AT+GOI=?	OK
Execution Command	Response
AT+GOI	TA reports one or more lines of information text which permit the user to identify the device, based on the ISO system for registering unique object identifiers. <Object Id>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

Defined Values

< Object Id >	Identifier of device type see X.208, 209 for the format of <Object Id>
----------------------------	--

Example

AT+GOI

SIM7020C

OK

2.2.34 AT+GSN Request TA Serial Number Identification(IMEI)

AT+GSN Request TA Serial Number Identification(IMEI)

Test Command	Response
--------------	----------

AT+GSN=?	OK
Execution Command	Response
AT+GSN	TA reports the IMEI (international mobile equipment identifier) number in information text which permit the user to identify the individual ME device.
	<sn>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<sn>	IMEI of the telephone(International Mobile station Equipment Identity)
-------------------	--

Example

```
AT+GSN
0000000000000000
```

```
OK
```

NOTE

- The serial number (IMEI) is varied by individual ME device.

2.2.35 AT+ICF Set TE-TA Control Character Framing

AT+ICF Set TE-TA Control Character Framing

Test Command	Response
AT+ICF=?	+ICF: (list of supported <format>s),(list of supported <parity>s)
	OK
Read Command	Response
AT+ICF?	+ICF: <format>,<parity>
	OK

Write Command AT+ICF=<format>,[<parity>]]	Response This parameter setting determines the serial interface character framing format and parity received by TA from TE. OK
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<format>	1 8 data 0 parity 2 stop 2 8 data 1 parity 1 stop <u>3</u> 8 data 0 parity 1 stop 4 7 data 0 parity 2 stop 5 7 data 1 parity 1 stop 6 7 data 0 parity 1 stop
<parity>	0 odd 1 even 2 mark(1) 3 space (0)

Example

```
AT+ICF?  
+ICF:3,3  
  
OK  
AT+ICF=3,3  
OK
```

NOTE

- The Command is applied for Command state;
- In <format> parameter, "0 parity" means no parity;
- The <parity> field is ignored if the <format> field specifies no parity and string "+ICF: <format>,255" will be response to "AT+ICF?" Command

2.2.36 AT+IFC Set TE-TA Local Data Flow Control

AT+IFC Set TE-TA Local Data Flow Control

Test Command AT+IFC=?	Response +IFC: (list of supported <dce_by_dte>s),(list of supported <dte_by_dce>s) OK
Read Command AT+IFC?	Response +IFC: <dce_by_dte>,<dte_by_dce> OK
Write Command AT+IFC=<dce_by_dte>,[<dte_by_dce>]	Response This parameter setting determines the data flow control on the serial interface for data mode. OK Parameters <dce_by_dte> Specifies the method will be used by TE at receive of data from TA <ul style="list-style-type: none"> <u>0</u> No flow control 1 Software flow control 2 Hardware flow control <dte_by_dce> Specifies the method will be used by TA at receive of data from TE <ul style="list-style-type: none"> <u>0</u> No flow control 1 Software flow control 2 Hardware flow control
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

Defined Values

dce_by_dte	Specifies the method will be used by TE at receive of data from TA <ul style="list-style-type: none"> <u>0</u> No flow control 1 Software flow control 2 Hardware flow control
<dte_by_dce>	Specifies the method will be used by TA at receive of data from TE <ul style="list-style-type: none"> <u>0</u> No flow control 1 Software flow control 2 Hardware flow control

Example

AT+IFC?

+ICF:0,0

OK

AT+IFC=0,0

OK

2.2.37 AT+IPR Set TE-TA Fixed Local Rate

AT+IPR Set TE-TA Fixed Local Rate

Test Command

AT+IPR=?

Response

+IPR: (list of supported auto detectable <rate>s),(list of supported fixed-only <rate>s)

OK

Read Command

AT+IPR?

Response

+IPR: <rate>

OK

Write Command

AT+IPR=<rate>

Response

This parameter setting determines the data rate of the TA on the serial interface. The rate of Command takes effect following the issuance of any result code associated with the current Command line.

OK

Parameter Saving Mode

AUTO_SAVE

Max Response Time

-

Reference

Defined Values

<rate>

Baud rate per second

0

110

300

1200

2400

4800

9600

19200

38400

57600

115200

	230400
	460800
	921600
	3000000

Example

```
AT+IPR?
```

```
+IPR:0
```

```
OK
```

```
AT+IPR=0
```

```
OK
```

NOTE

- Factory setting is "AT+IPR=0"(auto-bauding).

3 AT Commands According to 3GPP TS 27.007

3.1 Overview of AT Commands According to 3GPP TS 27.007

Command	Description
AT+CEER	Extended error report
AT+CGMI	Request manufacturer identification
AT+CGMM	Request model identification
AT+CGMR	Request TA revision identification of software release
AT+CGOI	Request global object identification
AT+CGSN	Request product serial number identification (identical with +GSN)
AT+CSCS	Select TE character set
AT+CIMI	Request international mobile subscriber identity
AT+CLCK	Facility lock
AT+CMEE	Report mobile equipment error
AT+COPS	Operator selection
AT+CPIN	Enter PIN
AT+CPWD	Change password
AT+CR	Service reporting control
AT+CREG	Network registration
AT+CRSM	Restricted SIM access
AT+CSCS	Select TE character set
AT+CSQ	Signal quality report
AT+CMUX	Multiplexer control
AT+CNUM	Subscriber number
AT+CPOL	Preferred operator list
AT+CFUN	Set phone functionality
AT+CCLK	Clock
AT+CSIM	Generic SIM access
AT+CBC	Battery charge
AT+CTZR	Time zone reporting
AT+CTZU	Automatic time zone update
AT+CPLS	Selection of preferred PLMN list
AT+CPSMS	Power saving mode selection

AT+CIPCA	Enable/disable activation of PDN connection on attach.
AT+CEDRXS	eDRX setting
AT+CEDRXRDP	eDRX read dynamic parameters
AT+CCHO	Open UICC logical channel
AT+CCHC	Close UICC logical channel
AT+CGLA	Generic UICC logical channel access
AT+CPINR	Remaining PIN retries
AT+CGATT	GPRS/Packet Domain attach or detach
AT+CGDCONT	Define PDP context
AT+CGACT	PDP context activate or deactivate
AT+CGPADDR	Show PDP address
AT+IPCONFIG	Show the Complete PDP Address
AT+CGEREP	Packet Domain Event Reporting
AT+CGREG	Network registration status
AT+CGCONTRDP	PDP Context Read Dynamic Parameters
AT+CGPIAF	Printing IP Address Format
AT+CGDEL	Delete Non-Active PDP Contexts
AT+CGAUTH	Define PDP Context Authentication Parameters
AT*MCGDEFCONT	Set Default PSD Connection Settings
AT+CEREG	EPS Network Registration Status
AT+CGDATA	Enter Data State
AT*MGCOUNT	GPRS/Packet Domain Packet Counters

3.2 Detailed Description of AT Commands According to 3GPP TS

27.007

3.2.1 AT+CEER Extended Error Report

AT+CEER Extended Error Report	
Test Command AT+CEER=?	Response +CEER: (list of supported <n>s) OK
	Parameters See Write Command
Read Command AT+CEER?	Response +CEER: <n>

	OK
Write Command AT+CEER=<n>	Parameters See Write Command
Execution Command AT+CEER	Response TA returns an extended report of the reason for the last call release. +CEER: <report>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

Defined Values

<n>	0 The reason for last call release as text code 1 The reason for last call release as number code
<report>	If AT+CEER=0, return <s> <s> a string that represents the Cause If AT+CEER=1, return Cause: <c> <c> number representing the Cause
<c>(number) <s>(string)	0 (No cause) 1 (unassigned (unallocated) number) 3 (no route to destination) 6 (channel unacceptable) 8 (operator determined barring) 16 (normal call clearing) 17 (user busy) 18 (no user responding) 19 (user alerting, no answer) 21 (call rejected) 22 (number changed) 26 (non-selected user clearing) 27 (destination out of order) 28 (invalid number format (incomplete number)) 29 (facility rejected) 30 (response to STATUS ENQUIRY) 31 (normal, unspecified) 34 (emergency call not possible) 38 (network out of order) 41 (temporary failure) 42 (switching equipment congestion)

43	(access information discarded)
44	(requested circuit/channel not available)
47	(resource unavailable, unspecified)
49	(quality of service unavailable)
50	(Requested facility not subscribed)
55	(Incoming calls barred within the CUG)
57	(bearer capability not authorized)
58	(bearer capability not presently available)
63	(service or option not available, unspecified)
68	(ACM equal to or greater than ACMmax)
65	(bearer service not implemented)
69	(Requested facility not implemented)
70	(only restricted digital information bearer capability is available)
79	(service or option not implemented,unspecified)
81	(invalid transaction identifier value)
87	(user not member of CUG)
88	(incompatible destination)
91	(invalid transit network selection)
95	(semantically incorrect message)
96	(invalid mandatory information)
97	(message type non-existent or not implemented)
98	(message type not compatible with protocol state)
99	(information element non-existent or not implemented)
100	(conditional IE error)
101	(message not compatible with protocol state)
102	(recovery on timer expiry)
111	(protocol error, unspecified)
127	(interworking, unspecified)

Example

AT+CEER?

+CEER:0

OK

AT+CEER=0

OK

NOTE

- Only part of projects support this command, please refer to chapter 22 for details.

3.2.2 AT+CGMI Request Manufacturer Identification

AT+CGMI Request Manufacturer Identification

Test Command AT+CGMI=?	Response OK
Execution Command AT+CGMI	Response TA returns manufacturer identification text. <manufacturer>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	Note

Defined Values

<manufacturer>	The ID of manufacturer
-----------------------------	------------------------

Example

AT+CGMI=?

OK

AT+CGMI

SIMCOM_Ltd

OK

3.2.3 AT+CGMM Request Model Identification

AT+CGMM Request Model Identification

Test Command AT+CGMM=?	Response OK
Execution Command AT+CGMM	Response TA returns manufacturer identification text. <model>

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<model>	Product model identification text
----------------------	-----------------------------------

Example

AT+CGMM=?

OK

AT+CGMI

SIM7020C

OK

3.2.4 AT+CGMR Request TA Revision Identification of Software Release

AT+CGMR Request TA Revision Identification of Software Release	
Test Command	Response
AT+CGMR=?	OK
Execution Command	Response
AT+CGMR	TA returns manufacturer identification text. <revision>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<revision>	Product software version identification text
-------------------------	--

Example

AT+CGMR=?

OK
AT+CGMR
1752B01V01SIM7020C

OK

3.2.5 AT+CGOI Request Global Object Identification

AT+CGOI Request Global Object Identification

Test Command	Response
AT+CGOI=?	OK
Execution Command	Response
AT+CGOI	TA returns manufacturer identification text. <Object Id>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<Object Id>	Identifier of device type
--------------------------	---------------------------

Example

AT+CGOI=?

OK

AT+CGOI

SIM7020C

OK

3.2.6 AT+CGSN Request Product Serial Number Identification

AT+CGSN Request Product Serial Number Identification

Test Command	Response
AT+CGSN=?	OK

Execution Command AT+CGSN	Response see +GSN <sn>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<sn>	International mobile equipment identity (IMEI)
-------------------	--

Example

```
AT+CGSN
0000000000000000
```

```
OK
```

3.2.7 AT+CIMI Request International Mobile Subscriber Identity

AT+CIMI Request International Mobile Subscriber Identity	
Test Command AT+CIMI=?	Response OK
Execution Command AT+CIMI	Response TA returns <IMSI> for identifying the individual SIM which is attached to ME. <IMSI>
	OK
	If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	20s
Reference	

Defined Values

<MISI>	International Mobile Subscriber Identity (string without double quotes)
--------	---

Example

```
AT+CIMI=?
OK
AT+CIMI
460028216590952

OK
```

3.2.8 AT+CLCK Facility Lock

AT+CLCK Facility Lock	
Test Command AT+CLCK=?	Response +CLCK: (list of supported <fac>s) OK
Write Command AT+CLCK=<fac>,<mode>,[<password>[,<class>]]	Response This Command is used to lock, unlock or interrogate a ME or a network facility <fac>. Password is normally needed to do such actions. When querying the status of a network service (<mode>=2) the response line for 'not active' case (<status>=0) should be returned only if service is not active for any <class>. If <mode>≠2 and Command is successful OK If <mode>=2 and Command is successful +CLCK: <status>[,<class1>[<CR><LF>]+CLCK: <status>,<class2>[...]] OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	15s
Reference	

Defined Values

<fac>	"SC" SIM (lock SIM/UICC card) (SIM/UICC asks password in MT power-up and when this lock command issued) Correspond to PIN1 code
<mode>	0 unlock 1 lock 2 query status
<passwd>	String type (Shall be the same as password specified for the facility from the MT user interface or with command Change Password)
<class>	Field not required for NB-IOT, so will be ignored
<status>	0 Not active 1 Active

Example

```
AT+CLK=?  
+CLK: ("SC")  
  
OK  
AT+CLK="SC",2  
+CLK: 0  
  
OK
```

NOTE

- CME errors if SIM not inserted or PIN is not entered.

3.2.9 AT+CMEE Report Mobile Equipment Error

AT+CMEE Report Mobile Equipment Error

Test Command AT+CMEE=?	Response +CMEE: (list of supported <n>s) OK
Read Command AT+CMEE?	Response +CMEE: <n> OK

Write Command AT+CMEE=[<n>]	Response TA disables or enables the use of result code +CME ERROR: <err> as an indication of an error relating to the functionality of the ME. OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0 Disable +CME ERROR: <err> result code and use ERROR instead. 1 Enable +CME ERROR: <err> result code and use numeric <err> 2 Enable +CME ERROR: <err> result code and use verbose <err> values
-----	---

Example

```
AT+CMEE=?  
+CMEE: (0-2)
```

```
OK  
AT+CMEE=0  
OK
```

3.2.10 AT+COPS Operator Selection

AT+COPS Operator Selection	
Test Command AT+COPS=?	Response TA returns a list of quadruplets, each representing an operator present in the network. Any of the formats may be unavailable and should then be an empty field. The list of operators shall be in order: home network, networks referenced in SIM, and other networks. +COPS: (list of supported<stat>,long alphanumeric<oper>,short alphanumeric<oper>,numeric <oper>[,<AcT>])s[,(list of supported <mode>s),(list of supported <format>s)]

	OK If error is related to ME functionality: +CME ERROR: <err>
Read Command AT+COPS?	Response TA returns the current mode and the currently selected operator. If no operator is selected, <format> and <oper> are omitted. +COPS: <mode>[,<format>,<oper>,<AcT>]
	OK If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+COPS=<mode>[,<format>][,<oper>]]	Response TA forces an attempt to select and register the GSM network operator. If the selected operator is not available, no other operator shall be selected (except <mode>=4). The selected operator name format shall apply to further read commands (AT+COPS?). OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<stat>	0 Unknown 1 Operator available 2 Operator current 3 Operator forbidden
<oper>	Refer to [27.007] operator in format as per <format>
<mode>	0 Automatic mode; <oper> field is ignored 1 Manual (<oper> field shall be present, and <AcT> optionally) 2 Manual deregister from network 3 Set only <format> (for read Command +COPS?) - not shown in Read Command response 4 Manual/automatic (<oper> field shall be present); if manual selection fails, automatic mode (<mode>=0) is entered
<format>	0 Long format alphanumeric <oper> 1 Short format alphanumeric <oper> 2 Numeric <oper> ; GSM Location Area Identification number
<AcT>	9 NB-IoT

Example

AT+COPS=?

+COPS: (2,"CHINA MOBILE","CMCC","46000",0),(1,"CHINA MOBILE","CMCC","46000",9),(3,"CHN-UNICOM","UNICOM","46001",0),(1,"CHN-CT","CT","46011",9),(3,"CHN-UNICOM","UNICOM","46001",9),(0,1,2,3,4),(0,1,2)

OK

AT+COPS?

+COPS: 0,0,"CHINA MOBILE CMCC",0

OK

AT+COPS=0

OK

3.2.11 AT+CPIN Enter PIN

AT+CPIN Enter PIN

Test Command AT+CPIN=?	Response OK
Read Command AT+CPIN?	Response TA returns an alphanumeric string indicating whether some password is required or not. +CPIN: <code>
	OK
Write Command AT+CPIN=<pin>[,<newpin>]	Response TA stores a required password (SIM PIN, SIM PUK, PH-SIM PIN, etc.). If the PIN is to be entered twice, the TA shall automatically repeat the PIN. If no PIN request is pending, no action is taken and an error message, +CME ERROR, is returned to TE. If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, <new pin>, is used to replace the old pin in the SIM. When a new password is set, a third optional parameter may also be specified. This extra parameter is compared to the new password to check they are equivalent as an additional security feature. OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE

Max Response Time	5s
Reference	

Defined Values

<code>	An alphanumeric string indicating whether some password is required or not READY MT is not pending for any password SIM PIN MT is waiting SIM PIN to be given SIM PUK MT is waiting for SIM PUK to be given PH_SIM PIN ME is waiting for phone to SIM card (antitheft) PH_SIM PUK ME is waiting for SIM PUK (antitheft) SIM PIN2 PIN2, e.g. for editing the FDN book possible only if preceding Command was acknowledged with +CME ERROR:17 SIM PUK2 Possible only if preceding Command was acknowledged with error +CME ERROR: 18. PH-SIM PIN ME is waiting for phone to SIM card (antitheft) PH-NET PIN Network personalization password is required. PH-NETSUB PIN Network subset is required. PH-SP PIN Service provider personalization password is required. PH-CORP PIN Corporate personalization password is required.
<pin>	String type; password
<new pin>	String type; If the PIN required is SIM PUK or SIMPUK2: new password

Example

```

AT+CPIN=?
OK
AT+CPIN?
+CPIN: READY

OK
AT+CPIN=1234
OK

```

3.2.12 AT+CPWD Change Password

AT+CPWD Change Password	
Test Command	Response

AT+CPWD=?	TA returns a list of pairs which present the available facilities and the maximum length of their password. +CPWD: (list of supported <fac>s, list of supported <pwdlength>s)
	OK
Write Command	Response
AT+CPWD=<fac>,<oldpwd>,<newpwd>	TA sets a new password for the facility lock function.
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	15s
Reference	

Defined Values

<fac>	"SC" SIM (lock SIM/UICC card) (SIM/UICC asks password in MT power-up and when this lock command issued) Correspond to PIN1 code.
<pwdlength>	Integer max. length of password
<oldpwd>	String type (string should be included in quotation marks): password specified for the facility from the user interface or with command. If an old password has not yet been set, <oldpwd> is not to enter.
<newpwd>	String type (string should be included in quotation marks): new password

Example

```
AT+CPWD=?
+CPWD: ("SC",8)
```

```
OK
AT+CPWD = "SC","1234","4321"
OK
```

3.2.13 AT+CREG Network Registration

AT+CREG Network Registration	
Test Command	Response
AT+CREG=?	+CREG: (list of supported <n>s)
	OK

Read Command AT+CREG?	<p>Response</p> <p>TA returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the ME. Location information elements <lac> and <ci> are returned only when <n>=2 and ME is registered in the network.</p> <p>+CREG: <n>,<stat>[,<lac>,<ci>[,<AcT>]]</p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>
Write Command AT+CREG=<n>	<p>Response</p> <p>TA controls the presentation of an unsolicited result code +CREG: <stat> when <n>=1 and there is a change in the ME network registration status.</p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>
	<p>Unsolicited Result Code</p> <p>If <n>=1 and there is a change in the MT network registration status</p> <p>+CREG: <stat></p> <p>If <n>=2 and there is a change in the MT network registration status or a change of the network cell:</p> <p>+CREG: <stat>[,<lac>,<ci>[,<AcT>]]</p>
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<n>	<ul style="list-style-type: none"> 0 Disable network registration unsolicited result code 1 Enable network registration unsolicited result code <p>+CREG: <stat></p> <ul style="list-style-type: none"> 2 Enable network registration unsolicited result code with location information +CREG: <stat>[,<lac>,<ci>[,<AcT>]]
<stat>	<ul style="list-style-type: none"> 0 Not registered, MT is not currently searching a new operator to register to 1 Registered, home network 2 Not registered, but MT is currently searching a new operator to register to 3 Registration denied 4 Unknown 5 Registered, roaming 6 Registered for "SMS only", home network (applicable only when <Act> indicates NB-IOT)

	7 Registered for "SMS only", roaming (applicable only when <Act> indicates NB-IOT)
<lac>	String type (string should be included in quotation marks); two byte location area code in hexadecimal format
<ci>	String type (string should be included in quotation marks); four byte cell ID in hexadecimal format
<AcT>	Access technology of the registered network 9 NB-IoT

Example

AT+CREG=?

+CREG: (0-2)

OK

AT+CREG?

+CREG: 0,2

OK

AT+CREG=2

OK

3.2.14 AT+CRSM Restricted SIM Access

AT+CRSM Restricted SIM Access

Test Command	Response
AT+CRSM=?	OK
Write Command	Response
AT+CRSM=<Command>[,<field>[,<P1>,<P2>,<P3>[,<data>[,<pathid>]]]]	+CRSM: <sw1>,<sw2>[,<response>] OK ERROR If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SVAE
Max Response Time	-
Reference	

Defined Values

<Command>	176 READ BINARY
------------------------	-----------------

	178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS All other values are reserved; refer GSM 11.11.
<fileId>	Integer type; this is the identifier for an elementary data file on SIM. Mandatory for every command except STATUS <P1>,<P2>,<P3> Integer type, range 0-255 Parameters to be passed on by the ME to the SIM; refer GSM 11.11
<data>	Information which shall be written to the SIM (hex-decimal character format)
<sw1>,<sw2>	Integer type, range 0-255 Status information from the SIM about the execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command; refer GSM 11.11.
<response>	Response of a successful completion of the command previously issued (hexadecimal character format)
<pathid>	String type; contains the path of an elementary file on the SIM/UICC in hexadecimal format as defined in ETSI TS 102.211 (e.g. "7F205F70" in SIM and UICC case). The <pathid> only used in the mode "select path from MF" as defined in ETSI TS 102.211.

Example

```

AT+CRSM=?
OK
AT+CRSM=242
+CRSM:
144,0,"62358202782183023F00A509800171830400080F608A01058B032F0611C6189001BC9501008
3011183010183010A83010B83010C83010D"

OK

```

3.2.15 AT+CSCS Select TE Character Set

AT+CSCS Select Character Set

Test Command

AT+CSCS=?

Response

+CSCS: (list of supported <chset>s)

OK

Read Command AT+CSCS?	Response +CSCS: <chset>
	OK
Write Command AT+CSCS=<chset>	Response Sets which character set <chset> are used by the TE. The TA can then convert character strings correctly between the TE and ME character sets. OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AT&W_SVAE
Max Response Time	-
Reference	

Defined Values

<chset>	Character type "GSM" GSM 7 bit default alphabet (3GPP TS 23.038); "UCS2" 16-bit universal multiple-octet coded character set (ISO/IEC10646); UCS2 character strings are converted to hexadecimal numbers from 0000 to FFFF; e.g. "004100620063" equals three 16-bit characters with decimal values 65, 98 and 99 " <u>IRA</u> " International reference alphabet (ITU-T T.50) "HEX" Character strings consist only of hexadecimal numbers from 00 to FF; "PCCP" PC character set Code "PCDN" PC Danish/Norwegian character set "8859-1" ISO 8859 Latin 1 character set
----------------------	---

Example

```
AT+CSCS=?
+CSCS:
("GSM","HEX","IRA","PCCP","PCDN","UCS2","8859-1")
```

OK

```
AT+CSCS?
+CSCS: "IRA"
```

OK

```
AT+CSCS="IRA"
OK
```

3.2.16 AT+CSQ Signal Quality Report

AT+CSQ Signal Quality Report	
Test Command AT+CSQ=?	Response +CSQ: (list of supported <rssi>s),(list of supported <ber>s) OK
Execution Command AT+CSQ	Response +CSQ: <rssi>,<ber> OK If error is related to ME functionality: +CME ERROR: <err> Execution Command returns received signal strength indication <rssi> and channel bit error rate <ber> from the ME. Test Command returns values supported by the TA.
Parameter Saving Mode	NO_SVAE
Max Response Time	-
Reference	

Defined Values

<rssi>	Integer type. Rx signal strength level 0 -110 dBm or less 1 -109 dBm <=rssi<-107 dBm 2 -107 dBm <=rssi<-105 dBm 3...30 -105dBm <=rssi<-48 dBm 31 -48dBm <=rssi 99 Not known or not detectable
<ber>	(in percent): 0...7 As RXQUAL values in the table in GSM 05.08 [20] subclause 7.2.4 99 Not known or not detectable

Example

```
AT+CSQ=?
+CSQ: (0-31,99),(0-7,99)
```

OK

AT+CSQ

+CSQ: 0,0

OK

3.2.17 AT+CMUX Multiplexer Control

AT+CMUX Multiplexer Control

Test Command

AT+CMUX=?

Response

+CMUX: (list of supported <mode>s),(list of supported <subset>s),(list of supported<port_speed>s),(list of supported<N1>s),(list of supported<T1>s),(list of supported<N2>s),(list if supported<T2>s),(list of supported<T3>s),<list of supported <k>s)

OK

Read Command

AT+CMUX?

Response

+CMUX:
[<mode>[,<subset>[,<port_speed>[,<N1>[,<T1>[,<N2>[,<T2>[,<T3>[,<k>]]]]]]]]]

OK

or

ERROR

Write Command

AT+CMUX=<mode>[,<subset>[,<port_speed>[,<N1>[,<T1>[,<N2>[,<T2>[,<T3>[,<k>]]]]]]]]]

Response

If error is related to ME functionality:

+CME ERROR: <err>

Parameter Saving Mode

NO_SVAE

Max Response Time

-

Reference

Defined Values

<mode>	0 27.010 multiplexer
<subset>	The way in which the multiplexer control channel is set up 0 UIH frames used only
<port_speed>	Transmission rate 0 autobaud

	1 110 2 300 3 1200 4 2400 5 4800 6 9600 7 19200 8 38400 9 57600 10 115200 11 230400 12 460800 Proprietary values, available if MUX NEW PORT SPEED FTR is activated
<N1>	Max frame size <u>31-4096</u> (default value 31 for basic option)
<T1>	Acknowledgement timer in units of ten milliseconds 1-254 Default:10 (100 ms)
<N2>	Max number of re-transmissions 0-100 Default:3
<T2>	Max Response Timer for the multiplexer control channel in units of ten milliseconds
<T3>	Wake up Max Response Timers in seconds 1-255 Default:10
<k>	Window size, for Advanced operation with Error Recovery options 1-7 Default:2

Example

```
AT+CMUX=?  
+CMUX: (0),(0),(0-12),(31-4096),(1-254),(0-100),(2-255),(1-7)
```

OK

```
AT+CMUX?
```

```
+CMUX: 0,0,0,31,10,3,30,10,2
```

OK

NOTE

- The values of <subset>,<port_speed>,<N1>,<T>,<N2>,<T2>,<T3>,<k> are only relevant to the 27.010 MUX control channel.
- <port_speed> set to 0 will set the MUX port rate at whatever the AT+IPR setting is for the channel.

3.2.18 AT+CNUM Subscriber Number

AT+CNUM Subscriber Number	
Test Command AT+CNUM=?	Response OK
Execution Command AT+CNUM	Response +CNUM: [<alpha1>],<number1>,<type1>[<CR><LF>] +CNUM:[<alpha2>],<number2>,<type2> [...]] OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SVAE
Max Response Time	-
Reference	

Defined Values

<alphax>	Optional alphanumeric string associated with <numberx> ; used character set should be the one selected with Command Select TE Character Set +CSCS
<numberx>	String type (string should be included in quotation marks) phone number of format specified by <typex> .
<typex>	Type of address octet in integer format (refer GSM04.08[8] subclause 10.5.4.7)

Example

```

AT+CNUM=?
OK
AT+CNUM
+CNUM: "", "13817825065", 129

OK

```

3.2.19 AT+CPOL Preferred Operator List

AT+CPOL Preferred Operator List

Test Command AT+CPOL=?	Response +CPOL: (list of supported <index>s),(list of supported <format>s) OK
Read Command AT+CPOL?	Response +CPOL: <index1>,<format>,<oper1>[,<GSM_AcT1>,<GSMcomp_AcT1>,<UTRAN_AcT1>,<E-UTRAN_AcT1>][<CR><LF>] +CPOL: <index2>,<format>,<oper2>[,<GSM_AcT2>,<GSMcomp_AcT2>,<UTRAN_AcT2>,<E-UTRAN_AcT2>] OK If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CPOL=<index>[,<format>,<oper>]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SVAE
Max Response Time	-
Reference	

Defined Values

<index>	Integer type: order number of operator in SIM preferred operator list
<format>	Indicates whether alphanumeric or numeric format used (see +COPS Command) 0 Long format alphanumeric <oper> 1 Short format alphanumeric <oper> 2 Numeric <oper>
<oper>	String type(string should be included in quotation marks)
<GSM_AcTn>	GSM Access technology 0 Access technology not selected 1 Access technology selected
<GSM_Comp_AcTn>	GSM compact Access technology 0 Access technology not selected 1 Access technology selected
<UTRAN_AcTn>	UTRA Access technology 0 Access technology not selected 1 Access technology selected

<E-UTRAN_AcTn>	E-UTRAN Access technology 0 Access technology not selected 1 Access technology selected
-----------------------------	---

Example

```

AT+CPOL=?
+CPOL: (1-80),(0-2)

OK
AT+CPOL?
+CPOL: 1,2,"46000",1,0,1,0

OK

```

NOTE

- Not all USIMs support the preferred operator list.

3.2.20 AT+CFUN Set Phone Functionality

AT+CFUN Set Phone Functionality	
Test Command	Response AT+CFUN=? +CFUN: (list of supported <fun>s),(list of supported <rst>s)
	OK
Read Command	Response AT+CFUN? +CFUN: <fun>
	OK If error is related to ME functionality: +CME ERROR: <err>
Write Command	Response AT+CFUN=<fun>[,<rst>] OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SVAE
Max Response Time	-
Reference	

Defined Values

<fun>	0 Minimum functionality 1 Full functionality (Default) 4 Disable phone both transmit and receive RF circuits. 7 Disable phone SIM only. Transmit and receive circuits still active
<rst>	0 Set it to <fun> power level now, but do not reset the MT 1 Do not set it to <fun> power level, either do not reset the MT before rebooting 2 Set it to <fun> power level now, and reset the MT after rebooting

Example

```
AT+CFUN=?  
+CFUN: (0,1,4,7),(0-2)
```

OK

```
AT+CFUN?  
+CFUN: 1
```

OK

```
AT+CFUN=1,1
```

OK

RDY

+CFUN: 1

+CPIN: READY

SMS Ready

3.2.21 AT+CLCK Clock

AT+CLCK Clock

Test Command AT+CLCK=?	Response OK
Read Command AT+CLCK?	Response +CCLK: <time> OK

	If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CLCK=<time>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SVAE
Max Response Time	-
Reference	

Defined Values

<time>	String type, format is: yy/MM/dd,hh:mm:ss±zz, where characters indicate year (two last digits),month, day, hour, minutes, seconds and time zone. E.g. 10/05/06,00:01:52+08.
---------------------	---

Example

```

AT+CCLK=?
OK
AT+CCLK?
+CCLK: 00/01/01,00:18:15+32

OK
AT+CCLK="20/03/20,15:34:15+32"
OK
AT+CCLK?
+CCLK: 20/03/20,15:34:33+32

OK

```

NOTE

- If MT does not support time zone information then the three last characters of <time> are not returned by +CCLK?.

3.2.22 AT+CSIM Generic SIM Access

AT+CSIM Generic SIM Access	
Test Command AT+CSIM=?	Response OK
Write Command AT+CSIM=<length>,<Comm and>	Response +CSIM: <length>,<response> OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SVAE
Max Response Time	-
Reference	

Defined Values

<length>	Integer type: length of characters sent to the TE in <Command> or <response> (i.e. twice the number of octets in the raw data).
<Command>	String type (string should be included in quotation marks): hex format: GSM 11.11 SIM Command sent from the ME to the SIM.
<response>	String type(string should be included in quotation marks): hex format: GSM 11.11 response from SIM to <Command>.

Example

AT+CSIM=?

OK

3.2.23 AT+CBC Battery Charge

AT+CBC Battery Charge	
Test Command AT+CBC=?	Response +CBC: (list of supported <bcl>),(<voltage>) OK
Execution Command AT+CBC	Response +CBC: <bcl>,<voltage>

	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SVAE
Max Response Time	-
Reference	

Defined Values

<bcl>	Battery connection level 0...100 battery has 1-100 percent of capacity remaining vent
<voltage>	Battery voltage(mV)

Example

```
AT+CBC=?  
+CBC: (0-100),(voltage)
```

OK

```
AT+CBC  
+CBC: 88,3418
```

OK

3.2.24 AT+CTZR Time Zone Reporting

AT+CTZR Time Zone Reporting	
Test Command AT+CTZR=?	Response +CTZR: (list of supported <onoff>s)
	OK
Read Command AT+CTZR?	Response +CTZR: <onoff>
	OK If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CTZR=<onoff>	Response OK If error is related to ME functionality: +CME ERROR: <err>

	Unsolicited result code: +CTZV: <zone>
Parameter Saving Mode	AUTO_SAVE_REBOOT
Max Response Time	-
Reference	

Defined Values

<onoff>	0 Disable time zone event reporting 1 Enable time zone event reporting
<zone>	String type value; On behalf of the time zone, range -47...+48. The eastern region is denoted as "+32".

Example

```
AT+CTZR=?  
+CTZR: (0-1)
```

OK

```
AT+CTZR?  
+CTZR: 0
```

OK

```
AT+CTZR=1  
OK
```

3.2.25 AT+CTZU Automatic Time Update

AT+CTZU Automatic Time Update	
Test Command AT+CTZU=?	Response +CTZU: (list of supported <onoff>s)
	OK
Read Command AT+CTZU?	Response +CTZU: <onoff>
	OK If error is related to ME functionality: +CME ERROR: <err>
Write Command	Response

AT+CTZU=<onoff>	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AUTO_SAVE_REBOOT
Max Response Time	-
Reference	

Defined Values

<onoff>	0 Disable automatic time update via NITZ 1 Automatic time update via NITZ
----------------------	--

Example

```
AT+CTZU=?  
+CTZU: (0-1)
```

OK

```
AT+CTZU?  
+CTZU: 0
```

OK

```
AT+CTZU=1  
OK
```

3.2.26 AT+CPLS Selection of preferred PLMN List

AT+CPLS Selection of preferred PLMN List	
Test Command AT+CPLS=?	Response +CPLS: (list of supported <list>s)
	OK
Read Command AT+CPLS?	Response +CPLS: <list>
	OK If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CPLS=<list>	Response OK

	If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<list>	0 User controlled PLMN selector with Access Technology EFPLMNwAcT, if not found in the SIM/UICC then PLMN preferred list EFPLMNSel (this file is only on SIM card or GSM application in UICC. 1 Operator controlled PLMN selector with Access Technology EFOPLMNwAcT 2 HPLMN selector with Access Technology EFHPLMNwACT
---------------------	--

Example

```
AT+CPLS=?  
+CPLS: (0,1,2)
```

OK

```
AT+CPLS?  
+CPLS: 0
```

OK

```
AT+CPLS=0  
OK
```

NOTE

- Only part of projects support this command, please refer to chapter 22 for details.

3.2.27 AT+CPSMS Power Saving Mode Setting

AT+CPSMS Power Saving Mode Setting	
Test Command	Response

AT+CPSMS=?	+CPSMS: (list of supported <mode>s),(list of supported <Requested_Periodic-RAU>s),(list of supported <Requested_GPRS-READY-timer>s),(list of supported <Requested_Periodic-TAU>s),(list of supported <Requested_Active-Time>s)
	OK
Read Command	Response
AT+CPSMS?	+CPSMS: <mode>[,<Requested_Periodic-RAU>][,<Requested_GPRS-READY-timer>][,<Requested_Periodic-TAU>][,<Requested_Active-Time>]
	OK
	If error is related to ME functionality: +CME ERROR: <err>
Write Command	Response
AT+CPSMS=[<mode>[,<Requested_Periodic-RAU>[,<Requested_GPRS-READY-timer>[,<Requested_Periodic-TAU>[,<Requested_Active-Time>]]]]]	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	Integer type. Indication to disable or enable the use of PSM in the UE. 0 Disable the use of PSM 1 Enable the use of PSM 2 Disable the use of PSM and discard all parameters for PSM or, if available reset to the manufacturer specific default values.
<Requested_Periodic-RAU>	N/A for NB-IoT
<Requested_GPRS-READY-timer>	N/A for NB-IoT
<Requested_Periodic-TAU>	String type; one byte in an 8-bit format. Requested extended periodic TAU value (T3412) to be allocated to the UE in E-UTRAN. The requested extended periodic TAU value is coded as one byte (octet 3) of the GPRS Timer 3 information element coded as bit format (e.g. "01000111" equals 70 hours). For the coding and the value range, see the GPRS Timer 3 IE in 3GPP TS 24.008 Table 10.5.163a/3GPP TS 24.008. See also 3GPP TS 23.682 and 3GPP TS 23.401. The default

	value, if available, is manufacturer specific.
<Requested_Active-Time>	String type; one byte in an 8-bit format. Requested Active Time value (T3324) to be allocated to the UE. The requested Active Time value is coded as one byte (octet 3) of the GPRS Timer 2 information element coded as bit format (e.g. "00100100" equals 4 minutes). For the coding and the value range, see the GPRS Timer 2 IE in 3GPP TS 24.008 Table 10.5.163/3GPP TS 24.008. See also 3GPP TS 23.682, 3GPP TS 23.060 and 3GPP TS 23.401. The default value, if available, is manufacturer specific.

Example

```

AT+CPSMS=?
+CPSMS: (0-2),,,("00000000"-“11011111”),("00000000"-“11111111”)

OK
AT+CPSMS?
+CPSMS: 0

OK
AT+CPSMS=1
OK

```

3.2.28 AT+CCIOTOPT CloT optimization configuration

AT+CPSMS Power Saving Mode Setting

Test Command

AT+CCIOTOPT=?

Response

+CCIOTOPT: (list of supported <n>s),(list of supported <supported_UE_opt>s),(list of supported <preferred_UE_opt>s)

OK

Read Command

AT+CCIOTOPT?

Response

+CCIOTOPT: <n>,<supported_UE_opt>,<preferred_UE_opt>

OK

If error is related to ME functionality:

+CME ERROR: <err>

Write Command

AT+CCIOTOPT=[<n>[,<supported_UE_opt>[,<preferred_UE_opt>]

Response

OK

If error is related to ME functionality:

+CME ERROR: <err>

t>]]

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	<p>Integer type, enables or disables reporting of unsolicited result code +CCIOOPTI.</p> <ul style="list-style-type: none"> 0 Disable reporting. 1 Enable reporting. 2 Disable reporting and reset the parameters for CloT EPS optimization to the default values.
<supported_UE_opt>	<p>Integer type; indicates the UE's support for CloT EPS optimizations.</p> <ul style="list-style-type: none"> 1 Support for control plane CloT EPS optimization. 3 Support for both control plane CloT EPS optimization and user plane CloT EPS optimization.
<preferred_UE_opt>	<p>Integer type; indicates the UE's preference for CloT EPS optimizations.</p> <ul style="list-style-type: none"> 0 No preference 1 Preference for control plane CloT EPS optimization 2 Preference for user plane CloT EPS optimization

Example

```
AT+CCIOOPT=?
+CCIOOPT: (0-2),(1,3),(0-2)
```

OK

```
AT+CCIOOPT?
+CCIOOPT: 1,1,1
```

OK

```
AT+CCIOOPT=1,1,1
OK
```

3.2.29 AT+CEDRXS eDRX Setting

AT+CEDRXS eDRX Setting

Test Command	Response
--------------	----------

AT+CEDRXS=?	+CEDRXS: (list of supported <mode>s),(list of supported <AcT-type>s),(list of supported <Requested_eDRX_value>s)
	OK
Read Command AT+CEDRXS?	Response [+CEDRXS: <AcT-type>,<Requested_eDRX_value>[<CR><LF>+CEDRXS: <AcT-type>,<Requested_eDRX_value> [...]]]
	OK
	If error is related to ME functionality: +CME ERROR: <err>
Write Command AT+CEDRXS=<mode>[,<AcT-type>[,<Requested_eDRX_value>]]	Response OK
	If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	Integer type, indicates to disable or enable the use of eDRX in the UE. This parameter is applicable to all specified types of access technology, i.e. the most recent setting of <mode> will take effect for all specified values of <AcT>. 0 Disable the use of eDRX 1 Enable the use of eDRX 2 Enable the use of eDRX and enable the unsolicited result code +CEDRXP: <AcT-type>[,<Requested_eDRX_value>[,<NW-provided_eDRX_value>[,<Paging_time_window>]]] 3 Disable the use of eDRX and discard all parameters for eDRX or, if available, reset to the manufacturer specific default values.
<AcT-type>	Integer type, indicates the type of access technology. This AT-command is used to specify the relationship between the type of access technology and the requested eDRX value. 5 E-UTRAN (NB-S1 mode)
<Requested_eDRX_value>	String type; half a byte in a 4-bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008. The default

	value, if available, is manufacturer specific.
<NW-provided_eDRX_value>	String type; half a byte in a 4-bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008.
<Paging_time_window>	String type; half a byte in a 4-bit format. The paging time window refers to bit 8 to 5 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see the Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008.

Example

```
AT+CEDRXS=?
+CEDRXS: (0-3),(5),("0000"- "1111")
```

OK

```
AT+CEDRXS?
+CEDRXS: 5,"0000"
```

OK

```
AT+CEDRXS=1
OK
```

3.2.30 AT+CEDRXRDP eDRX Read Dynamic Parameters

AT+CEDRXRDP eDRX Read Dynamic Parameters

Test Command AT+CEDRXRDP=?	Response OK
Execution Command AT+CEDRXRDP	Response +CEDRXRDP: <AcT-type>[,<Requested_eDRX_value>[,<NW-provided_eDRX_value>[,<Paging_time_window>]]]
	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-

Reference

Defined Values

<AcT-type>	Integer type, indicates the type of access technology. This AT-command is used to specify the relationship between the type of access technology and the requested eDRX value. 0 Access technology is not using eDRX 5 E-UTRAN (NB-S1 mode)
<Requested_eDRX_value>	String type; half a byte in a 4-bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008.
<NW-provided_eDRX_value>	String type; half a byte in a 4-bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008.
<Paging_time_window>	String type; half a byte in a 4-bit format. The paging time window refers to bit 8 to 5 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see the Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008.

Example

```
AT+CEDXRDP=?
```

```
OK
```

```
AT+CEDXRDP
```

```
+CEDXRDP: 0
```

```
OK
```

3.2.31 AT+CCHO Open UICC Logical Channel

AT+CCHO Open UICC Logical Channel

Write Command	Response
---------------	----------

AT+CCHO=<dfname>	+CCHO: <sessionid>
-------------------------------	---------------------------------

	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<dfname>	String type in hexadecimal character format. All selectable applications in the UICC are referenced by a DF name coded on 1 to 16 bytes
<sessionid>	Integer type; a session Id to be used to target a specific application on the smart card (e.g. (U)SIM, WIM, ISIM) using logical channels mechanism

Example

AT+CCHO=

OK

3.2.32 AT+CCHC Close UICC Logical Channel

AT+CCHC Close UICC Logical Channel	
Write Command	Response
AT+CCHC=<sessionid>	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<sessionid>	Integer type; a session Id to be used to target a specific application on the smart card (e.g. (U)SIM, WIM, ISIM) using logical channels mechanism
--------------------------	--

Example

AT+CCHO=

OK

3.2.33 AT+CGLA Generic UICC Logical Channel Access

AT+CGLA Generic UICC Logical Channel Access

Write Command

AT+CGLA=<sessionid>,<length>,<command>

Response

+CGLA: <length>,<response>

OK

If error is related to ME functionality:

+CME ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<sessionid>	Integer type; this is the identifier of the session used to send the APDU commands to the UICC. It is mandatory to send commands to the UICC when targeting applications on the smart card using a logical channel other than the default channel (channel "0").
<length>	Integer type; length of the characters that are sent to TE in <command> or <response> (two times the actual length of the command or response)
<command>	Command passed on by the MT to the UICC in the format as described in 3GPP TS 31.101 (hexadecimal character format)
<response>	Response to the command passed on by the UICC to the MT in the format as described in 3GPP TS 31.101 (hexadecimal character format)

Example

AT+CCHO=

OK

3.2.34 AT+CPINR Remaining PIN Retries

AT+CPINR Remaining PIN Retries

Test Command AT+CPINR=?	Response OK
Write Command AT+CPINR[=<sel_code>]	Response [+CPINR: <code>,<retries>[,<default_retries>][<CR>,<LF>]+CPINR: <code>,<retries>[,<default_retries>]
	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<sel_code>	String type. Same values as for the <code> parameter. These values are strings and shall be indicated within double quotes. Wildcard match by '*', meaning match any (sub-)string, or '?' meaning an character can be used.
<retries>	Integer type. Number of remaining retries per PIN.
<default_retries>	Integer type. Number of default/initial retries per PIN.
<code>	Type of PIN. All values listed under the description of the AT+CPIN Command, <code> parameter except "READY".

Example

```

AT+CPINR=?
OK
AT+CPINR
+CPINR: "SIM PIN",3,3
+CPINR: "SIM PUK",10,10
+CPINR: "SIM PIN2",3,3
+CPINR: "SIM PUK2",10,10

OK

```

3.2.35 AT+CGATT GPRS/Packet Domain Attach or Detach

AT+CGATT GPRS/Packet Domain Attach or Detach	
Test Command AT+CGATT=?	Response +CGATT: (list of supported <state>s) OK
Read Command AT+CGATT?	Response +CGATT: <state> OK
Write Command AT+CGATT=<state>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<state>	Indicates the state of GPRS/Packet Domain attachment 0 Detached 1 Attached Other values are reserved and will result in an ERROR response to the Write Command.
----------------------	--

Example

```
AT+CGATT=?
+CGATT: (0-1)
```

OK

```
AT+CGATT?
+CGATT: 0
```

OK

```
AT+CGATT=1
OK
```

3.2.36 AT+CGDCONT Define PDP Context

AT+CGDCONT Define PDP Context

Test Command

AT+CGDCONT=?

Response

+CGDCONT: (range of supported <cid>s),<PDP_type>,,(list of supported <d_comp>s),(list of supported <h_comp>s),(list of supported <IPv4AddrAlloc>s),(list of supported <request_type>s),(list of supported <P-CSCF_discovery>s),(list of supported <IM_CN_Signalling_Flag_Ind>s),(list of supported <NSLPI>s),(list of supported <securePCO>s),(list of supported <IPv4_MTU_discovery>s),(list of supported <Local_Addr_Ind>s),(list of supported <Non-IPMTUdiscovery>s)
[<CR><LF>]+CGDCONT: (range of supported <cid>s),<PDP_type>,,(list of supported <d_comp>s),(list of supported <h_comp>s),(list of supported <IPv4AddrAlloc>s),(list of supported <request_type>s),(list of supported <P-CSCF_discovery>s),(list of supported <IM_CN_Signalling_Flag_Ind>s),(list of supported <NSLPI>s),(list of supported <securePCO>s),(list of supported <IPv4_MTU_discovery>s),(list of supported <Local_Addr_Ind>s),,(list of supported <Non-IP_MTU_discovery>s)[...]]

OK

Read Command

AT+CGDCONT?

Response

+CGDCONT:
<cid>,<PDP_type>,<APN>,<PDP_addr>,<d_comp>,<h_comp>[,<IPv4AddrAlloc>[,<request_type>[,<P-CSCF_discovery>[,<IM_CN_Signalling_Flag_Ind>[,<NSLPI>[,<securePCO>[,<IPv4_MTU_discov>[,<Local_Addr_Ind>[,<Non-IP_MTU_discovery>]]]]]]]]]

[<CR><LF>

+CGDCONT:

<cid>,<PDP_type>,<APN>,<PDP_addr>,<d_comp>,<h_comp>[,<IPv4AddrAlloc>[,<request_type>[,<P-CSCF_discovery>[,<IM_CN_Signalling_Flag_Ind>[,<NSLPI>[,<securePCO>[,<IPv4_MTU_discov>[,<Local_Addr_Ind>[,<Non-IP_MTU_discovery>]]]]]]]]]

OK

Write Command

AT+CGDCONT=<cid>[,<PDP_type>[,<APN>[,<PDP_addr>[,<d_comp>[,<h_comp>]]]]]

Response

OK

or

ERROR

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<cid>	(PDP Context Identifier) a numeric parameter that specifies a particular PDP context definition. The parameter is local to the UE-TE interface and is used in other PDP context-related commands. The range of permitted values (minimum value=1 or if the initial PDP context is supported minimum value=0) is returned by the test form of the command.
<PDP_type>	(Packet Data Protocol type) a string parameter which specifies the type of packet data protocol: IP Internet Protocol (IETF STD 5) IPV6 Internet Protocol, version 6 (IETF RFC 2460) IPV4V6 Virtual <PDP_type> introduced to handle dual IP stack UE capability (see 3GPP Technical Specifications 24.301). Non-IP Transfer of Non-IP data to external packet data Network (see 3GPP Technical Specifications 24.301).
<APN>	(Access Point Name) a string parameter, a logical name to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested.
<PDP_addr>	A string parameter that identifies the UE in the address space applicable to the PDP. If the value is null or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. The read form of the command will continue to return the null string even if an address has been allocated during the PDP startup procedure. The allocated address may be read using the +CGPADDR command. NOTE: For EPS, this field is omitted.
<d_comp>	A numeric parameter that controls PDP data compression (applicable for SNDCP only) (refer 3GPP TS 04.65) 0 off (default if value is omitted) 1 on (manufacturer preferred compression) 2 V.42bis Other values are reserved.
<h_comp>	A numeric parameter that controls PDP header compression (refer 3GPP TS 04.65) 0 off (default if value is omitted) 1 on (manufacturer preferred compression) 2 RFC1144 (applicable for SNDCP only) 3 RFC 2507 4 RFC 3095 (ROHC) (applicable for PDCP only) Other values are reserved.

<IPv4_MTU_discovery>	<p>Integer type; influences how the MT/TA requests to get the IPv4 MTU size, see 3GPP TS 24.008 sub-clause 10.5.6.3.</p> <p>0 Preference of IPv4 MTU size discovery not influenced by +CGDCONT</p> <p>1 Preference of IPv4 MTU size discovery through NAS signaling</p>
<Non-IP_MTU_discovery>	<p>Integer type; influences how the MT/TA requests to get the Non-IP MTU size, see 3GPP TS 24.008 sub-clause 10.5.6.3.</p> <p>0 Preference of Non-IP MTU size discovery not influenced by +CGDCONT</p> <p>1 Preference of Non-IP MTU size discovery through NAS signaling</p>

Example

AT+CGDCONT=?

+CGDCONT: (1-15),"IP",,(0-2),(0-4),(0),,,,(0-1),,(0-1),,(0-1)
+CGDCONT: (1-15),"IPV6",,(0-2),(0-4),(0),,,,(0-1),,(0-1),,(0-1)
+CGDCONT: (1-15),"IPV4V6",,(0-2),(0-4),(0),,,,(0-1),,(0-1),,(0-1)
+CGDCONT: (1-15),"Non-IP",,(0-2),(0-4),(0),,,,(0-1),,(0-1),,(0-1)

OK

AT+CGDCONT?

OK

AT+CGDCONT=1

OK

3.2.37 AT+CGACT PDP Context Active or Deactive

AT+CGACT PDP Context Active or Deactive	
Test Command AT+CGACT=?	<p>Response</p> <p>+CGACT: (list of supported <state>s)</p>
	OK
Read Command AT+CGACT?	<p>Response</p> <p>+CGACT: <cid>,<state>[<CR><LF>+CGACT: <cid>,<state>...]</p>
	OK
Write Command AT+CGACT=<state>[,<cid>]	<p>Response</p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>

Parameter Saving Mode	NO_SAVE
Max Response Time	150 Seconds
Reference	

Defined Values

<state>	Indicates the state of PDP context activation 0 Deactivated 1 Activated Other values are reserved and will result in an ERROR response to the Write Command.
<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command). If the <cid> is omitted, it only affects the first cid.

Example

```
AT+CGACT=?  
+CGACT: (0-1)
```

OK

```
AT+CGACT?  
+CGACT: 0
```

OK

```
AT+CGACT=1  
OK
```

NOTE

- If context is deactivated successfully, NO CARRIER is returned
- If **<cid>=0** for PDN activated during attach is enabled, then **AT+CGACT=<0>** or **<1>**, 0 will cause ERROR response.

3.2.38 AT+CGPADDR Show PDP Address

 
AT+CGPADDR Show PDP Address	
Test Command AT+CGPADDR=?	Response +CGPADDR: (list of defined <cid> s)

	OK or OK
Write Command AT+CGPADDR=[<cid>[,<cid>[,...]]]	Response <code>+CGPADDR: <cid>[,<PDP_addr>][<CR><LF>+CGPADDR:<cid>[,<PDP_addr>][...]]</code>
	OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command). If no <cid> is specified, the addresses for all defined contexts are returned.
<PDP_addr>	A string that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT command when the context was defined. For a dynamic address, it will be the one assigned during the last PDP context activation that used the context definition referred to by <cid>.
<PDP_address>	is omitted if none is available.

Example



NOTE

- Write command returns address provided by the network if a connection has been established.


3.2.39 AT+IPCONFIG Show the Complete PDP Address

AT+IPCONFIG Show the Complete PDP Address	
Execution Command AT+IPCONFIG	Response [+IPCONFIG: <PDP_addr>] OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<PDP_addr>	A string that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT command when the context was defined.
-------------------------	--

 Example



NOTE

- Write command returns address provided by the network if a connection has been established.

3.2.40 AT+CGEREP Packet Domain Event Reporting

AT+CGEREP Packet Domain Event Reporting	
Test Command AT+CGEREP=?	Response +CGEREP: (list of supported <mode>s),(list of supported <bfr>s) OK
Read Command AT+CGEREP?	Response +CGEREP: <mode>,<bfr> OK
Write Command AT+CGEREP=<mode>	Response OK

or

ERROR

Unsolicited Result Codes supported:

For network attachment, the following unsolicited result codes and the corresponding events are defined:

+CGEV: NW DETACH

The network has forced a PS detach. This implies that all active contexts have been deactivated. These are not reported separately.

+CGEV: ME DETACH

The mobile termination has forced a PS detach. This implies that all active contexts have been deactivated. These are not reported separately.

For PDP context activation, the following unsolicited result codes and the corresponding events are defined:

+CGEV: NW PDN ACT <cid>

The network has activated a context. The context represents a Primary PDP context in GSM/UMTS. The <cid> for this context is provided to the TE. The format of the parameter <cid> is found in command +CGDCONT.

NOTE 1: This event is not applicable for EPS.

+CGEV: ME PDN ACT <cid>[,<reason>[,<cid_other>]]

The mobile termination has activated a context. The context represents a PDN connection in NB-IOT. The <cid> for this context is provided to the TE. This event is sent either in result of explicit context activation request (+CGACT), or in result of implicit context activation request associated to attach request (+CGATT=1). The format of the parameter <cid> and <cid other> are found in command +CGDCONT.

For PDP context deactivation, the following unsolicited result codes and the corresponding events are defined:

+CGEV: NW PDN DEACT <cid>

The network has deactivated a context. The context represents a PDN connection in NB-IOT. The associated <cid> for this context is provided to the TE. The format of the parameter <cid> is found in command +CGDCONT.

NOTE 2: Occurrence of this event replaces usage of the event

+CGEV: NW DEACT <PDP_type>,<PDP_addr>,[<cid>]

+CGEV: ME PDN DEACT <cid>

The mobile termination has deactivated a context. The context represents a PDN connection in NB-IOT. The <cid> for this context is provided to the TE. The format of the parameter <cid> is found in command +CGDCONT.

NOTE 3: Occurrence of this event replaces usage of the event

+CGEV: ME DEACT <PDP_type>,<PDP_addr>,[<cid>]

For other PDP context handling, the following unsolicited result codes and the corresponding events are defined:

+CGEV: REJECT <PDP_type>,<PDP_addr>

A network request for context activation occurred when the UE was unable to report it to the TE with a +CRING unsolicited result code and was automatically rejected. The format of the parameters <PDP_type> and <PDP_addr> are found in command +CGDCONT.

NOTE 6: This event is not applicable for EPS.

+CGEV: NW REACT <PDP_type>,<PDP_addr>,[<cid>]

The network has requested a context reactivation. The <cid> that was used to reactivate the context is provided if known to the UE. The format of the parameters <PDP_type>,<PDP_addr> and <cid> are found in command +CGDCONT.

NOTE 7: This event is not applicable for EPS.

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	0 buffer unsolicited result codes in the UE; if UE result code buffer is full, the oldest ones can be discarded. No codes are forwarded to the TE. 1 discard unsolicited result codes when UE-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE 2 buffer unsolicited result codes in the UE when UE-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when UE-TE link becomes available; otherwise forward them directly to the TE
<bfr>	0 UE buffer of unsolicited result codes defined within this command is cleared when <mode> 1 or 2 is entered 1 UE buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1 or 2 is entered (OK response shall be given before flushing the codes)
<PDP_addr>	Packet Data Protocol address (see +CGDCONT command)
<cid>	Context Id (see +CGDCONT command) Note: <cid> only given if known to the UE.
<class>	GPRS mobile class (see +CGCLASS command)
<event_type>	Integer type parameter indicates whether this is an informational event or whether the TE has acknowledged it. 0 Informational event 1 Information request: Acknowledgement required. The Acknowledgement can be accept or reject, see AT+CGANS.
<change_reason>	Integer type parameter indicates what kind of change occurred.

	<ul style="list-style-type: none"> 1 TFT only changed 2 QoS only changed 3 Both TFT and QoS changed
<reason>	<p>Integer type parameter indicates the reason why the context activation request for PDP type IPV4V6 was not granted. This parameter is only included if the requested PDP type associated with <cid> is IPV4V6, and the PDP type assign by the network for <cid> is either IPV4 or IPV6</p> <ul style="list-style-type: none"> 0 IPV4 only allowed 1 IPV6 only allowed 2 single address bearers only allowed 3 single address bearers only allowed and MT initiated context activation for a second address type bearer was not successful
<cid_other>	Indicated the context identifier allocated by MT for an MT initiated context of a second address type. MT shall only include this parameter if <reason> parameter indicates single address bearers only allowed, and MT support MT initiated context activation of a second address type without additional commands from the TE, and MT has activated the PDN connection or PDP context associated with <cid_other>.

Example

```
AT+CGEREP=?
+CGEREP: (0-1),(0)
```

OK

```
AT+CGEREP?
+CGEREP: 0,0
```

OK

```
AT+CGEREP=0
OK
```

3.2.41 AT+CGREG Network Registration Status

AT+CGREG Network Registration Status	
Test Command AT+CGREG=?	Response +CGREG: (list of supported <n>s)
	OK
Read Command AT+CGREG?	Response +CGREG: <n>,<stat>[,<lac>,<ci>,<AcT>,<rac>]

	<p>OK If error is related to ME functionality: +CME ERROR: <err></p>
Write Command AT+CGREG=<n>	Response OK or ERROR
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<n>	0 Disable network registration unsolicited result code 1 Enable network registration unsolicited result code +CGREG: <stat> 2 Enable network registration and location information unsolicited result code +CGREG: <stat>[,<lac>,<ci>,<AcT>,<rac>]
<stat>	0 Not registered, MT is not currently searching an operator to register to. 1 Registered, home network. 2 Not registered, but MT is currently trying to attach or searching an operator to register to. 3 Registration denied. 4 Unknown 5 Registered, roaming 6 Registered for "SMS only", home network (applicable only when <Act> indicates E-UTRAN) 7 Registered for "SMS only", roaming (applicable only when <Act> indicates E-UTRAN)
<lac>	String type; two byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)
<ci>	String type; four byte UTRAN/GERAN/E-UTRAN cell ID in hexadecimal format
<AcT>	Access technology of the registered network 9 NB-IoT
<rac>	String type; one byte routing area code in hexadecimal format

Example

```
AT+CGREG=?
+CGREG: (0-2)
```

OK
AT+CGREG?
+CGREG: 0,2

OK
AT+CGREG=2
OK

3.2.42 AT+CGCONTRDP PDP Context Read Dynamic Parameters

AT+CGCONTRDP	PDP Context Read Dynamic Parameters
Test Command AT+CGCONTRDP=?	Response +CGCONTRDP: (list of <cid>s associated with active contexts) OK or OK
Write Command AT+CGCONTRDP=[<cid>]	Response +CGCONTRDP: <cid>,<bearer_id>,<apn>[,<local address and subnet mask>[,<gw_addr>[,<DNS_prim_addr>[,<DNS_sec_addr>[,<P_C SCF_prim_addr>[,<P_CSCF_sec_addr>[,<IM_CN_Signalling_Flag >[,<LIPA_indication>[,<IPv4_MTU>[,<WLAN_Offload>[,<Local_A ddr_Ind>[,<Non-IP_MTU>[,<Serving_PLMN_rate_control_value>]]]]]]]]]]]]] [<CR><LF>+CGCONTRDP: <cid>,<bearer_id>,<apn>[,<local address and subnet mask>[,<gw_addr>[,<DNS_prim_addr>[,<DNS_sec_addr>[,<P_C SCF_prim_addr>[,<P_CSCF_sec_addr>[,<IM_CN_Signalling_Flag >[,<LIPA_indication>[,<IPv4_MTU>[,<WLAN_Offload>[,<Local_A ddr_Ind>[,<Non-IP_MTU>[,<Serving_PLMN_rate_control_value>]]]]]]]]]]] [...]]] OK or OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<cid>	A numeric parameter which specifies a particular primary PDP context definition. The parameter is local to the TE-UE interface and is used in other PDP context-related commands.
<bearer_id>	A numeric parameter which identifies the bearer, EPS Bearer in EPS and NSAPI in UMTS/GPRS.
<APN>	A string parameter which is a logical name that was used to select the GGSN or the external packet data network.
<local address and subnet mask>	A string parameter which shows the IP Address and subnet mask of the UE. The string is given as dot-separated numeric (0-255) parameters on the form: "a1.a2.a3.a4.m1.m2.m3.m4" for IPv4 or "a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16.m1.m2.m3. m4.m5.m6.m7.m8.m9.m10.m11.m12.m13.m14.m15.m16", for IPv6.
<gw_addr>	A string parameter which shows the Gateway Address of the UE. The string is given as dot-separated numeric (0-255) parameters.
<DNS_prim_addr>	A string parameter which shows the IP Address of the primary DNS Server.
<DNS_sec_addr>	A string parameter which shows the IP address of the secondary DNS Server.
<IPv4_MTU>	Integer type; show the IPv4 MTU size in octets.
<Non-IP_MTU>	Integer type; show the Non-IP MTU size in octets.
<Serving_PLMN_rate_control_value>	Integer type; indicates the maximum number of uplink messages the UE is allowed to send in a 6-minute interval. This refers to octet 3 to 4 of the Serving PLMN rate control IE as specified in 3GPP TS 24.301 sub-clause 9.9.4.28.

Example

```
AT+CGREG=?
+CGREG: (0-2)
```

OK

```
AT+CGREG?
+CGREG: 0,2
```

OK

```
AT+CGREG=2
OK
```

NOTE

- <P_CSCF_prim_addr>,<P_CSCF_sec_addr>,<IM_CN_Signalling_Flag>,<LIPA_indication>,<WLAN_Offload>,<Local_Addr_Ind> are not displayed for MTK NB-IOT solution.

3.2.43 AT+CGPIAF Printing IP Address Format

AT+CGPIAF Printing IP Address Format	
Test Command AT+CGPIAF=?	Response +CGPIAF: (list of supported <IPv6_AddressFormat>s),(list of supported <IPv6_SubnetNotation>s),(list of supported <IPv6_LeadingZeros>s),(list of supported <IPv6_CompressZeros>s) OK
Read Command AT+CGPIAF?	Response +CGPIAF: <IPv6_AddressFormat>,<IPv6_SubnetNotation>,<IPv6_LeadingZeros>,<IPv6_CompressZeros> OK or +CME ERROR: <err>
Write Command AT+CGPIAF=[IPv6_AddressFormat],[<IPv6_SubnetNotation>,[<IPv6_LeadingZeros>,[<IPv6_CompressZeros>]]]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<IPv6_AddressFormat>	Integer type, decides the IPV6 address format. Relevant for all AT command parameters that can hold an IPV6 address. 0 Use IPV4-like dot-notation. IP address, and Subnetwork mask if applicable, are dot-separated.
-----------------------------------	--

	<p>Example:</p> <p>For <source address and subnet mask>: "32.1.13.184.0.0.205.48.0.0.0.0.0.0.0.0.255.255.255.255.255.255 .240.0.0.0.0.0.0.0"</p> <p>For other IP address parameters: "32.1.13.184.0.0.205.48.0.0.0.0.0.0.0.0.0"</p> <p>1 Use IPV6-like colon notation. IP address, and subnetwork mask if applicable and when given explicitly, are separated by a space.</p> <p>Example:</p> <p>For <source address and subnet mask>: "2001:0DB8:0000:CD30:0000:0000:0000:0000 FFFF: FFFF:FFFF:FFF0:0000:0000:0000:0000"</p> <p>For other IP address parameters: "2001:0DB8:0000:CD80:0000:0000:0000:0000"</p>
<IPv6_SubnetNotation>	<p>Integer type, decides the subnet-notation for <source Address and subnet mask>. Setting does not apply</p> <p>If <IPV6_AddressFormat>=0.</p> <p>0 Both IP Address and subnet mask are stated. Explicitly, separated by a space. (Example: "2001:0DB8:0000:CD30:0000:0000:0000:0000 FFFF: FFFF:FFFF:FFF0:0000:0000:0000:0000")</p> <p>1 The printout format is applying / (forward slash) subnet-prefix Classless Inter-Domain Routing (CIDR) notation. (Example: "2001:0DB8:0000:CD30:0000:0000:0000:0000/60")</p>
<IVv6_LeadingZeros>	<p>Integer type, decides whether leading zeros are omitted or not. Setting does not apply if <IPV6_AddressFormat>=0.</p> <p>0 Leading zeros are omitted. (Example: "2001:DB8:0:CD30:0:0:0:0")</p> <p>1 Leading zeros are included. (Example: "2001:0DB8:0000:CD30:0000:0000:0000:0000")</p>
<IPv6_CompressZeros>	<p>Integer type, decides whether 1-n instances of 16 bit zero-values are replaced by only "...". This applies only once. Setting does not apply if <IPV6_AddressFormat>=0.</p> <p>0 No zero compression. (Example: "2001:DB8:0:CD30:0:0:0:0")</p> <p>1 Use zero compression. (Example: "2001:DB8:0:CD30::")</p>

Example

```
AT+CGPIAF=?  

+CGPIAF: (0,1),(0,1),(0,1),(0,1)
```

OK

```
AT+CGPIAF?  

+CGPIAF: 0,0,0,0
```

```
OK
AT+CGPIAF=0,0,0,0
OK
```

3.2.44 AT+CGDEL Delete Non-Active PDP Contexts

AT+CGDEL Delete Non-Active PDP Contexts	
Test Command AT+CGDEL=?	Response OK
Write Command AT+CGDEL=[<cid>]	Response +CGDEL: <cid>[,<cid>[,...]] OK If error is related to wrong AT syntax: +CME ERROR: <err>
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<cid>	A numeric parameter which specifies a particular PDP context definition.
--------------------	--

3.2.45 AT+CGAUTH Define PDP Context Authentication Parameters

AT+CGAUTH Define PDP Context Authentication Parameters	
Test Command AT+CGAUTH=?	Response +CGAUTH: (range of supported <cid>s),(list of supported <auth_prot>s),(range of supported <userid>s),(range of supported <password>s) OK
Read Command AT+CGAUTH?	Response [+CGAUTH: <cid>,<auth_prot>,<userid>,<password>][<CR><LF>+CGAUTH: <cid>,<auth_prot>,<userid>,<password> [...]]

	OK
Write Command AT+CGAUTH=<cid>[,<auth_prot>[,<userid>[,<password>]]]	Response When <auth_prot>/<username>/<password> set: OK When no <auth_prot>/<username>/<password> set displays current auth_prot username and password for <cid>: +CGAUTH: <cid>,<auth_prot>,<username>,<password>
	OK
	If error is related to wrong AT syntax: +CME ERROR: <err>
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<cid>	A numeric parameter which specifies a particular PDP context definition (see the +CGDCONT and +CGDSCONT commands).
<auth_prot>	Numeric parameter. Authentication protocol used for this PDP context. 0 None. Used to indicate that no authentication protocol is used for this PDP context. Username and password are removed if previously specified. 1 PAP
<userid>	String type. User name for access to the IP network.
<password>	String type. Password for access to the IP network.

3.2.46 AT*MCGDEFCONT Set Default PSD Connection Settings

AT*MCGDEFCONT Set Default PSD Connection Settings	
Test Command AT*MCGDEFCONT=?	Response *MCGDEFCONT: (list of supported <PDP_type>)
	OK
Read Command AT*MCGDEFCONT?	Response *MCGDEFCONT: <PDP_type>[,<APN>,<username>,<password>]
	OK
Write Command AT*MCGDEFCONT=<PDP_type>[,<APN>[,<username>[,	Response OK If error is related to wrong AT syntax:

<password>]]	+CME ERROR: <err>
Parameter Saving Mode	AUTO_SAVE_REBOOT
Max Response Time	-
Reference	

Defined Values

<PDP_type>	(Packet Data Protocol type) a string parameter which specifies the type of packet data protocol: IP Internet Protocol (IETF STD 5) IPV6 Internet Protocol, version 6 (IETF RFC 2460) IPV4V6 Virtual <PDP_type> introduced to handle dual IP stack UE capability(see 3GPP TS 24.301). Non-IP Transfer of Non-IP data to external packet data Network (see 3GPP TS 24.301).
<APN>	(Access Point Name) a string parameter that is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested.
<username>	String value. Username for the connection to the service provider.
<password>	String value. Password for the connection to the service provider

3.2.47 AT+CEREG EPS Network Registration Status

AT+CEREG EPS Network Registration Status	
Test Command AT+CEREG=?	Response +CEREG: (list of supported <n>s) OK
Read Command AT+CEREG?	Response when <n>=0, 1, 2 or 3 and command successful: +CEREG: <n>,<stat>[,[<tac>],[<ci>],[<AcT>],[<cause_type>],<reject_cause>]]] when <n>=4 or 5 and command successful: +CEREG: <n>,<stat>[,[<tac>],[<ci>],[<AcT>],[,[<cause_type>],[<reject_cause>][,[<Active-Time>],[<Periodic-TAU>]]]] If error is related to wrong AT syntax or operation not allowed: +CME ERROR: <err>
Write Command AT+CEREG=<n>	Response OK If error is related to wrong AT syntax: +CME ERROR: <err>

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	<p>0 Disable network registration unsolicited result code 1 Enable network registration unsolicited result code +CEREG: <stat> 2 Enable network registration and location information unsolicited result code +CEREG: <stat>[,,<tac>],[<ci>],[<AcT>]] 3 Enable network registration, location information and EMM cause value information unsolicited result code +CEREG: <stat>[,,<tac>],[<ci>],[<AcT>][,]<cause_type>,<reject_cause>]] 4 For a UE that wants to apply PSM, enable network registration and location information unsolicited result code +CEREG: <stat>[,,<tac>],[<ci>],[<AcT>][,][,<Active-Time>],[<Periodic-TAU>]]]] 5 For a UE that wants to apply PSM, enable network registration, location information and EMM cause value information unsolicited result code +CEREG: <stat>[,,<tac>],[<ci>],[<AcT>][,][<cause_type>],[<reject_cause>][,[<Active-Time>],[<Periodic-TAU>]]]]</p>
<stat>	<p>EPS registration status</p> <p>0 Not registered, ME is not currently searching a new operator to register to 1 Registered, home network 2 Not registered, but ME is currently searching for a new operator to register to 3 Registration denied 4 Unknown 5 Registered, roaming 6 Registered for "SMS only", home network (applicable only when <Act> indicates NB-IOT) 7 Registered for "SMS only", roaming (applicable only when <Act> indicates NB-IOT)</p> <p>100 Network has been found but attach is pended,ME is waiting for AT+CGATT=1 to perform attach procedure</p>
<tac>	String type; two byte tracking area code in hex decimal format (e.g. "00C3" equals 195 in decimal).
<ci>	String type; four byte GERAN/UTRAN/E-UTRAN cell ID in hexadecimal format

<AcT>	Access technology of the registered network 9 NB-IoT
<cause_type>	Integer type; indicates the type of <reject_cause> 0 Indicates that <reject_cause> contains an EMM cause value, see 3GPP TS 24.301 Annex A . 1 Indicates that <reject_cause> contains a manufacturer-specific cause.
<reject_cause>	Integer type; contains the cause of the failed registration. The value is of type as defined by <cause_type>.
<Active-Time>	String type; one byte in an 8-bit format. Indicates the Active Time value (T3324) allocated to the UE in E-UTRAN. The Active Time value is coded as one byte (octet 3) of the GPRS Timer 2 information element coded as bit format (e.g. "00100100" equals 4 minutes). For the coding and the value range, see the GPRS Timer 2 IE in 3GPP TS 24.008 Table 10.5.163/ 3GPP TS 24.008 . See also 3GPP TS 23.682 and 3GPP TS 23.401 .
<Periodic-TAUs>	String type; one byte in an 8-bit format. Indicates the extended periodic TAU value (T3412) allocated to the UE in E-UTRAN. The extended periodic TAU value is coded as one byte (octet 3) of the GPRS Timer 3 information element coded as bit format (e.g. "01000111" equals 70 hours). For the coding and the value range, see the GPRS Timer 3 IE in 3GPP TS 24.008 , Table 10.5.163a/ 3GPP TS 24.008 . See also 3GPP TS 23.682 and 3GPP TS 23.401 .

Example

```
AT+CEREG=?
+CGREG: (0-5)
```

OK

```
AT+CEREG?
+CGREG: 0,0
```

OK

```
AT+CEREG=0
OK
```

NOTE

- For NB-IoT product, only <AcT> value of 9 is valid.

3.2.48 AT+CGDATA Enter Data State

AT+CGDATA Enter Data State	
Test Command AT+CGDATA=?	Response +CGDATA: (list of supported <L2P>s) OK
Write Command AT+CGDATA=[<L2P>[,<cid>[,<cid>[,...]]]]	Response OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<L2P>	A string parameter that indicates the layer 2 protocol to be used between the TE and MT. M-PT Packet Transport Mechanism protocol for a PDP such as IP Other values are not supported and will result in an ERROR response to the write command.
<cid>	A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command).

NOTE

- The command will enter data state once the PDP context has been activated <L2P> value M-PT is MTK proprietary and represents no <L2P> but raw IP packet transfer.

3.2.49 AT*MGCOUNT GPRS/Packet Domian Packet Counters

AT*MGCOUNT GPRS/Packet Domain Packet Counters	
Test Command AT*MGCOUNT=?	Response *MGCOUNT: (list of supported <actions>s),(list of supported <cid>s),(list of supported <period>s) OK

Read Command AT*MGCOUNT?	Response *MGCOUNT: <cid>,<state>[,<period>][<CR><LF>]*MGCOUNT: <cid>,<state>[,<period>][...]]
	OK
Write Command AT*MGCOUNT=<action>,<ci d>[,<period>]	Response OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<action>	indicates the action to be performed 0 reset counter for specified <cid> 1 read counter for specified <cid> 2 start reporting counter periodically for specified <cid> defined by <period>. Counter is also reported on context deactivation. 3 report counter on context deactivation for specified <cid> 4 stop reporting counter on specified <cid>
<cid>	a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)
<period>	period for periodic packet counter reporting in seconds Unsolicited Result Once a counter has been setup for a <cid> the counter will be displayed as Following either periodically or when the context has been deactivated: *MGCOUNT: <cid>,<uc>,<uu>,<un>,<dc>,<du>,<dn>
<uc>	A numeric 32 bit parameter which indicates the number of compressed bytes transferred in the uplink direction displayed in decimal format
<uu>	A numeric 32 bit parameter which indicates the number of uncompressed bytes transferred in the uplink direction displayed in decimal format
<un>	A numeric 32 bit parameter which indicates the number of N-PDUs (i.e. IP packets) transferred in the uplink direction displayed in decimal format
<dc>	A numeric 32 bit parameter which indicates the number of compressed bytes transferred in the downlink direction displayed in decimal format
<du>	A numeric 32 bit parameter which indicates the number of uncompressed bytes transferred in the downlink direction displayed in decimal format

	decimal format
<dn>	A numeric 32 bit parameter which indicates the number of N-PDUs (i.e. IP packets) transferred in the downlink direction displayed in decimal format Note that the current counter values will be displayed immediately this command is entered for any action (i.e. even stopping the counter display will generate the above unsolicited result code for the cancelled <cid>).

NOTE

- This command displays byte and IP packet counters for PDP contexts. It is proprietary to MediaTek.
- If counters are displayed periodically, they will only be displayed if: there is a separate multiplexer channel for unsolicited result codes, or the user switches to command mode using the “+++” escape sequence Entering <action> range 0 to 3 will lock the counter for the specified <cid> to the channel on which the AT command was entered. Entering <action> of 4 will unlock the counter for the specified <cid> from the channel on which the AT command was entered.

4 AT Commands According to 3GPP TS 27.005

The 3GPP TS 27.005 commands are for performing SMS and CBS related operations for both Text and PDU modes.

4.1 Overview of AT Commands According to 3GPP TS 27.005

Command	Description
AT+CMGD	Delete SMS message
AT+CMGF	Select SMS message format
AT+CMGL	List SMS messages from preferred store
AT+CMGR	Read SMS message
AT+CMGS	Send SMS message
AT+CMGW	Write SMS message to memory
AT+CMSS	Send SMS message from storage
AT+CMGC	Send SMS Command
AT+CNMI	New SMS message indications
AT+CPMS	Preferred SMS message storage
AT+CSCA	SMS service center address
AT+CSDH	Show SMS text mode parameters
AT+CSMP	Set SMS text mode parameters
AT+CSMS	Select message service
AT+CNMA	New SMS Message Acknowledgment

4.2 Detailed Description of AT Commands According to 3GPP TS 27.005

4.2.1 AT+CMGD Delete SMS Message

AT+CMGD Delete SMS Message

Test Command AT+CMGD=?	Response +CMGD: (list of supported <index>s)
	OK
Write Command AT+CMGD=<index>[,<delflag>]	Response TA deletes message from preferred message storage <mem1> location <index>. OK or ERROR If error is related to ME functionality: +CMS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	5s (delete 1 message) 25s (delete 50 messages) 25s (delete 150 messages)
Reference	

Defined Values

<index>	Integer type; value in the range of location numbers supported by the associated memory, This value is only used if <DelFlag>=0.										
<delflag>	<table> <tr> <td>0</td> <td>Delete message at location <index> (Default value)</td> </tr> <tr> <td>1</td> <td>Delete all read messages</td> </tr> <tr> <td>2</td> <td>Delete all READ and SENT messages</td> </tr> <tr> <td>3</td> <td>Delete all READ, SENT and UNSENT messages</td> </tr> <tr> <td>4</td> <td>Delete all messages</td> </tr> </table>	0	Delete message at location <index> (Default value)	1	Delete all read messages	2	Delete all READ and SENT messages	3	Delete all READ, SENT and UNSENT messages	4	Delete all messages
0	Delete message at location <index> (Default value)										
1	Delete all read messages										
2	Delete all READ and SENT messages										
3	Delete all READ, SENT and UNSENT messages										
4	Delete all messages										

Example

```
AT+CGMD=?
+CMGD: (1-50)
```

```
OK
AT+CGMD=0
OK
```

NOTE

- When the MT2625 software has concatenated SMS handling in modem enabled (see AT command AT*MFTRCFG) the user can delete a concatenated text SMS up to 1024 characters in length. A concatenated SMS is stored on the SIM as number of smaller SMSs. (This is not possible when MMI is present).
- When the MT2625 software does not have concatenated SMS handling in the modem enabled, the maximum text SMS length is restricted depending on the data coding scheme (160 for 7-bit, 140 for 8-bit, 80 for 16-bit).
- An attempt to delete anything other than the first segment of a concatenated SMS, when concat SMS is enabled, will result in ERROR response.
Deleting an empty entry will result in OK response rather than ERROR.

4.2.2 AT+CMGF Select SMS Message Format

AT+CMGF Select SMS Message Format

Test Command AT+CMGF=?	Response +CMGF: (list of supported <mode>s)
	OK
Read Command AT+CMGF?	Response +CMGF: <mode>
	OK
Write Command AT+CMGF=[<mode>]	Response TA sets parameter to denote which input and output format of messages to use. OK
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	0 PDU mode 1 Text mode
---------------------	---------------------------

Example

AT+CMGF=?

+CMGF: (0-1)

OK

AT+CMGF=1

OK

AT+CMGF?

+CMGF: 1

OK

4.2.3 AT+CMGL List SMS Message from Preferred Store

AT+CMGL List SMS Message from Preferred Store

Test Command

AT+CMGL=?

Response

+CMGL: (list of supported <stat>s)

OK

Write Command

AT+CMGL=<stat>

Response

TA returns messages with status value <stat> from message storage <mem1> to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.

1) If text mode (+CMGF=1) and Command successful:
for SMS-SUBMITs and/or SMS-DELIVERS:

+CMGL:

<index>,<stat>,<oa/da>[,<alpha>][,<scts>][,<tooa/toda>,<length>]
<CR><LF><data>[<CR><LF>]+CMGL:
<index>,<stat>,<da/oa>[,<alpha>][,<scts>][,<tooa/toda>,<length>]
<CR><LF><data>[...]]

OK

If SMS-STATUS-REPORT and text mode:

+CMGL: <index>,<stat>,<fo>,<mr>,[<ra>],
[<tora>],<scts>,<dt>,<st>[<CR><LF>]+CMGL:
<index>,<stat>,<fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> [...]]

OK

2) If PDU mode (+CMGF=0) and Command successful:

+CMGL:

<index>,<stat>[,<alpha>],<length><CR><LF><pdu><CR><LF>+C

MGL: <index>,<stat>[,alpha],<length><CR><LF><pdu>[...]]

OK

3) If error is related to ME functionality:

+CMS ERROR: <err>

Execution Command

AT+CMGL

1) If text mode:

the same as AT+CMGL="REC UNREAD", received unread messages.

2) If PDU mode:

the same as AT+CMGL=0, received unread messages.

See more messages please refer to Write Command.

Parameter Saving Mode

NO_SAVE

Max Response Time

20s(list 50 messages)

20s(list 150 messages)

Reference

Defined Values

<stat>	If text mode: "REC UNREAD" Received unread messages "REC READ" Received read messages "STO UNSENT" Stored unsent messages "STO SENT" Stored sent messages "ALL" All messages If PDU mode: 0 Received unread messages 1 Received read messages 2 Stored unsent messages 3 Stored sent messages 4 All messages
<alpha>	String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific
<da>	3GPP 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters; type of address given by <toda>
<data>	In the case of SMS: 3GPP 23.040 TP-User-Data in text mode responses; format: if <dcs> indicates that 3GPP 23.038 default alphabet is used and <fo> indicates that 3GPP 23.040 TP-User-Data-Header-Indication is not set: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A if <dcs> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that 3GPP 23.040 TP-User-Data-Header-Indication is

	<p>set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))</p> <p>In the case of CBS: 3GPP 23.041 CBM Content of Message in text mode responses; format:</p> <p>if <dcs> indicates that 3GPP 23.038 default alphabet is used: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A.</p> <p>if <dcs> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number.</p>
<length>	Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<index>	Integer type; value in the range of location numbers supported by the associated memory
<oa>	3GPP 23.040 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters; type of address given by <tooa>
<pdu>	In the case of SMS: 3GPP 24.011 SC address followed by 3GPP 23.040 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: 3GPP 23.041 TPDU in hexadecimal format.
<scts>	3GPP 23.040 TP-Service-Center-Time-Stamp in time-string format (refer <dt>)
<toda>	3GPP 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<tooa>	3GPP 24.011 TP-Originating-Address Type-of-Address octet in integer format (default refer<toda>)

Example

```

AT+CMGL=?                                         //PDU mode
+CMGL: (0-4)

OK
AT+CMGL=?                                         //Text mode
+CMGL: ("REC UNREAD","REC READ","STO UNSENT","STO
SENT","ALL")

```

OK

AT+CMGL=4

+CMGL: 1,2,,18

0891683108200105F011640B813118662902F40011A70441E19008

+CMGL: 2,2,,19

0891683108200105F011000D91683118662902F40018010400410042

OK

4.2.4 AT+CMGR Read SMS Message

AT+CMGR Read SMS Message

Test Command

AT+CMGR=?

Response

OK

Write Command

AT+CMGR=<index>

Response

TA returns SMS message with location value <index> from message storage <mem1> to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.

If text mode (+CMGF=1) and command successful:

for SMS-DELIVER:

+CMGR:

<stat>,<oa>,[<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data>

OK

for SMS-SUBMIT:

+CMGR:

<stat>,<da>,[<alpha>][,<toda>,<fo>,<pid>,<dcs>,[<vp>],<sca>,<tosca>,<length>]<CR><LF><data>

OK

If SMS-STATUS-REPORT and text mode:

+CMGR: <stat>,<fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st>

OK

If PDU mode (+CMGF=0) and command successful:

+CMGR: <stat>,[<alpha>],<length><CR><LF><pdu>

OK

If error is related to ME functionality:

+CMS ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time	5s
Reference	

Defined Values

<index>	Integer type; value in the range of location numbers supported by the associated memory
<alpha>	String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific
<da>	3GPP 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters; type of address given by <toda>
<data>	In the case of SMS: 3GPP 23.040 TP-User-Data in text mode responses; format: if <dcs> indicates that 3GPP 23.038 default alphabet is used and <fo> indicates that 3GPP 23.040 TP-User-Data-Header-Indication is not set: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A if <dcs> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that 3GPP 23.040 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) In the case of CBS: 3GPP 23.041 CBM Content of Message in text mode responses; format: if <dcs> indicates that 3GPP 23.038 default alphabet is used: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A. if <dcs> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number.
<dcs>	Depending on the command or result code: 3GPP 23.038 SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format.
<fo>	Depending on the command or result code: first octet of 3GPP 23.040 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format
<length>	Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mid>	3GPP 23.041 CBM Message Identifier in integer format
<oa>	3GPP 23.040 TP-Originating-Address Address-Value field in string

	format; BCD numbers (or GSM default alphabet characters) are converted characters of the currently selected TE character set (specified by +CSCS); type of address given by <tooa>.
<pdu>	In the case of SMS: 3GPP 24.011 SC address followed by 3GPP 23.040 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: 3GPP 23.041 TPDU in hexadecimal format.
<sca>	3GPP 24.011 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS); type of address given by <tosca>
<scts>	3GPP 23.040 TP-Service-Centre-Time-Stamp in time-string format (refer <dt>)
<stat>	0 "REC UNREAD" Received unread messages 1 "REC READ" Received read messages 2 "STO UNSENT" Stored unsent messages 3 "STO SENT" Stored sent messages 4 "ALL" All messages
<toda>	3GPP 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<tooa>	3GPP 24.011 TP-Originating-Address Type-of-Address octet in integer format (default refer <toda>)
<tosca>	3GPP 24.011 RP SC address Type-of-Address octet in integer format (default refer <toda>)
<vp>	Depending on SMS-SUBMIT <fo> setting: 3GPP 23.040 TP-Validity-Period either in integer format (default 167) or in time-string format (refer <dt>)
<mr>	Message reference. Integer format.
<ra>	Recipient address. String type.
<tora>	Type of address of <ra>. 145 International number 129 National number
<dt>	Discharge time. String format: "yy/MM/dd,hh:mm:ss+/-zz" (Year/Month/Dat,Hour:Seconds+/TimeZone)
<st>	Status of an SMS-STATUS-REPORT. Integer format.

Example

AT+CMGR=?

OK

AT+CMGR=1

+CMGR: "STO UNSENT","13816692204",

ABCD

OK

4.2.5 AT+CMGS Send SMS Message

AT+CMGS Send SMS Message

Test Command	Response
AT+CMGS=?	OK
Write Command 1) If text mode (+CMGF=1): +CMGS=<da>[,<toda>] <CR>text is entered <ctrl-Z/ESC> ESC quits without sending	Response TA sends message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery. Optionally (when +CSMS <service> value is 1 and network supports) <scts> is returned. Values can be used to identify message upon unsolicited delivery status report result code. 1) If text mode(+CMGF=1) and sending successful: +CMGS: <mr>
2) If PDU mode (+CMGF=0): +CMGS=<length> <CR>PDU is given <ctrl-Z/ESC>	OK 2) If PDU mode(+CMGF=0) and sending successful: +CMGS: <mr> OK 3) If error is related to ME functionality: +CMS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	60s
Reference	

Defined Values

<da>	3GPP 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS); type of address given by <toda>
<toda>	3GPP 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<length>	Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP

	layer SMSC address octets are not counted in the length)
<mr>	3GPP 23.040 TP-Message-Reference in integer format

Example

```
AT+CMGS=?  
OK  
AT+CMGS="13816692204"  
> 451212SFACDS#4  
+CMGS: 213  
  
OK
```

4.2.6 AT+CMGW Write SMS Message to Memory

AT+CMGW Write SMS Message to Memory	
Test Command	Response
AT+CMGW=?	OK
Write Command	Response
1) If text mode (+CMGF=1): AT+CMGW=<oa/da>[,<tooa/oda>][,<stat>] <CR> text is entered <ctrl-Z/ESC> <ESC> quits without sending	TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsent', but parameter <stat> allows also other status values to be given. If writing is successful: +CMGW: <index>
2) If PDU mode (+CMGF=0): AT+CMGW=<length>[,<stat>] <CR>PDU is given <ctrl-Z/ESC>	OK If error is related to ME functionality: +CMS ERROR: <err>
Execution Command	Response
AT+CMGW	TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsent', but parameter <stat> allows also other status values to be given. If writing is successful: +CMGW: <index>

	OK If error is related to ME functionality: +CMS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	5s
Reference	

Defined Values

<oa>	3GPP 23.040 TP-Originating-Address Address-Value field in string format(string should be included in quotation marks); BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS); type of address given by <tooa>
<da>	3GPP 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS); type of address given by <toda>
<tooa>	3GPP 24.011 TP-Originating-Address Type-of-Address octet in integer format (default refer <toda>)
<toda>	3GPP 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<length>	Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<pdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.
<index>	Index of message in selected storage <mem2>

4.2.7 AT+CMSS Send SMS Message From Storage

AT+CMSS Send SMS Message From Storage	
Test Command AT+CMSS=?	Response OK
Write Command AT+CMSS=<index>[,<da>,<t	Response TA sends message with location value <index> from message storage

[oda>]

<mem2> to the network (SMS-SUBMIT). If new recipient address <da> is given, it shall be used instead of the one stored with the message. Reference value <mr> is returned to the TE on successful message delivery. Values can be used to identify message upon unsolicited delivery status report result code.

1) If text mode(+CMGF=1) and sending successful:

+CMSS: <mr>

OK

2) If PDU mode(+CMGF=0) and sending successful:

+CMSS: <mr>

OK

3) If error is related to ME functionality:

+CMS ERROR: <err>

Parameter Saving Mode	NO_SAVE
Max Response Time	60s
Reference	

Defined Values

<index>	Integer type; value in the range of location numbers supported by the associated memory
<da>	3GPP 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS); type of address given by <toda>
<toda>	3GPP 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<toda>	3GPP 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<mr>	3GPP 23.040 TP-Message-Reference in integer format

4.2.8 AT+CMGC Send SMS Command

AT+CMSS Send SMS Command

Test Command	Response
AT+CMGC=?	OK
Execute command	Response

1) If text mode (+CMGF=1):

AT+CMGC=<fo>,<ct>[<pid>[<mn>[,<da>[,<toda>]]]]]<CR>

text is entered

<ctrl-Z/ESC>

ESC quits without sending

2) If PDU mode (+CMGF=0):

AT+CMGC=<length><CR>

PDU is given <ctrl-Z/ESC>

TA transmits SMS Command message from a TE to the network (SMS-COMMAND). Message reference value <mr> is returned to the TE on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code.

If text mode (+CMGF=1) and sending successful:

+CMGC: <mr>

OK

If PDU mode (+CMGF=0) and sending successful:

+CMGC: <mr>

OK

If error is related to ME functionality:

+CMS ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

60s

Reference

Defined Values

<fo>	First octet of 3GPP 23.040 SMS-COMMAND (default 2) in integer format
<ct>	3GPP 23.040 TP-Command-Type in integer format (default 0)
<pid>	3GPP 23.040 TP-Protocol-Identifier in integer format (default 0)
<mn>	3GPP 23.040 TP-Message-Number in integer format
<da>	3GPP 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS); type of address given by <toda>
<toda>	3GPP 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<length>	Integer type value indicating in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mr>	3GPP 23.040 TP-Message-Reference in integer format

4.2.9 AT+CNMI New SMS Message Indications

AT+CNMI New SMS Message Indications

Test Command AT+CNMI=?	Response +CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s)
	OK
Read Command AT+CNMI?	Response +CNMI: <mode>,<mt>,<bm>,<ds>,<bfr>
	OK
Write Command AT+CNMI=<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]]	Response TA selects the procedure for how the receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in 3GPP 23.038. OK or ERROR
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	<ul style="list-style-type: none"> 0 Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications. 1 Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE. 2 Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE. 3 Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode.
<mt>	<p>(the rules for storing received SMs depend on its data coding scheme (refer 3GPP 23.038 [2]), preferred memory storage (+CPMS) setting and this value):</p> <ul style="list-style-type: none"> 0 No SMS-DELIVER indications are routed to the TE. 1 If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CMTI: <mem>,<index>

	<p>2 SMS-DELIVERs (except class 2) are routed directly to the TE using unsolicited result code: +CMT: [<alpha>],<length><CR><LF><pdu> (PDU mode enabled) or +CMT: <i><oa>,[<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data></i> (text mode enabled; about parameters in italics, refer Command Show Text Mode Parameters +CSDH). Class 2 messages result in indication as defined in <mt>=1.</p> <p>3 Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in <mt>=2. Messages of other classes result in indication as defined in <mt>=1.</p>
<bm>	(the rules for storing received CBMs depend on its data coding scheme (refer 3GPP 23.038 [2]), the setting of Select CBM Types (+CSCB) and this value): <u>0</u> No CBM indications are routed to the TE
<ds>	<u>0</u> No SMS-STATUS-REPORTs are routed to the TE. 1 SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled) or +CDS: <fo>,<mr>[,<ra>][,<tora>],<scts>,<dt>,<st> (text mode enabled) 2 SMS status reports are stored and indication of memory location routed to TE using unsolicited result +CDSI: "SR",<index>
<bfr>	<u>0</u> TA buffer of unsolicited result codes defined within this Command is flushed to the TE when <mode> 1...3 is entered (OK response shall be given before flushing the codes). 1 TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1...3 is entered
<mem>	Memory storage (for +CMTI and +CBMI indications) <u>"SM"</u> SMS message storage in SIM <u>"SR"</u> status report message storage (in SIM if EF-SMR file present) or in MMI NVRAM if MMI present.
<index>	Integer type indicating storage location (for +CMTI and +CBMI indications)

NOTE

- CB messages are not supported for NB-IoT.

4.2.10 AT+CPMS Preferred SMS Message Storage

AT+CPMS Preferred SMS Message Storage

Test Command AT+CPMS=?	Response +CPMS: (list of supported <mem1>s),(list of supported <mem2>s),(list of supported <mem3>s) OK
Read Command AT+CPMS?	Response +CPMS: <mem1>,<used1>,<total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3> OK or ERROR
Write Command AT+CPMS=<mem1>[,<mem2>[,<mem3>]]	Response TA selects memory storages <mem1>,<mem2> and <mem3> to be used for reading, writing, etc. +CPMS: <used1>,<total1>,<used2>,<total2>,<used3>,<total3> OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mem1>	Messages to be read and deleted from this memory storage "SM" SIM message storage "SR" Status Report message storage (EF-SMR if available on SIM). SR in SIM are only associated with SMSs stored on SIM. If EF-SMR not available and MMI is present then status reports are stored in NVRAM. In addition MMI can store status reports in NVRAM as well as ones stored on SIM (EF-SMR file), if available.
<mem2>	Messages will be written and sent to this memory storage "SM" SIM message storage
<mem3>	Received messages will be placed in this memory storage if routing to PC is not set ("+CNMI") "SM" SIM message storage
<usedx>	Integer type; Number of messages currently in <memx>
<totalx>	Integer type; Number of messages storable in <memx>

4.2.11 AT+CSCA SMS Service Center Address

AT+CSCA SMS Service Center Address	
Test Command AT+CSCA=?	Response OK
Read Command AT+CSCA?	Response +CSCA: <sca>,<tosca>
	OK
Write Command AT+CSCA=<sca>[,<tosca>]	Response TA updates the SMSC address, through which mobile originated SMS are transmitted. In text mode, setting is used by send and writes commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into <pdu> parameter equals zero. Note: The Command writes the parameters in NON-VOLATILE memory. OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	5s
Reference	

Defined Values

<sca>	3GPP 24.011 RP SC address Address-Value field in string format(string should be included in quotation marks); BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS); type of address given by <tosca>
<tosca>	Service center address format 3GPP 24.011 RP SC address Type-of-Address octet in integer format (default refer <toda>)

4.2.12 AT+CSDH Show SMS Text Mode Parameters

AT+CSDH Show SMS Text Mode Parameters	
Test Command	Response

AT+CSDH=?	+CSDH: (list of supported <show>s)
	OK
Read Command AT+CSDH?	Response +CSDH: <show>
	OK
Write Command AT+CSDH=[<show>]	Response TA determines whether detailed header information is shown in text mode result codes. OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<show>	0 Do not show header values defined in commands +CSCA and +CSMP (<sca>,<tosca>,<fo>,<vp>,<pid> and <dcs>) nor <length>,<toda> or <tooa> in +CMT, +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode 1 Show the values in result codes
---------------------	---

4.2.13 AT+CSMP Set SMS Text Mode Parameters

AT+CSMP Set SMS Text Mode Parameters

Test Command AT+CSMP=?	Response OK
Read Command AT+CSMP?	Response +CSMP: <fo>,<vp>,<pid>,<dcs> OK
Write Command AT+CSMP=[<fo>[,<vp>,<pid>,<dcs>]]	Response TA selects values for additional parameters needed when SM is sent to the network or placed in a storage when text mode is selected (+CMGF=1). It is possible to set the validity period starting from when the SM is received by the SMSC (<vp> is in range 0... 255) . OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<fo>	<p>first octet of 3GPP 23.040 SMS-DELIVER, SMS-SUBMIT in integer format. The following fields can be modified:</p> <ul style="list-style-type: none"> TP-Message-Type-Indicator (bits 0-1) (SMS-DELIVER or SMS-SUBMIT) TP-Reject-Duplicates (bit 2) TP-Validity-Period-Format (bits 3-4) TP-Status-Report-Request (bit 5) TP-User-Data-Header-Indicator (bit 6) TP-Reply-Path (bit 7). <p>Default value is 17 (SMS-SUBMIT and Validity Period in relative format)</p> <p>When concatenated SMS is supported by MT2625, attempts to change the following fields from the default will produce an ERROR:</p> <ul style="list-style-type: none"> TP-User-Data-Header-Indicator (bit 6) – the UDHI field is used for concatenated SMSs and is set by the Background Layer where appropriate.
<vp>	3GPP 23.040 TP-Validity-Period in integer format (default 167)
<pid>	3GPP 23.040 TP-Protocol-Identifier in integer format (default 0)
<dcs>	3GPP 23.038 SMS Data Coding Scheme in Integer format (default 0 i.e. 7-bit coding).

NOTE

- The command writes the settings <vp>,<pid> and <dcs> in SIM memory. <fo> field is not stored anywhere.
- On startup, the settings <vp>,<pid> and <dcs> are read from the SIM and used for SMS AT commands. If they cannot be found in the SIM they are set to the default values.
- The <fo> field is always set to the default value at startup.

4.2.14 AT+CSMS Select Message Service

AT+CSMS Select Message Service

Test Command AT+CSMS=?	Response +CSMS: (list of supported <service>s) OK
----------------------------------	--

Read Command AT+CSMS?	Response +CSMS: <service>,<mt>,<mo>,<bm>
	OK
Write Command AT+CSMS=<service>	Response +CSMS: <mt>,<mo>,<bm>
	OK
	If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<service>	0 3GPP 23.040 and 23.041. 1 3GPP 23.040 and 23.041, with a requirement that a message routed directly to TE should be acknowledged via +CNMA. 128 SMS PDU mode - TPDU only used for sending/receiving SMSs
<mt>	Mobile Terminated Messages: 0 Type not supported 1 Type supported
<mo>	Mobile Originated Messages: 0 Type not supported 1 Type supported
<bm>	Broadcast Type Messages: 0 Type not supported

NOTE

- <service> value 128 is MediaTek proprietary
- <bm> message type is not supported

4.2.15 AT+CNMA New Message Acknowledgement to ME/TA

AT+CNMA New Message Acknowledgement to ME/TA	
Test Command AT+CNMA=?	Response

	<p>If PDU mode (+CMGF=0): +CNMA: (list of supported <n>s)</p> <p>OK</p> <p>If Text mode (+CMGF=1): OK</p>
Write Command AT+CNMA[=<n>[,<length[<C R> PDU is entered <CTRL-Z/ESC>]]]	<p>Response</p> <p>After SMS is routed to the TA (based on message class and +CNMI settings as defined in 27.005), TA sends acknowledgement command to the network. Note: this functionality shall be used only when +CSMS parameter <service> equals 1.</p> <p>If command is executed but no acknowledgement is expected, or some other error ME related error occurs: +CMS ERROR: <err></p> <p>If PDU mode (+CMGF=0): OK</p> <p>If Text mode (+CMGF=1): ERROR</p>
Execution Command AT+CNMA	<p>Response</p> <p>OK</p> <p>If command is executed but no acknowledgement is expected, or some other error ME related error occurs: +CMS ERROR: <err></p>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	<p>0 Operates similarly as defined for text mode (if ME doesn't get acknowledgement within required time, ME should respond as specified in 3GPP 24.011, and ME shall automatically disable routing to TE setting both <mtr> and <ds>values of CNMI to zero).</p> <p>1 Send positive acknowledgement to the network with optional PDU message</p> <p>2 Send negative acknowledgement to the network with optional PDU message</p>
<length>	Length of the optional PDU message. Integer type

5 AT Commands Special for SIMCom

5.1 Overview of AT Commands for SIMCom

Command	Description
AT+CPOWD	Power off
AT+CADC	Read ADC
AT+CLTS	Get local timestamp
AT+CBAND	Get and set mobile operation band
AT+CBANDSL	Set modem NB-IOT search prefer band list
AT+CENG	Switch on or off engineering mode
AT+CCID	Show ICCID
AT+EXUNSOL	Enable or disable proprietary unsolicited indications
AT+GSV	Display product identification information
AT*CELLLOCK	Set the list of ARFCN which needs to be locked
AT+SLEDS	Set the timer period of net light
AT+CNETLIGHT	Close the net light or open it to shining
AT+CSMINS	SIM inserted status reporting
AT+CSPCHSC	Set Scrambling Algorithm for NPDSCH
AT+CPSMSTATUS	Enable Deep Sleep Wakeup Indication
AT+CSCLK	Configure Slow Clock
AT+CRESET	Trigger WDT Reset
AT+CREVHEX	Control the Data Output Format
AT+CDISAUPDN	Control the Auto PDN Status
AT+CNWRCCFG	Network Recovery Configure
AT+CURTC	Control CCLK Show UTC Or RTC Time
AT+CHOMENW	Display Home Network Information
AT+CBATCHK	Set VBAT checking feature ON/OFF
AT+CGPIO	Control the GPIO by PIN index
AT*MEDRXCFG	eDRX configuration
AT+CNBIOTDT	NB-IOT Data Type
AT+CNBIOTRAI	NB-IOT Release Assistance Indication
AT+ICCID	Show ICCID
AT+CTRJ	Inquire the Value of Timer 3346
AT+NIDD	Send NIDD(Non-IP Data Delivery)

AT+CFGRI

Indicate RI When Using URC

5.2 Detailed Description of AT Commands Special for SIMCom

5.2.1 AT+CPOWD Power Off

AT+CPOWD Power Off

Write Command	Response
AT+CPOWD=<n>	[NORMAL POWER DOWN]
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0 Power off urgently (Will not send out NORMAL POWER DOWN)
	1 Normal power off (Will send out NORMAL POWER DOWN)

5.2.2 AT+CADC Read ADC

AT+CADC Read ADC

Test Command	Response
AT+CADC=?	+CADC: (list of supported <status>s),(list of supported <value>s)
	OK
Read Command	Response
AT+CADC?	+CADC: <status>,<value>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	2S
Reference	

Defined Values

<status>	1 Success 0 Fail
<value>	Integer 0-1400

5.2.3 AT+CLTS Get Local Timestamp

AT+CLTS Get Local Timestamp	
Test Command AT+CLTS=?	Response +CLTS: (list of supported <mode>s) OK
Read Command AT+CLTS?	Response +CLTS: <mode> OK
Write Command AT+CLTS=<mode>	Response OK If error is related to wrong AT syntax: +CME ERROR: <err> Unsolicited Result Code +CLTS: <time>
Parameter Saving Mode	AUTO_SAVE_REBOOT
Max Response Time	-
Reference	

Defined Values

<mode>	0 Disable 1 Enable
<time>	String type value; format is yy/MM/dd,hh:mm:ss±zz, where characters indicate year (two last digits),month, day, hour, minutes, seconds and time zone. E.g 10/05/06,00:01:52+32. If there is daylight saving time on the network then display: +CLTS: 18/06/22,09:27:49+32,"DST +2 in use" or +CLTS: 18/06/22,09:27:49+32,"DST +1 in use".

5.2.4 AT+CBAND Get and Set Mobile Operation Band

AT+CBAND Get and Set Mobile Operation Band

Test Command AT+CBAND=?	Response +CBAND: (list of supported <band>s) OK
Read Command AT+CBAND?	Response +CBAND: <op_band> OK
Write Command AT+CBAND=<op_band>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AUTO_SAVE_REBOOT
Max Response Time	-
Reference	

Defined Values

<op_band>	Integer value indicating current selected NB-IOT band Valid values: <band> response of test command.
<band>	Integer value indicating supported band.

5.2.5 AT+CBANDSL Set Modem NB-IOT Search Prefer Band List

AT+CBANDSL Set Modem NB-IOT Search Prefer Band List

Test Command AT+CBANDSL=?	Response +CBANDSL: (list of supported <enable>s),(list of supported <band number>s),(list of supported <band>s) OK
Write Command AT+CBANDSL=<enable>[,<band number>,<band1>[,<band2>[,<band3>[,<band4>]]]]	Response OK If error is related to ME functionality: +CME ERROR: <err>
Read Command AT+CBANDSL?	Response [+CBANDSL: <band>] OK
Parameter Saving Mode	AUTO_SAVE

Max Response Time	-
Reference	

Defined Values

<enable>	Integer value indicating search prefer band list enable or disable 0 Disable 1 Enable
<band number>	Integer value indicating search prefer band number. Valid values: 1,2,3,4
<bandn>	Integer value indicating current search prefer NB-IOT band. Valid values: <band> response of test command.

5.2.6 AT+CENG Report Network State

AT+CENG Report Network State	
Test Command AT+CENG=?	Response TA returns the list of supported modes. +CENG: (list of supported <mode>s)
	OK
Read Command AT+CENG?	Response <mode>=0 display serving cell and up to 4 neighbor cell information: +CENG: <sc_earfcn>,<sc_earfcn_offset>,<sc_pci>,<sc_cellid>[,<sc_rsrp>][,<sc_rsrq>][,<sc_rssi>][,<sc_snr>],<sc_band>,<sc_tac>[,<sc_ecl>][,<sc_tx_pwr>][,<sc_re_rsrp>][<CR><LF>] +CENG: <nc_earfcn>,<nc_earfcn_offset>,<nc_pci>,<nc_rsrp>[...]] OK <mode>=1 display data transfer information only if modem in RRC-CONNECTED state: +CENG: <RLC_UL_BLER>,<RLC_DL_BLER>,<MAC_UL_BLER>,<MAC_DL_BLER>,<MAC_UL_total_bytes>,<MAC_DL_total_bytes>,<MAC_UL_total_HARQ_TX>,<MAC_DL_total_HARQ_TX>,<MAC_UL_HARQ_re_TX>,<MAC_DL_HARQ_re_TX>,<RLC_UL_tput>,<RLC_DL_tput>,<MAC_UL_tput>,<MAC_DL_tput>

	OK If error is related to wrong AT syntax or incorrect <mode> or UE in incorrect state +CME ERROR: <err>
Write Command AT+CENG=<mode>	Response OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	Integer value indicating requested engineering information. 0 Radio information for serving and neighbor cells 1 Serving Cell/Neighbor Cell information
<sc_earfcn>	Integer value indicating the EARFCN for serving cell. Range 0-262143
<sc_earfcn_offset>	Integer value indicating the EARFCN offset for serving cell: 0 Offset of -2 1 Offset of -1 2 Offset of -0.5 3 Offset of 0 4 Offset of 1
<sc_pci>	Integer value indicating the serving cell physical cell ID. Range 0-503.
<sc_cellid>	String type; four byte (28 bit) cell ID in hexadecimal format for serving cell.
<sc_rsrp>	Signed integer indicating serving cell RSRP value in units of dBm (can be negative value). Available only in RRC-IDLE state.
<sc_rsrq>	Signed integer indicating serving cell RSRQ value in units of dB (can be negative value). Available only in RRC-IDLE state.
<sc_rssi>	Signed integer indicating serving cell RSSI value in units of dBm (can be negative value). Available only in RRC-IDLE state.
<sc_snr>	Signed integer value. Last SNR value for serving cell in units of dB. Available only in RRC-IDLE state.
<sc_band>	Integer value; current serving cell band
<sc_tac>	String type; two byte tracking area code (TAC) in hexadecimal format (e.g. "00C3" equals 195 in decimal).
<sc_ecl>	Integer value. Last Coverage Enhanced Level (CE Level) value for serving cell. Range 0-2.
<sc_tx_pwr>	Signed integer value indicating current UE transmit power. Units of cBm Centibels relative to one milliwatt (can be negative value).
<sc_re_rsrp>	Signed integer indicating serving cell RSRP value (the modified) in

	units of dBm (can be negative value). Available only in RRC-IDLE state.
<nc_earfcn>	Integer value indicating the EARFCN for neighbor cell. Range 0-262143
<nc_earfcn_offset>	Integer value indicating the EARFCN offset for neighbor cell: 0 Offset of -2 1 Offset of -1 2 Offset of -0.5 3 Offset of 0 4 Offset of 1
<nc_pci>	Integer value indicating the neighbor cell physical cell ID. Range 0-503.
<nc_rsrp>	Signed integer indicating neighbor cell RSRP value in units of dBm (can be negative value). Data Transfer Information: s
<RLC_UL_BLER>	Integer value. Represented in % value (range 0 to 100). UL block error rate (as per IRQ) in RLC. Calculated over all established RLC AM radio bearers. Calculated from the beginning of successfully established/resumed RRC connection or since previous AT+CENG query with <mode>=1, whichever is later. Only valid in RRC-CONNECTED state.
<RLC_DL_BLER>	Integer value. Represented in % value (range 0 to 100). DL block error rate (as per ARQ) in RLC. Calculated over all established RLC AM radio bearers. Calculated from the beginning of successfully established / resumed RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state.
<MAC_UL_BLER>	Integer value. Represented in % value (range 0 to 100). UL block error rate (as per HARQ) in MAC for UL-SCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state.
<MAC_DL_BLER>	Integer value. Represented in % value (range 0 to 100). DL block error rate (as per HARQ) in MAC for DL-SCH, excluding BCCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. <MAC_UL_total_bytes> Integer value. Total number of transport block bytes (re)transmitted on UL-SCH. Calculated for UL-SCH over all HARQ transmissions and retransmissions. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: bytes

<MAC_DL_total_bytes>	Integer value. Total number of transport block bytes (re)transmitted on DL-SCH, excluding BCCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: bytes
<MAC_UL_total_HARQ_TX>	Integer value. Total number of HARQ (re)transmissions for transport blocks on UL-SCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: (re)transmissions
<MAC_DL_total_HARQ_TX>	Integer value. Total number of HARQ (re)transmissions for transport blocks on DL-SCH, excluding BCCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: (re)transmissions
<MAC_UL_HARQ_re_TX>	Integer value. Number of HARQ retransmissions for transport blocks on UL-SCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: retransmissions
<MAC_DL_HARQ_re_TX>	Integer value. Number of HARQ retransmissions for transport blocks on DL-SCH, excluding BCCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: retransmissions.
<RLC_UL_tput>	Integer value. RLC uplink throughput. Calculated over all established RLC AM radio bearers. Calculated from the beginning of successfully established / resumed RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: kbits / s
<RLC_DL_tput>	Integer value. RLC downlink throughput. Calculated over all established RLC AM radio bearers. Calculated from the beginning of successfully established / resumed RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: kbits / s
<MAC_UL_tput>	Integer value. UL throughput in MAC for UL-SCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1, whichever is later. Available only in RRC-CONNECTED state. Unit: kbits / s

<MAC_DL_tput>	Integer value. DL throughput in MAC for DL-SCH, excluding BCCH. Calculated from the beginning of successfully established / resumed / re-established RRC connection, or since previous AT+CENG query with <mode>=1 , whichever is later. Available only in RRC-CONNECTED state. Unit: kbits / s
----------------------------	--

NOTE

- If modem is not in RRC-CONNECTED state then +CENG will not be generated for **<mode>=1**. Only OK response will be generated.

5.2.7 AT+CCID Show ICCID

AT+CBANDSL Set Modem NB-IOT Search Prefer Band List	
Test Command AT+CCID=?	Response OK
Execution Command AT+CCID	Response Ccid data [ex. 898600810906F8048812] OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

5.2.8 AT+EXUNSOL Enable or Disable Proprietary Unsolicited Indications

AT+EXUNSOL Enable or Disable Proprietary Unsolicited Indications	
Test Command AT+EXUNSOL=?	Response +EXUNSOL: (list of supported <exunsol>s) OK
Write Command AT+EXUNSOL=<exunsol>,<mode>	Response OK If <mode>=2 +EXUNSOL: <mode> OK

	If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<exunsol>	String type(string should be included in quotation marks). values are currently reserved by the present document "SQ" Signal Quality Report Displays signal strength and channel bit error rate (similar to AT+CSQ) in form +CSQN: <rss>,<ber> when values change.
<mode>	0 Disable 1 Enable 2 Query

5.2.9 AT+GSV Display Product Identification Information

AT+GSV Display Product Identification Information	
Execution Command AT+GSV	Response TA returns product information text Example: SIMCOM_Ltd SIM7020C Revision: 1752B01SIM7020C
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

5.2.10 AT*CELLLOCK Set the List of ARFCN Which Needs to Be Locked

AT*CELLLOCK Set the List of ARFCN Which Needs to Be Locked	
Test Command AT*CELLLOCK=?	Response OK
Read Command	Response

AT*CELLLOCK?	*CELLLOCK: <lock>[,<earfcn>,<earfcn_offset>[,<pci>]]
	OK
Write Command	Response
AT*CELLLOCK=<lock>[,<earfcn>,<earfcn_offset>[,<pci>]>]	OK If error is related to wrong AT syntax or incorrect parameters. ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<lock>	Integer value indicating whether to activate lock, or remove lock: 0 Remove lock 1 Activate lock
<earfcn>	Integer value indicating requested EARFCN on which to lock. Range 0- 262143. Value of 0 indicates to remove any lock for EARFCN and Cell.
<earfcn_offset>	Integer value indicating requested EARFCN offset: 0 Offset of -2 1 Offset of -1 2 Offset of -0.5 3 Offset of 0 4 Offset of 1
<pci>	Integer value: Physical cell ID. Range: 0-503

5.2.11 AT+SLEDS Set the Timer Period of Net Light

AT+SLEDS Set the Timer Period of Net Light	
Test Command	Response
AT+SLEDS=?	+SLEDS: (1-3),(0,40-65535),(0,40-65535)
	OK
Read Command	Response
AT+SLEDS?	+SLEDS: <mode>,<timer_on>,<timer_off>
	OK
Write Command	Response
AT+SLEDS=<mode>,<timer_on>,<timer_off>	OK ERROR
Parameter Saving Mode	AUTO_SAVE

Max Response Time	-
Reference	

Defined Values

<mode>	1 Set the timer period of net light while SIM7020 series does not register to the network 2 Set the timer period net light while SIM7020 series has already registered to the network 3 Set the timer period net light while SIM7020 series is in the state of PPP communication
<timer_on>	Timer period of "LED ON" in decimal format which range is 0 or 40-65535(ms)
<timer_off>	Timer period of "LED OFF" in decimal format which range is 0 or 40-65535(ms)

NOTE

The default value is:

<mode>,<timer_on>,<timer_off>

1,64,800

2,64,3000

3,64,300

5.2.12 AT+CNETLIGHT Close the Net Light or Open it to shining

AT+CNETLIGHT Close the Net Light or Open it to shining	
Test Command AT+CNETLIGHT=?	Response +CNETLIGHT: (0,1)
	OK
Read Command AT+CNETLIGHT?	Response +CNETLIGHT: <mode>
	OK
Write Command AT+CNETLIGHT=<mode>	Response OK or ERROR

Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	0 Close the net light 1 Open the net light to shining
--------	--

5.2.13 AT+CSMINS SIM Inserted Status Reporting

AT+CSMINS SIM Inserted Status Reporting	
Test Command AT+CSMINS=?	Response +CSMINS: (list of supported <n>s) OK
Read Command AT+CSMINS?	Response +CSMINS: <n>,<SIM inserted> OK
Write Command AT+CSMINS=<n>	Response OK or ERROR If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	A numeric parameter to show an unsolicited event code indicating whether the SIM has been inserted or removed. 0 Disable 1 Enable
<SIM inserted>	A numeric parameter which indicates whether SIM card has been inserted. 0 Not inserted 1 Inserted

5.2.14 AT+CSPCHSC Set Scrambling Algorithm for NPDSCH

AT+CSPCHSC Set Scrambling Algorithm for NPDSCH

Test Command AT+CSPCHSC=?	Response +CSPCHSC: (0-1)
	OK
Read Command AT+CSPCHSC?	Response +CSPCHSC: <mode>
	OK
Write Command AT+CSPCHSC=<mode>	Response OK If error is related to wrong AT syntax or incorrect parameters. ERROR
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	0 Close scrambling algorithm 1 Open scrambling algorithm
---------------------	---

5.2.15 AT+CPSMSTATUS Enable Deep Sleep Wakeup Indication

AT+CPSMSTATUS Enable Deep Sleep Wakeup Indication

Test Command AT+CPSMSTATUS=?	Response +CPSMSTATUS: (0-1)
	OK
Read Command AT+CPSMSTATUS?	Response +CPSMSTATUS: <enable>
	OK

Write Command
AT+CPSMSTATUS=<enable>
>
If error is related to wrong AT syntax or incorrect parameters.
ERROR

Parameter Saving Mode	AT&W_SAVE
Max Response Time	-
Reference	

Defined Values

<enable>	0 Disable indication on this channel when modem wakes up from deep sleep 1 Enable indication on this channel when modem wakes up from Deep sleep
----------	---

5.2.16 AT+CSCLK Configure Slow Clock

AT+CSCLK Configure Slow Clock	
Test Command AT+CSCLK=?	Response +CSCLK: (list of supported <n>s) OK
Read Command AT+CSCLK?	Response +CSCLK: <n> OK
Write Command AT+CSCLK=<n>	Response OK or ERROR
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0 Disable slow clock, module will not enter sleep mode. 1 Enable slow clock, it is controlled by DTR. When DTR is high, module can enter sleep mode. When DTR changes to low level, module can quit sleep mode. 2 Enable slow clock automatically. When there is no interrupt (on air and hardware such as GPIO interrupt or data in serial port), module can enter sleep mode. Otherwise, it will quit sleep mode.
-----	---

NOTE

- Only UART1 can enable csclk as 1 or 2.
- There are two caveats when you want to quit sleep mode in mode 2:
 1, You should input some characters (at least one) to awake module
 2, An interval time of 100ms more is necessary between waking characters and following AT commands, otherwise the waking characters will not be discarded completely, and messy codes will be produced which may leads to UART baudrate re-adaptation.
- Scope of parameter <n> is different among SIM7020 series project, please refer to chapter 22 for details.

5.2.17 AT+CRESET Trigger WDT Reset

AT+CRESET Trigger WDT Reset

Test Command AT+CRESET=?	Response OK
Execution Command AT+CRESET	Response If it succeeds, the system will reboot immediately.
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

5.2.18 AT+CREVHEX Control the Data Output Format

AT+CREVHEX Control the Data Output Format

Test Command AT+CREVHEX=?	Response +CREVHEX: (list of supported <n>s) OK
Read Command AT+CREVHEX?	Response +CREVHEX: <n> OK
Write Command AT+CREVHEX=<n>	Response OK If error is related to wrong AT syntax or incorrect parameters. ERROR
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-

Reference

Defined Values

<n>	0 The data output format is raw data. 1 The data output format is hexadecimal.
-----	---

5.2.19 AT+CDISAUPDN Control the Auto PDN Status

AT+CDISAUPDN Control the Auto PDN Status	
Test Command AT+CDISAUPDN=?	Response +CDISAUPDN: (list of supported <n>s) OK
Read Command AT+CDISAUPDN?	Response +CDISAUPDN: <n> OK
Write Command AT+CDISAUPDN=<n>	Response OK If error is related to wrong AT syntax or incorrect parameters. ERROR
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0 Disable auto PDN, should reboot the module to check. 1 Enable auto PDN, should reboot the module to check.
-----	---

5.2.20 AT+CNWRCCFG Network Recovery Configure

AT+CNWRCCFG Network Recovery Configure	
Test Command AT+CNWRCCFG=?	Response +CNWRCCFG: (5-28800),(5-28800),(5-28800),(5-28800),(5-28800),(5-28800)

	OK
Read Command AT+CNWRCCFG?	Response +CNWRCCFG: <recovery_internal1>,<recovery_internal2>,<recovery_internal3> ,<recovery_internal4>,<recovery_internal5>,<recovery_internal6> >
	OK
Write Command AT+CNWRCCFG=<recovery_internal1>,<recovery_internal2>,<recovery_internal3>,<recovery_internal4>,<recovery_internal5>,<recovery_internal6>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<recovery_internal1>	1 step network searching interval after out of service Range: 5-28800(s) Default: 5(s)
<recovery_internal2>	2 step network searching interval after out of service Range: 5-28800(s) Default: 10(s)
<recovery_internal3>	3 step network searching interval after out of service Range: 5-28800(s) Default: 10(s)
<recovery_internal4>	4 step network searching interval after out of service Range: 5-28800(s) Default: 1(s)
<recovery_internal5>	5 step network searching interval after out of service Range: 5-28800(s) Default: 120(s)
<recovery_internal6>	6 step network searching interval after out of service Range: 5-28800(s) Default: 7200(s)

NOTE

- The config will effect after rebooting.

5.2.21 AT+CURTC Control CCLK Show UTC Or RTC Time

AT+CURTC Control CCLK Show UTC Or RTC Time

Test Command AT+CURTC=?	Response +CURTC: (0,1)
	OK
Read Command AT+CURTC?	Response +CURTC: <opt>
	OK
Write Command AT+CURTC=<opt>	Response +CURTC: <opt>
	OK
Parameter Saving Mode	AUTO_SAVE_REBOOT
Max Response Time	-
Reference	

Defined Values

<opt>	A numeric parameter. 0 CCLK show UTC time after network time synchronization 1 CCLK show RTC time after network time synchronization
--------------------	--

5.2.22 AT+CHOMENW Display Home Network Information

AT+CHOMENW Display Home Network Information

Test Command AT+CHOMENW=?	Response OK
Read Command AT+CHOMENW?	Response UE returns the home network information (extracted form the IMSI)in long alpha,short alpha and numeric formats. +CHOMENW: <oper_long>,<oper_short>,<oper_numeric>
	OK
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<code><oper_long></code>	Home operator in long alphanumeric format
<code><oper_short></code>	Home operator in short alphanumeric format
<code><oper_numeric></code>	Home operator in numeric GSM Loation Area Identification number format

5.2.23 AT+CBATCHK Set VBAT Checking Feature ON/OFF

AT+CBATCHK Set VBAT Checking Feature ON/OFF	
Test Command AT+CBATCHK=?	Response +CBATCHK: (0,1)
	OK
Read Command AT+CBATCHK?	Response +CBATCHK: <mode>
	OK
Write Command AT+CBATCHK=<mode>	Response OK If failed: +CME ERROR: <err>
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<code><mode></code>	<u>0</u> Close the function of VBAT checking 1 Open the function of VBAT checking
---------------------------	--

5.2.24 AT+CGPIO Control the GPIO by PIN Index

AT+CGPIO Control the GPIO by PIN Index	
Test Command AT+CGPIO=?	Response +CGPIO: (0-1),(list of supported <pin>s),(0-1),(0-1)
	OK
Write Command AT+CGPIO=<operation>,<pin>,<function>,<level>	Response OK or

	ERROR
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<operation>	0 Set the GPIO function including the GPIO output . 1 Read the GPIO level. Please note that only when the gpio is set as input, user can use parameter 1 to read the GPIO level, otherwise the module will return "ERROR".
<pin>	The PIN index you want to be set. (It has relations with the hardware, please refer to the hardware manual)
<function>	Only when <operation> is set to 0, this option takes effect. 0 Set the GPIO to input 1 Set the GPIO to output
<level>	0 Set the GPIO low level 1 Set the GPIO high level

5.2.25 AT*MEDRXCFCG eDRX Configuration

AT*MEDRXCFCG eDRX Configuration	
Test Command AT*MEDRXCFCG=?	Response *MEDRXCFCG: (list of supported <mode>s),(list of supported <AcT-type>s),(list of supported <Requested_eDRX_value>s),(list of supported <Requested_Paging_time_window_value>s) OK
Read Command AT*MEDRXCFCG?	Response [*MEDRXCFCG: <AcT-type>,<Requested_eDRX_value>[,<Requested_Paging_time_window_value>][<CR><LF>] *MEDRXCFCG: <AcT-type>,<Requested_eDRX_value>[,<Requested_Paging_time_window_value>] [...]]] OK
Write Command AT*MEDRXCFCG=[<mode>[,<AcT-type>[,<Requested_eDRX_value>[,<Requested_Paging_time_window_value>]	Response OK or +CME ERROR: <err>

ging_time_window_value>]]

]]

Parameter Saving Mode

-

Max Response Time

-

Reference

Defined Values

<mode>	<p>Integer type, indicates to disable or enable the use of eDRX in the UE. This parameter is applicable to all specified types of access technology, i.e. the most recent setting of <mode> will take effect for all specified values of <AcT>.</p> <ul style="list-style-type: none"> 0 Disable the use of eDRX 1 Enable the use of eDRX 2 Enable the use of eDRX and enable the unsolicited result code +CEDRXP: <p><AcT-type>[,<Requested_eDRX_value>[,<NW-provided_eDRX_value>[,<Paging_time_window>]]]</p> <p>3 Disable the use of eDRX and discard all parameters for eDRX or, if available, reset to the manufacturer specific default values.</p>
<AcT-type>	<p>Integer type, indicates the type of access technology. This AT-command is used to specify the relationship between the type of access technology and the requested eDRX value.</p> <ul style="list-style-type: none"> 0 Access technology is not using eDRX. This parameter value is only use in the unsolicited result code. 5 E-UTRAN (NB-S1 mode)
<Requested_eDRX_value>	<p>String type; half a byte in a 4-bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008. The default value, if available, is manufacturer specific.</p>
<Requested_Paging_time_window_value>	<p>String type; half a byte in a 4-bit format. The paging time window refers to bit 8 to 5 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see the Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008</p>
<NW-provided_eDRX_value>	<p>String type; half a byte in a 4-bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008.</p>
<Paging_time_window>	<p>String type; half a byte in a 4-bit format. The paging time window</p>

refers to bit 8 to 5 of octet 3 of the Extended DRX parameters information element (see sub-clause 10.5.5.32 of 3GPP TS 24.008). For the coding and the value range, see the Extended DRX parameters information element in 3GPP TS 24.008 Table 10.5.5.32/3GPP TS 24.008.

NOTE

- Only part of projects support this command, please refer to chapter 22 for details.

5.2.26 AT+CNBIOTDT NB-IOT Data Type

AT+CNBIOTDT NB-IOT Data Type

Test Command

AT+CNBIOTDT=?

Response

+CNBIOTDT: (list of supported <type>s)

OK

Read Command

AT+CNBIOTDT?

Response

Displays <type> for all active PDP contexts:

[+CNBIOTDT: <cid>,<type>][<CR><LF>+CNBIOTDT:
<cid>,<type>
[...]]

OK

Write Command

**AT+CNBIOTDT=<type>[,<ci
d>[,<cid>[,...]]]**

Response

OK

If error is related to wrong AT syntax:

+CME ERROR: <err>

Parameter Saving Mode

-

Max Response Time

-

Reference

Defined Values

<type>	Integer type 0 Normal data 1 Exceptional data
---------------------	---

<cid>	<p>Integer type. Specifies a particular PDP context definition.</p> <p>If no <cid>s are specified the command sets <type> for all active PDP contexts.</p>
--------------------	--

NOTE

- The UE will not remember this setting over sleep cycles (i.e. the UE will fall back to default setting after sleep)

5.2.27 AT+CNBIOTRAI NB-IOT Release Assistance Indication

AT+CNBIOTRAI NB-IOT Release Assistance Indication

Test Command AT+CNBIOTRAI=?	<p>Response</p> <p>+CNBIOTRAI: (list of supported <rai>s)</p>
	OK
Read Command AT+CNBIOTRAI?	<p>Response</p> <p>+CNBIOTRAI: <rai></p>
	OK
Write Command AT+CNBIOTRAI=<rai>	<p>Response</p> <p>OK</p> <p>If error is related to wrong AT syntax: +CME ERROR: <err></p>
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<rai>	<p>Integer type. Specifies release assistance information.</p> <p>0 No information available (or none of the other options apply)</p> <p>1 TE will send only 1 UL packet and no DL packets expected</p> <p>2 TE will send only 1 UL packet and only 1 DL packet expected</p>
--------------------	--

NOTE

- This command may never be required as it is likely that the TE will not

know this information.

- Modem applies specified <rai> value only to next UL packet sent by TE.
- TE will not remember this setting over sleep cycles (i.e. will fall back to default after sleep).

5.2.28 AT+ICCID Show ICCID

AT+ICCID Show ICCID

Test Command AT+ICCID=?	Response OK
Execution Command AT+ICCID	Response Ccid data [ex. 898600810906F8048812]
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

5.2.29 AT+CTRJ Inquire the Value of Timer 3346

AT+CTRJ Inquire the Value of Timer 3346

Test Command AT+CTRJ=?	Response OK
Read Command AT+CTRJ?	Response +CTRJ: <t3346>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<t3346>	The value of Timer 3346
----------------------	-------------------------

NOTE

- Customer can use it to inquire the value of Timer 3346, Refer to 3GPP, T3346 is sent to UE when

the base station reject the attach request from UE. While T3346 is running, the module will not send attach request after booting up until it is expired.

5.2.30 AT+NIDD Send NIDD(Non-IP Data Delivery)

AT+NIDD Send NIDD(Non-IP Data Delivery)

Write Command

**AT+NIDD=<mode>,<apn>,[<
send data>]**

Response

OK

If error is related to ME functionality:

+CME ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<mode>	Operation type 1 Creat NIDD 2 Send data via NIDD
<apn>	A string parameter which indicates the GPRS access point name. The max length is 32 bytes.
<send data>	The data need to send via NIDD

NOTE

- When <mode>=1
The command is creat NIDD.
Send this quickly, need before attach complete
- When<mode>=2
The command is send data via NIDD
- When NIDD receive data there will be a URC report on serial port
+NIDD: 4,"id","length","index","data"

5.2.31 AT+CFGRI Indicate RI When Using URC

AT+CFGRI Indicate RI When Using URC

Test Command AT+CFGRI=?	Response +CFGRI: (0-2)
	OK
Read Command AT+CFGRI?	Response +CFGRI: <status>
	OK
Write Command AT+CFGRI=<status>	Response OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<status>	0	Off
	1	On(TCPIP, HTTP, LWM2M, COAP, ONENET, MQTT, TLS, SMS)
	2	On(only TCPIP control RI pin)

NOTE

- The RI will be pulled down 120ms by default.

6 AT Command for TCPIP Application

6.1 Overview of AT Commands for TCPIP Application

Command	Description
AT+CSOC	Create a TCP/UDP socket
AT+CSOCON	Connect socket to remote address and port
AT+CSOB	Bind local address and local port
AT+CSOLIS	Open Listening Function of the Server
AT+RETENTION	Retention of socket scence
AT+CSOSEND	Send data to remote via socket
AT+CSODSEND	Send data to remote via socket with data mode
AT+CSOCL	Close socket
AT+CSOSENDFLAG	Set TCP send flag
AT+CSORCVFLAG	Set receive flag
AT+CSOSTATUS	Get socket status
AT+CSOACK	Query previous connection data transmitting state
AT+CSOALIVE	Set TCP keepalive parameters
AT+CSORXGET	Get Data from Network Manually
+CSONMI	Socket message arrived indicator
+CSOERR	Socket error indicator

6.2 Detailed Description of AT Commands for TCPIP Application

6.2.1 AT+CSOC Creat a TCP/UDP Socket

AT+CSOC Creat a TCP/UDP Socket	
Test Command AT+CSOC=?	Response +CSOC: (1-2),(1-3),(1-2)

	OK
Read Command AT+CSOC?	Response OK or +CSOC: <socket_id>,<domain>,<type>,<protocol>[<CR><LF>+CSOC: <socket_id>[...]]
	OK
Write Command AT+CSOC=<domain>,<type>,<protocol>[,<cid>]	Response +CSOC: <socket_id>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer socket_id. Range is 0-4.
<domain>	Integer 1 IPv4 2 IPv6
<type>	Integer 1 TCP 2 UDP 3 RAW
<protocol>	Integer 1 IP 2 ICMP
<cid>	Integer, PDP context ID, AT+CGACT response. [option]

6.2.2 AT+CSOCON Connect Socket to Remote Address and Port

AT+CSOCON Connect Socket to Remote Address and Port

Test Command AT+CSOCON=?	Response OK
Read Command AT+CSOCON?	Response OK or If connection exist. +CSOCON: <socket_id>,<type>[<CR><LF>+CSOCON: <socket_id>]

	d>,<type>[...]]
	OK
Write Command AT+CSOCON=<socket_id>,<remote_port>,<remote_address>	Response OK If format is wrong or connection exists: ERROR If connection is failed: ERROR
	+CSOERR: <socket_id>,<error_code>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer, socket_id, response of AT+CSOC.
<remote_port>	Integer, remote port.(1-65535)
<remote_address>	String, remote address.
<type>	Integer 1 TCP 2 UDP 3 RAW
<error_code>	Reference section 5.2.16.

6.2.3 AT+CSOB Bind Local Address and Local Port

AT+CSOB Bind Local Address and Local Port	
Test Command AT+CSOB=?	Response OK
Read Command AT+CSOB?	Response OK
Write Command AT+CSOB=<socket_id>,<port>[,<address>]	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer type, socket_id, AT+CSOC's response.
<port>	Integer type, port,(1-65535).
<address>	String type, address.

6.2.4 AT+CSOLIS Open Listening Function of the Server

AT+CSOLIS Open Listening Function of the Server	
Test Command	Response
AT+CSOLIS=?	OK
Read Command	Response
AT+CSOLIS?	OK
Write Command	Response
AT+CSOLIS=<socket_id>	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer type, socket_id, AT+CSOC's response.
-------------	--

6.2.5 AT+RETENTION Retention of Socket Scene

AT+RETENTION Retention of Socket Scene	
Test Command	Response
AT+RETENTION=?	+RETENTION: (0-1)
	OK
Read Command	Response
AT+RETENTION?	+RETENTION: <retention_socket>
	OK
Write Command	Response
AT+RETENTION=<retention_socket>	OK
Parameter Saving Mode	NO_SAVE

Max Response Time	-
Reference	

Defined Values

<retention_socket>	Integer type 0 Not recovery scene when module exited PSM mode 1 Recovery scene when module exited PSM mode
---------------------------------	--

NOTE

- AT+CPSMS should be set before this command.

6.2.6 AT+CSOSEND Send Data to Remote Via Socket

AT+CSOSEND Send Data to Remote Via Socket	
Test Command	Response
AT+CSOSEND=?	OK
Write Command	Response
AT+CSOSEND=<socket_id> ,<data_len>,<data>	If CSOSENDFLAG is 0. OK If CSOSENDFLAG is 1 and socket type is TCP. OK
	SEND: <socket_id>,<len>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer type, socket_id, AT+CSOC's response.
<data_len>	Integer type, length of data
<data>	Raw_data, data context. Max data size is 512 bytes. If <data_len> is 0 you can send str to remote socket with double quotation, otherwise the format of data should be hex and the length must be equal to the <data_len> .
<len>	Integer type, length of data

6.2.7 AT+CSODSEND Send Data to Remote Via Socket With Data Mode

AT+CSOSEND Send Data to Remote Via Socket With Data Mode	
Test Command AT+CSODSEND=?	Response OK
Write Command AT+CSODSEND=<socket_id><data_len> response">", then tap data for send	Response If CSOSENDFLAG is 0. DATA ACCEPT: <len> If CSOSENDFLAG is 1 and socket type is TCP. DATA ACCEPT: <len> SEND: <socket_id>,<len>
Execution Command AT+CSODSEND=<socket_id><data_len> > response">", then tap data for send, tap CTRL+Z to send, tap ESC to cancel the operation	Response If CSOSENDFLAG is 0. DATA ACCEPT: <len> If CSOSENDFLAG is 1 and socket type is TCP. DATA ACCEPT: <len> SEND: <socket_id>,<len>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer type, socket_id, AT+CSOC's response.
<data_len>	Integer type, length of data
<len>	Integer type, length of data

6.2.8 AT+CSOCL Close Socket

AT+CSOCL Close Socket	
Test Command AT+CSOCL=?	Response OK
Write Command AT+CSOCL=<socket_id>	Response OK
Parameter Saving Mode	NO_SAVE

Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer socket_id, AT+CSOC's response.
--------------------------	--

6.2.9 AT+CSOSENDFLAG Set TCP Send Flag

AT+CSOSENDFLAG Set TCP Send Flag	
Test Command AT+CSOSENDFLAG=?	Response +CSOSENDFLAG: (0,1)
	OK
Read Command AT+CSOSENDFLAG?	Response +CSOSENDFLAG: <flag>
	OK
Write Command AT+CSOSENDFLAG=<flag>	Response OK
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<flag>	TCP send flag 0 Disable send flag feature 1 Enable this feature
---------------------	---

6.2.10 AT+CSORCVFLAG Set Receive Flag

AT+CSORCVFLAG Set Receive Flag	
Test Command AT+CSORCVFLAG=?	Response +CSORCVFLAG: (0,1)
	OK

Read Command AT+CSORCVFLAG?	Response +CSORCVFLAG: <flag>
	OK
Write Command AT+CSORCVFLAG=<flag>	Response OK
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<flag>	TCP receive flag 0 Receive data form remote socket with hex. 1 Receive data form remote socket with string
---------------------	--

6.2.11 AT+CSOSTATUS Get Socket Status

AT+CSOSTATUS Get Socket Status	
Test Command AT+CSOSTATUS=?	Response +CSOSTATUS: (0-4)
	OK
Write Command AT+CSOSTATUS=<socket_id>	Response +CSOSTATUS: <socket_id>,<status>
	OK
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer type, socket id, AT+CSOC's response.
<status>	Integer type. 0 None socket 1 Socket create but not connect 2 Connected

6.2.12 AT+CSOACK Query Previous Connection Data Transmitting State

AT+CSOACK Query Previous Connection Data Transmitting State

Test Command AT+CSOACK=?	Response +CSOACK: (0-4) OK
Write Command AT+CSOACK=<socket_id>	Response +CSOACK: <socket_id>,<txlen>,<acklen>,<nacklen> OK
Execution Command AT+CSOACK	Response +CSOACK: <socket_id>,<txlen>,<acklen>,<nacklen>[<CR><LF> +CSOACK: <socket_id>,<txlen>,<acklen>,<nacklen>[...]] OK
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer type, socket id, AT+CSOC's response.
<txlen>	The data amount which has been sent
<acklen>	The data amount confirmed successfully by the server
<nacklen>	The data amount without confirmation by the server

6.2.13 AT+CSOALIVE Set TCP Keepalive Parameters

AT+CSOALIVE Set TCP Keepalive Parameters

Test Command AT+CSOALIVE=?	Response +CSOALIVE: (0-4),(0-1),(30-7200),(30-600),(1-9) OK
Read Command AT+CSOALIVE?	Response +CSOALIVE: <socket_id>,<mode>[,<keepIdle>,<keepInterval>,<keepCount>][<CR><LF> +CSOALIVE: <socket_id>,<mode>[,<keepIdle>,<keepInterval>,<keepCount>][...]]

	OK
Write Command	Response
AT+CSOALIVE=<socket_id>[,<mode>[,<keepIdle>[,<keepInterval>[,<keepCount>]]]]	OK If error is related to ME functionality: ERROR
Parameter Saving Mode	-
Max Response Time	-
Reference	

Defined Values

<socket_id>	Integer type, socket id, AT+CSOC's response.
<mode>	Set TCP keepalive option. 0 Disable TCP keep alive mechanism 1 Enable TCP keep alive mechanism If <mode>=0, executing "AT+CSOALIVE=<socket_id>,<mode>".
<keepIdle>	Integer type; Idle time (in second) before TCP send the initial keepalive probe. 30-7200 Default: 7200
<keepInterval>	Interval time (in second) between keepalive probes retransmission. 30-600 Default: 75
<keepCount>	Integer type; Max number of keepalive probes to be sent. 1-9 Default: 9

6.2.14 AT+CSORXGET Get Data from Network Manually

AT+CSORXGET Get Data from Network Manually	
Test Command AT+CSORXGET=?	Response +CSORXGET: (list of supported <mode>s),(list of supported <id>s),(list of supported <reqlength>) OK
Read Command AT+CSORXGET?	Response +CSORXGET: <mode> OK
Write Command AT+CSORXGET=<mode>[,<id>[,<reqlength>]]	Response OK or ERROR if <mode>=1

```
+CSORXGET: 1,<id>
if <mode>=2
+CSORXGET: 2,<id>,<reqlength>,<cnflength>
1234567890...
```

OK
if <mode>=3
+CSORXGET: 3,<id>,<reqlength>,<cnflength>
5151...

OK
if <mode>=4
+CSORXGET: 4,<id>,<cnflength>

OK
If error is related to ME functionality:
+CME ERROR: <err>

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	<ul style="list-style-type: none"> 0 Disable getting data from network manually, the module is set to normal mode, data will be pushed to TE directly. 1 Enable getting data from network manually. 2 The module can get data, but the length of output data can not exceed 1460 bytes at a time. 3 Similar to mode 2, but in HEX mode, which means the module can get 730 bytes maximum at a time. 4 Query how many data are not read with a given ID.
<id>	A numeric parameter which indicates the connection number
<reqlength>	Requested number of data bytes (1-1460 bytes)to be read
<cnflength>	Confirmed number of data bytes to be read, which may be less than <length>. 0 indicates that no data can be read.

6.2.15 +CSONMI Socket Message arrived indicator

+CSONMI Socket Message arrived indicator	
Response	Indicated there is received some data from network.

+CSONMI: <socket_id>,<data_len>,<data>**Defined Values**

<socket_id>	Integer socket_id,AT+CSOC's response
<data_len>	Integer, length of data
<data>	Raw_data, data context.

6.2.16 +CSOERR Socket Error indicator**+CSOERR Socket Error indicator**

	Response Indicated there is some error. +CSOERR: <socket_id>,<error_code>
--	--

Defined Values

<socket_id>	Integer socket_id,AT+CSOC's response
<error_code>	-1 Common error 1 Route error 2 Connection abort error 3 Reset error 4 Connected error 5 Value error 6 Buffer error 7 Block error 8 Addr in use error 9 ALR connecting error 10 ALR connected error 11 NETIF error 12 PARAMETER error

7 AT Commands for TCPIP Application to Compatible with SIM800 Serials

7.1 Overview of AT Commands

Command	Description
AT+CIPMUX	Start Up multi-IP connection
AT+CIPSTART	Start Up TCP or UDP connection
AT+CIPSEND	Send data through TCP or UDP connection
AT+CIPQSEND	Select data transmitting mode
AT+CIPACK	Query previous connection data transmitting state
AT+CIPCLOSE	Close TCP or UDP connection
AT+CIPSHUT	Deactivate GPRS PDP context
AT+CLPORT	Set local port
AT+CSTT	Start task and set APN, user name, password
AT+CIICR	Bring up wireless connection
AT+CIFSR	Get local IP address
AT+CIPSTATUS	Query current connection status
AT+CDNSCFG	Configure domain name server
AT+CDNSGIP	Query the IP address of given domain name
AT+CIPHEAD	Add an IP head at the beginning of a package received
AT+CIPHEXS	Show data in hex mode of a package received
AT+CIFSREX	Get local IP address
AT+CIPATS	Set auto sending timer
AT+CIPSPRT	Set prompt of '>' when module sends data
AT+CIPSERVER	Configure module as server
AT+CIPCSGP	Set CSD or GPRS for connection mode
AT+CIPSRIPI	Show remote IP address and port when received data
AT+CIPSHOWTP	Display transfer protocol in IP head when received data
AT+CIPUDPMODE	UDP extended mode
AT+CIPRXGET	Get data from network manually
AT+CIPTKA	Set TCP keep alive parameters
AT+CIPMODE	Open transparent mode

AT+CIPCHAN

Enter transparent mode

7.2 Detailed Descriptions of Commands

7.2.1 AT+CIPMUX Start Up Multi-IP Connection

AT+CIPMUX Start Up Multi-IP Connection

Test Command

AT+CIPMUX=?

Response

OK

Read Command

AT+CIPMUX?

Response

+CIPMUX: <n>**OK**

Write Command

AT+CIPMUX=<n>

Response

OK

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<n>

0 Single IP connection

1 Multi IP connection

Example

AT+CIPMUX=?**+CIPMUX: (0,1)****OK****AT+CIPMUX?****+CIPMUX: 0****OK**

NOTE

- Only in IP initial state, AT+CIPMUX=1 is effective
- Only when multi IP connection and GPRS application are both shut down, AT+CIPMUX=0 is effective

7.2.2 AT+CIPSTART Start Up TCP or UDP Connection

AT+CIPSTART Start Up TCP or UDP Connection

Test Command AT+CIPSTART=?	Response 1) If AT+CIPMUX=0 +CIPSTART: (list of supported <mode>),(<IP address>),(<port> +CIPSTART: (list of supported <mode>),(<domain name>),(<port>) OK 2) If AT+CIPMUX=1 +CIPSTART: (list of supported <n>),(list of supported <mode>),(<IP address>),(<port> +CIPSTART: (list of supported <n>),(list of supported <mode>),(<domain name>),(<port>) OK
Write Command 1)If single IP connection (+CIPMUX=0) AT+CIPSTART=<mode>,<IP address>,<port> or AT+CIPSTART=<mode>,<domain name>,<port> 2)If multi-IP connection (+CIPMUX=1) AT+CIPSTART=<n>,<mode>,<address>,<port> or AT+CIPSTART=<n>,<mode>,<domain name>,<port> AT+CIPMUX=<n>	Response 1)If single IP connection (+CIPMUX=0) If format is right response OK otherwise response If error is related to ME functionality: +CME ERROR <err> Response when connection exists ALREADY CONNECT Response when connection is successful CONNECT OK Otherwise STATE: <state> CONNECT FAIL 2)If multi-IP connection(+CIPMUX=1) If format is right OK otherwise response

	<p>If error is related to ME functionality:</p> <p>+CME ERROR <err></p> <p>Response when connection exists</p> <p><n>,ALREADY CONNECT</p> <p>If connection is successful</p> <p><n>,CONNECT OK</p> <p>Otherwise</p> <p><n>,CONNECT FAIL</p> <p>OK</p>
Parameter Saving Mode	NO_SAVE
Max Response Time	<p>When mode is multi-IP state, the max response time 75 seconds.</p> <p>When mode is single state, and the state is IP INITIAL, the max response time is 160 seconds.</p>
Reference	

Defined Values

<n>	Connection number 0..5 A numeric parameter which indicates the connection number
<mode>	A string parameter which indicates the connection type "TCP" Establish a TCP connection "UDP" Establish a UDP connection
<IP address>	A string parameter which indicates remote server IP address
<port>	Remote server port,(1-65535).
<domain name>	A string parameter which indicates remote server domain name
<state>	<p>A string parameter which indicates the progress of connecting</p> <p>In single IP state:</p> <p>0 IP INITIAL 1 IP START 2 IP CONFIG 3 IP GPRSACT 4 IP STATUS 5 TCP CONNECTING/UDP CONNECTING/ SERVER LISTENING 6 CONNECT OK 7 TCP CLOSING/UDP CLOSING 8 TCP CLOSED/UDP CLOSED 9 PDP DEACT</p> <p>In Multi-IP state:</p> <p>0 IP INITIAL 1 IP START 2 IP CONFIG 3 IP GPRSACT 4 IP STATUS</p>

5	IP PROCESSING
9	PDP DEACT

Example

```
AT+CIPSTART=?  
OK  
  
+CIPSTART: ("TCP","UDP"),("0-255).(0-255).(0-255).(0-255"),(1-65535)  
+CIPSTART: ("TCP","UDP"),("DOMAIN NAME"),(1-65535)  
  
OK
```

NOTE

- This command allows establishment of a TCP/UDP connection only when the state is IP_INITIAL or IP_STATUS or IP_CLOSED when it is in single state. In multi-IP state, the state is in IP_STATUS only, or, if the module is deactivating. So it is necessary to process "AT+CIPSHUT" before user establishes a TCP/UDP connection with this command when the state is not IP INITIAL or IP STATUS.
- When module is in multi-IP state, before this command is executed, it is necessary to process "AT+CSTT, AT+CIICR, AT+CIFSR".

7.2.3 AT+CIPSEND Send Data Through TCP or UDP Connection

AT+CIPSEND Send Data Through TCP or UDP Connection

Test Command
AT+CIPSEND=?

1) For single IP connection (+CIPMUX=0)
+CIPSEND: <length>

OK

2) For multi IP connection (+CIPMUX=1)
+CIPSEND: (0-5),<length>

OK

Read Command
AT+CIPSEND?

1) For single IP connection (+CIPMUX=0)
+CIPSEND: <size>

OK

2) For multi IP connection (+CIPMUX=1)

	+CIPSEND: <n>,<size> OK
Write Command 1) If single IP connection (+CIPMUX=0) AT+CIPSEND=<length>	Response This Command is used to send changeable length data If single IP is connected (+CIPMUX=0) If connection is not established or module is disconnected: If error is related to ME functionality: +CME ERROR <err> If sending is successful: When +CIPQSEND=0 SEND OK When +CIPQSEND=1 DATA ACCEPT: <length> If sending fails: SEND FAIL If multi IP connection is established (+CIPMUX=1) If connection is not established or module is disconnected: If error is related to ME functionality: +CME ERROR <err> If sending is successful: When +CIPQSEND=0 <n>,SEND OK When +CIPQSEND=1 DATA ACCEPT: <n>,<length> If sending fails: <n>,SEND FAIL
2) If multi IP connection (+CIPMUX=1) AT+CIPSEND=<n>[,<length>] response">", then tap data for send	
Execution Command 1) If single IP connection (+CIPMUX=0) AT+CIPSEND	Response This Command is used to send changeable length data. If single IP connection is established (+CIPMUX=0) If connection is not established or module is disconnected: If error is related to ME functionality: +CME ERROR <err> If sending is successful: When +CIPQSEND=0 SEND OK When +CIPQSEND=1 DATA ACCEPT: <length> If sending fails: SEND FAIL
2) If multi IP connection (+CIPMUX=1) AT+CIPSEND=<n> response">", then tap data for send, tap CTRL+Z to send, tap ESC to cancel the operation	If multi IP connection is established (+CIPMUX=1) If connection is not established or module is disconnected: If error is related to ME functionality: +CME ERROR <n>,<err>

	<p>If sending is successful: When +CIPQSEND=0 <n>,SEND OK When +CIPQSEND=1 DATA ACCEPT: <n>,<length> If sending fails: <n>,SEND FAIL When mode is multi-IP state, the max response time 75 seconds. When mode is single state, and the state is IP INITIAL, the max response time is 160 seconds.</p>
Parameter Saving Mode	NO_SAVE
Max Response Time	When +CIPQSEND=0 and the remote server no response, after 645 seconds, "CLOSE" will be reported.

Defined Values

<n>	A numeric parameter which indicates the connection number
<size>	A numeric parameter which indicates the data length sent at a time. The value of <size> is 1460 if the connection is successful; otherwise <size> is 0.
<length>	A numeric parameter which indicates the length of sending data, it must be less than <size>.

Example

```
AT+CIPSEND=?  
+CIPSEND: <length>
```

OK

```
AT+CIPSEND?  
+CIPSEND: 0
```

OK

NOTE

- The data length which can be sent depends on network status.
- Set the time that send data automatically with the command of AT+CIPATS.
- Only send data at the status of established connection.

7.2.4 AT+CIPQSEND Select Data Transmitting Mode

AT+CIPQSEND Select Data Transmitting Mode

Test Command AT+CIPQSEND=?	Response +CIPQSEND: (0,1)
	OK
Read Command AT+CIPSEND?	Response +CIPQSEND: <n>
	OK
Write Command AT+CIPQSEND=<n>	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	<p>0 Normal mode. When the server receives TCP data, it will response SEND OK.</p> <p>1 Quick send mode. When the data is sent by module, it will response</p> <p>DATA ACCEPT: <length>(For single IP connection (+CIPMUX=0)) or DATA ACCEPT: <n>,<length>(For multi IP connection (+CIPMUX=1)) while not responding SEND OK.</p>
------------------	--

Example

```
AT+CIPQSEND=?
+CIPQSEND: (0,1)
```

OK

```
AT+CIPSEND?
+CIPSEND: 0
```

OK

7.2.5 AT+CIPACK Query Previous Connection Data Transmitting State

AT+CIPACK Query Previous Connection Data Transmitting State

Test Command AT+CIPACK=?	Response OK
Write Command If in multi IP connection (+CIPMUX=1) AT+CIPACK=<n>	Response +CIPACK: <txlen>,<acklen>,<nacklen>
Execution Command If in single IP connection (+CIPMUX=0) AT+CIPACK	Response +CIPACK: <txlen>,<acklen>,<nacklen>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	A numeric parameter which indicates the connection number
<txlen>	The data amount which has been sent
<acklen>	The data amount confirmed successfully by the server
<nacklen>	The data amount without confirmation by the server

Example

```
AT+CIPACK=?
OK
```

7.2.6 AT+CIPCLOSE Close TCP or UDP Connection

AT+CIPCLOSE Close TCP or UDP Connection

Test Command AT+CIPCLOSE=?	Response OK
Write Command 1) If single IP connection (+CIPMUX=0) AT+CIPCLOSE=<n>	Response 1) For single IP connection (+CIPMUX=0) CLOSE OK 2) For multi IP connection (+CIPMUX=1)

2) If multi IP connection (+CIPMUX=1) AT+CIPCLOSE=<id>[,<n>]	<id>,CLOSE OK
Execution Command AT+CIPCLOSE	Response If close is successfully: CLOSE OK If close fails: ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	Close type 0 Slow close 1 Quick close
<id>	A numeric parameter which indicates the connection number

Example

```
AT+CIPCLOSE=?  
OK
```

NOTE

- AT+CIPCLOSE only closes connection at corresponding status of TCP/UDP stack. To see the status use AT+CIPSTATUS command. Status should be:
TCP CONNECTING, UDP CONNECTING, SERVER LISTENING or CONNECT OK in single-connection mode (see <state> parameter);
CONNECTING or CONNECTED in multi-connection mode (see <client state>);
OPENING or LISTENING in multi-connection mode (see <server state>).
Otherwise it will return ERROR.

7.2.7 AT+CIPSHUT Deactivate GPRS PDP Context

AT+CIPSHUT Deactivate GPRS PDP Context

Test Command AT+CIPSHUT=?	Response OK
Execution Command AT+CIPSHUT	Response If close is successful: SHUT OK If close fails: ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	65 seconds
Reference	

Example

```
AT+CIPSHUT=?
```

```
OK
```

NOTE

- If this command is executed in multi-connection mode, all of the IP connection will be shut.
- User can close GPS PDP context by AT+CIPSHUT. After it is closed, the status is IP INITIAL.
- If "+PDP: DEACT" URC is reported which means the GPRS is released by the network, then user still needs to execute "AT+CIPSHUT" command to make PDP context come back to original state.

7.2.8 AT+CLPORT Set Local Port

AT+CLPORT Set Local Port	
Test Command AT+CLPORT=?	Response 1) For single IP connection (+CIPMUX=0) +CLPORT: ("TCP","UDP"),(0-65535) OK 2) For multi IP connection (+CIPMUX=1) +CLPORT: (0-5),("TCP","UDP"),(0-65535)
	OK
Read Command AT+CLPORT?	Response 1) For single IP connection (+CIPMUX=0) +CLPORT: <TCP port>,<UDP port>

	OK
	2) For multi IP connection (+CIPMUX=1) +CLPORT: 0,<TCP port>,<UDP port> +CLPORT: 1,<TCP port>,<UDP port> +CLPORT: 2,<TCP port>,<UDP port> +CLPORT: 3,<TCP port>,<UDP port> +CLPORT: 4,<TCP port>,<UDP port> +CLPORT: 5,<TCP port>,<UDP port>
	OK
Write Command	Response
1) For single IP connection (+CIPMUX=0)	OK
AT+CLPORT=<mode>,<port> >	If set fail ERROR
2) For multi IP connection (+CIPMUX=1)	
AT+CLPORT=<n>,<mode>,<port>	
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0.5 A numeric parameter which indicates the connection number this used in multi IP connection
<mode>	A string parameter which indicates the connection type "TCP" TCP local port "UDP" UDP local port
<port>	A numeric parameter which indicates the local port. A port can be dynamically allocated a port. If users want to set a port, the value is 1-65535. 0-65535 Port number

Example

```
AT+CLPORT=?
+CLPORT: ("TCP","UDP"),(0-65535)
```

OK

AT+CLPORT?

+CLPORT: 0,0

OK

NOTE

- This command will be effective when module is set as a client.

7.2.9 AT+CSTT Start Task and Set APN,USER NAME,PASSWORD

AT+CSTT Start Task and Set APN,USER NAME,PASSWORD

Test Command

AT+CSTT=?

Response

+CSTT: "APN","USER","PWD"

OK

Read Command

AT+CSTT?

Response

+CSTT: <apn>,<user name>,<password>

OK

Write Command

**AT+CSTT=<apn>,<user
name>,<password>**

Response

OK

If set fail

ERROR

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Execution Command

AT+CSTT

Response

OK

or

ERROR

Reference

Defined Values

<apn>	A string parameter which indicates the GPRS access point name. The max length is 32 bytes. Default value is "ctnb".(option)
<user name>	A string parameter which indicates the GPRS user name. The max length is 32 bytes.(option)
<password>	A string parameter which indicates the GPRS password. The max

length is 32 bytes.(option)

Example

```
AT+CSTT=?  
+CSTT: "APN","USER","PWD"
```

OK

```
AT+CSTT?  
+CSTT: "", "", ""
```

OK

NOTE

- The write command and execution command of this command is valid only at the state of IP INITIAL. After this command is executed, the state will be changed to IP START.

7.2.10 AT+CIICR Bring Up Wireless Connection

AT+CIICR Bring Up Wireless Connection

Test Command	Response
AT+CIICR=?	OK
Execution Command	Response
AT+CIICR	OK If bring up fail ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	85 seconds
Reference	

Example

```
AT+CIICR=?  
OK
```

NOTE

- AT+CIICR only activates moving scene at the status of IP START, after operating this Command is executed, the state will be changed to IP CONFIG.
- After module accepts the activated operation, if it is activated successfully, module state will be changed to IP GPRSACT, and it responds OK, otherwise it will respond **ERROR**.

7.2.11 AT+CIFSR Get Local IP Address

AT+CIFSR Get Local IP Address

Test Command AT+CIFSR=?	Response OK
Execution Command AT+CIFSR	Response <IP address> If get fail ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<IP address>	A string parameter which indicates the IP address assigned from GPRS or CSD.
---------------------------	--

Example

AT+CIFSR=?

OK

NOTE

- Only after PDP context is activated, local IP address can be obtained by AT+CIFSR, otherwise it will respond ERROR. To see the status use AT+CIPSTATUS command. Status should be:
IP GPRSACT, TCP CONNECTING, UDP CONNECTING, SERVER LISTENING, IP STATUS, CONNECT OK, TCP CLOSING, UDP CLOSING, TCP CLOSED, UDP CLOSED in

single-connection mode (see <state> parameter);
 IP STATUS, IP PROCESSING in multi-connection mode (see <state> parameter).

7.2.12 AT+CIPSTATUS Query Current Connection Status

AT+CIPSTATUS Query Current Connection Status	
Test Command AT+CIPSTATUS=?	Response OK
Write Command If multi IP connection mode (+CIPMUX=1) AT+CIPSTATUS=<n>	Response +CIPSTATUS: <n>,<bearer>,<TCP/UDP>,<IPaddress>,<port>,<client state> OK
Execution Command AT+CIPSTATUS	Response 1) If in single connection mode (+CIPMUX=0) OK STATE: <state> 2) If in multi-connection mode (+CIPMUX=1) OK STATE: <state> If the module is set as server S: 0,<bearer>,<port>,<server state> If the module is set as client C: <n>,<bearer>,<TCP/UDP>,<IP address>,<port>,<client state>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0-5 A numeric parameter which indicates the connection number
<bearer>	1 GPRS bearer, default is null
<server state>	Server state OPENING LISTENING CLOSING
<client state>	Client state

	INITIAL CONNECTING CONNECTED REMOTE CLOSING CLOSING CLOSED
<server state>	A string parameter which indicates the progress of connecting 0 IP INITIAL 1 IP START 2 IP CONFIG 3 IP GPRSACT 4 IP STATUS 5 TCP CONNECTING/UDP CONNECTING /SERVER LISTENING 6 CONNECT OK 7 TCP CLOSING/UDP CLOSING 8 TCP CLOSED/UDP CLOSED 9 PDP DEACT In Multi-IP state: 0 IP INITIAL 1 IP START 2 IP CONFIG 3 IP GPRSACT 4 IP STATUS 5 IP PROCESSING 9 PDP DEACT

Example

AT+CIPSTATUS=?

OK

7.2.13 AT+CDNSCFG Configure Domain Name Server

AT+CDNSCFG Configure Domain Name Server	
Test Command AT+CDNSCFG=?	Response +CDNSCFG: ("Primary DNS"),("Secondary DNS")
	OK
Read Command AT+CDNSCFG?	Response PrimaryDns: <pri_dns>

	SecondaryDns: <sec_dns>
	OK
Write Command	Response
AT+CDNSCFG=<pri_dns>[,<sec_dns>]	OK ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<pri_dns>	A string parameter which indicates the IP address of the primary domain name server. Default value is 208.67.222.222.
<sec_dns>	A string parameter which indicates the IP address of the secondary domain name server. Default value is 0.0.0.0. When you are on the network,<pri_dns><sec_dns> will use the DNS server address from the network, and the default DNS server address if the network is not.

Example

```
AT+CDNSCFG=?
+CDNSCFG: ("Primary DNS"),("Secondary DNS")
```

OK

```
AT+CDNSCFG?
PrimaryDns: 114.114.114.114
SecondaryDns: 119.29.29.29
```

OK

7.2.14 AT+CDNSGIP Query the IP Address of Given Domain Name

AT+CDNSGIP Query the IP Address of Given Domain Name	
Test Command	Response
AT+CDNSGIP=?	OK
Write Command	Response
AT+CDNSGIP=<domain name>	OK If query fail

	ERROR If successful, return: +CDNSGIP: 1,<domain name>,<IP1>[,<IP2>] If fail, return: +CDNSGIP: 0,<dns error code>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<domain name>	A string parameter which indicates the domain name.
<IP1>	A string parameter which indicates the first IP address corresponding to the domain name.
<IP2>	A string parameter which indicates the second IP address corresponding to the domain name.
<dns error code>	A numeric parameter which indicates the error code 8 DNS COMMON ERROR 3 NETWORK ERROR There are some other error codes as well.

Example

AT+CDNSGIP=?

OK

7.2.15 AT+CIPHEAD Add an IP Head at the Beginning of a Package Received

AT+CIPHEAD Add an IP Head at the Beginning of a Package Received	
Test Command AT+CIPHEAD=?	Response +CIPHEAD: (list of supported <mode>s)
	OK
Read Command AT+CIPHEAD?	Response +CIPHEAD: <mode>
	OK
Write Command AT+CIPHEAD=<mode>	Response OK

	or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	A numeric parameter which indicates whether an IP header is added to the received data or not. <u>0</u> Not add IP header <u>1</u> Add IP header, the format is: 1) For single IP connection (+CIPMUX=0) +IPD,<data length>: 2) For multi IP connection (+CIPMUX=1) +RECEIVE,<n>,<data length>:
---------------------	---

Example

```
AT+CIPHEAD=?  
+CIPHEAD: (0-NO HEADER,1-ADD HEADER)
```

OK

7.2.16 AT+CIPHEXS Show Data in Hex Mode of a Package Received

AT+CIPHEXS Show Data in Hex Mode of a Package Received	
Read Command AT+CIPHEXS?	Response +CIPHEXS: <mode>
	OK
Write Command AT+CIPHEXS=<mode>	Response OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	A numeric parameter which indicates whether show data in hex mode or not. 0-1 Not show data in hex mode. 2 Show data in hex mode. While AT+CIPHEAD=1, if<mode>=1 or 2: add 0d0a at the end of data.
--------	--

Example

```
AT+CIPHEXS?
+CIPHEXS: 0
```

OK

NOTE

- The command is effective only if AT+CIPRXGET=0.

7.2.17 AT+CIFSREX Get Local IP Address

AT+CIFSREX Get Local IP Address	
Test Command AT+CIFSREX=?	Response OK
Execution Command AT+CIFSREX	Response +CIFSREX: <IP address> OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<IP address>	A string parameter which indicates the IP address assigned from GPRS or CSD.
---------------------------	--

Example

```
AT+CIFSREX=?
```

```
OK
```

NOTE

- The command is effective only if AT+CIPRXGET=0.
- Only after PDP context is activated, local IP address can be obtained by AT+CIFSREX, otherwise it will respond ERROR. To see the status use AT+CIPSTATUS command. Status should be:
IP GPRSACT, TCP CONNECTING, UDP CONNECTING, SERVER LISTENING, IP STATUS,
CONNECT OK, TCP CLOSING, UDP CLOSING, TCP CLOSED, UDP CLOSED in
single-connection mode (see <state> parameter);
IP STATUS, IP PROCESSING in multi-connection mode (see <state> parameter).

7.2.18 AT+CIPATS Set Auto Sending Time

AT+CIPATS Set Auto Sending Time

Test Command AT+CIPATS=?	Response +CIPATS: (list of supported <mode>s),(list of supported <time>)
	OK
Read Command AT+CIPATS?	Response +CIPATS: <mode>,<time>
	OK
Write Command AT+CIPATS=<mode>[,<time>]	Response OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<IP address>	A numeric parameter which indicates whether set timer when module is sending data 0 Not set timer when module is sending data 1 Set timer when module is sending data
<time>	A numeric parameter which indicates the seconds after which the data will be sent. If <mode> is 1, <time> is 1-100. otherwise <time> is 0.

Example

```
AT+CIPATS=?  
+CIPATS: (0-NOT AUTO SEND,1-AUTO SEND),(1-100)
```

OK

```
AT+CIPATS=?  
+CIPATS: 0,0
```

OK

7.2.19 AT+CIPSPRT Set Prompt of ‘>’ When Module Sends Data

AT+CIPSPRT Set Prompt of ‘>’ When Module Sends Data

Test Command	Response
AT+CIPSPRT=?	+CIPSPRT: (list of supported <send prompt>s)

OK

Read Command	Response
AT+CIPSPRT?	+CIPSPRT: <send prompt>

OK

Write Command	Response
AT+CIPSPRT=<send prompt>	OK
	or
	ERROR

Parameter Saving Mode	NO_SAVE
-----------------------	---------

Max Response Time	-
-------------------	---

Reference	
-----------	--

Defined Values

<send prompt>	A numeric parameter which indicates whether to echo prompt ‘>’ after module issues AT+CIPSEND command. 0 It shows "send ok" but does not prompt echo ‘>' when sending is successful. 1 It prompts echo ‘>' and shows "send ok" when sending is successful. 2 It neither prompts echo ‘>' nor shows "send ok" when sending is successful.
----------------------------	---

Example

```
AT+CIPSPRT=?  
+CIPSPRT: (0,1,2)
```

OK

```
AT+CIPSPRT?  
+CIPSPRT: 1
```

OK

7.2.20 AT+CIPCSGP Set CSD or GPRS for Connection Mode

AT+CIPCSGP Set CSD or GPRS for Connection Mode

Test Command

AT+CIPCSGP=?

Response

**+CIPCSGP: 0-CSD,DIALNUMBER,USER NAME,PASSWORD,
RATE(0-3)
+CIPCSGP: 1-GPRS,APN,USER NAME,PASSWORD**

OK

Read Command

AT+CIPCSGP?

Response

+CIPCSGP: <mode>,<apn>,<user name>,<password>[,<rate>]

OK

Write Command

**AT+CIPCSGP=<mode>[,(<a
pn>,<user
name>,<password>),(<dial
number>,<user
name>,<password>,<rate>)]**

Response

OK

or

ERROR

Parameter Saving Mode

NO_SAVE

Max Response Time	-
Reference	

Defined Values

<mode>	A numeric parameter which indicates the wireless connection mode <u>0</u> Set CSD as wireless connection mode <u>1</u> Set GPRS as wireless connection mode
<apn>	A string parameter which indicates the access point name
<use name>	A string parameter which indicates the user name
<password>	A string parameter which indicates the password CSD parameters.
<dial number>	A string parameter which indicates the CSD dial numbers
<user name>	A string parameter which indicates the CSD user name
<password>	A string parameter which indicates the CSD password
<rate>	A numeric parameter which indicates the CSD connection rate 0 2400 1 4800 <u>2</u> 9600 3 14400

Example

```
AT+CIPSPRT=?  
+CIPSPRT: (0,1,2)
```

OK

```
AT+CIPSPRT?  
+CIPSPRT: 1
```

OK

7.2.21 AT+CIPSRIP Show Remote IP Address and Port When Received Data

AT+CIPSRIP Show Remote IP Address and Port When Received Data	
Test Command	Response
AT+CIPSRIP=?	+CIPSRIP: (list of supported <mode>s)
	OK
Read Command	Response

AT+CIPSRIP?	+CIPSRIP: <mode>
	OK
Write Command AT+CIPSRIP=<mode>	Response OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	A numeric parameter which shows remote IP address and port. <u>0</u> Do not show the prompt 1 Show the prompt, the format is as follows: 1) For single IP connection (+CIPMUX=0) +RECV FROM: <IP ADDRESS>:<PORT> 2) For multi IP connection (+CIPMUX=1) +RECEIVE,<n>,<data length>,<IP ADDRESS>:<PORT>
--------	--

Example

AT+CIPSRIP=?

+CIPSRIP: (0,1)

OK

AT+CIPSRIP?

+CIPSRIP: 0

OK

7.2.22 AT+CIPSHOWTP Display Transfer Protocol in IP Head When Received Data

AT+CIPSHOWTP Display Transfer Protocol in IP Head When Received Data

Test Command AT+CIPSHOWTP=?	Response +CIPSHOWTP: (list of supported <mode>s)
	OK

Read Command AT+CIPSHOWTP?	Response +CIPSHOWTP: <mode>
	OK
Write Command AT+CIPSHOWTP=<mode>	Response OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	A numeric parameter which indicates whether to display transfer protocol in IP header to received data or not <u>0</u> Not display transfer protocol 1 Display transfer protocol, the format is "+IPD,<data size>,<TCP/UDP>:<data>"
---------------------	---

Example

```
AT+CIPSHOWTP=?
+CIPSHOWTP: (0,1)
```

OK

```
AT+CIPSHOWTP?
+CIPSHOWTP: 0
```

OK

NOTE

- This command will be effective only in single connection mode (+CIPMUX=0).
- Only when +CIPHEAD is set to 1, the setting of this command will work.

7.2.23 AT+CIPUDPMODE UDP Extended Mode

AT+CIPUDPMODE UDP Extended Mode

Test Command AT+CIPUDPMODE=?	Response 1) For single IP connection (+CIPMUX=0) +CIPUDPMODE: (0-2),("0-255).(0-255).(0-255).(0-255"),(0-65535)
	OK 2) For multi IP connection (+CIPMUX=1) +CIPUDPMODE:(0-5),(0-2),("0-255).(0-255).(0-255).(0-255"),(0-65535)
	OK
Read Command AT+CIPUDPMODE?	Response 1) For single IP connection (+CIPMUX=0) +CIPUDPMODE: <mode>[,<IP address>,<Port>]
	OK 2) For multi IP connection (+CIPMUX=1) +CIPUDPMODE: 0,<mode>[,<IP address>,<Port>] +CIPUDPMODE: 1,<mode>[,<IP address>,<Port>] +CIPUDPMODE: 2,<mode>[,<IP address>,<Port>] +CIPUDPMODE: 3,<mode>[,<IP address>,<Port>] +CIPUDPMODE: 4,<mode>[,<IP address>,<Port>] +CIPUDPMODE: 5,<mode>[,<IP address>,<Port>]
	OK
Write Command 1) For single IP connection (+CIPMUX=0) AT+CIPUDPMODE=<mode>[<IP address>,<Port>]	Response OK or ERROR
2) For multi IP connection (+CIPMUX=1) AT+CIPUDPMODE=<n>,<mode>[<IP address>,<Port>]	
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	A numeric parameter which indicates the connection number.
------------------	--

	0-5
<mode>	Mode type 0 UDP Normal Mode 1 UDP Extended Mode 2 Set UDP address to be sent
<IP address>	A string parameter which indicates remote IP address
<port>	Remote port. Default value is 0, if users want to set a port; the value is 1-65535.

Example

AT+CIPUDPMODE=?

+CIPUDPMODE: (0-2),("0-255).(0-255).(0-255).(0-255"),(0-65535)

OK

AT+CIPUDPMODE?

+CIPUDPMODE: 0

OK

7.2.24 AT+CIPRXGET Get Data from Network Manually

AT+CIPRXGET Get Data from Network Manually

Test Command

AT+CIPRXGET=?

Response

If single IP connection (+CIPMUX=0)

+CIPRXGET: (list of supported <mode>s),(list of supported <reqlength>)

OK

If multi IP connection (+CIPMUX=1)

+CIPRXGET: (list of supported <mode>s),(list of supported <id>s),(list of supported <reqlength>)

OK

Read Command

AT+CIPRXGET?

Response

+CIPRXGET: <mode>

OK

Write Command

1) If single IP connection
(+CIPMUX=0)

Response

OK

or

AT+CIPRXGET=<mode>[,<reqlength>]

2) If multi IP connection
(+CIPMUX=1)

AT+CIPRXGET=<mode>[,<id>[,<reqlength>]]

ERROR

1)For single IP connection

If "AT+CIPSRIP=1" is set, IP address and port are contained.

if <mode>=1

+CIPRXGET: 1[,<IP ADDRESS>:<PORT>]

if <mode>=2

+CIPRXGET: 2,<reqlength>,<cnflength>[,<IP ADDRESS>:<PORT>]

1234567890...

OK

if <mode>=3

+CIPRXGET: 3,<reqlength>,<cnflength>[,<IP ADDRESS>:<PORT>]

5151...

OK

if <mode>=4

+CIPRXGET: 4,<cnflength>

OK

2)For multi IP connection

If "AT+CIPSRIP=1" is set, IP address and port is contained.

if <mode>=1

+CIPRXGET: 1,<id>[,<IP ADDRESS>:<PORT>]

if <mode>=2

+CIPRXGET: 2,<id>,<reqlength>,<cnflength>[,<IP ADDRESS>:<PORT>]

1234567890...

OK

if <mode>=3

+CIPRXGET: 3,<id>,<reqlength>,<cnflength>[,<IP ADDRESS>:<PORT>]

5151...

OK

if <mode>=4

+CIPRXGET: 4,<id>,<cnflength>

OK

If error is related to ME functionality:

+CME ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<mode>	<u>0</u> Disable getting data from network manually, the module is set to normal mode, data will be pushed to TE directly. 1 Enable getting data from network manually. 2 The module can get data, but the length of output data can not exceed 1460 bytes at a time. 3 Similar to mode 2, but in HEX mode, which means the module can get 730 bytes maximum at a time. 4 Query how many data are not read with a given ID.
<id>	A numeric parameter which indicates the connection number
<reqlength>	Requested number of data bytes (1-1460 bytes)to be read
<cnflength>	Confirmed number of data bytes to be read, which may be less than <length>. 0 indicates that no data can be read.

Example

AT+CIPRXGET=?**+CIPRXGET: (0-4),(1-1460)**

OK

AT+CIPRXGET?**+CIPRXGET: 0**

OK

NOTE

- To enable this function, parameter <mode> must be set to 1 before connection.

7.2.25 AT+CIPTKA Set TCP Keepalive Parameters**AT+CIPTKA Set TCP Keepalive Parameters**

Test Command

AT+CIPTKA=?

Response

If single IP connection (+CIPMUX=0)

+CIPTKA: (list of supported <mode>s),(list of supported <keepIdle>s),(list of supported <keepInterval>),(list of supported <keepCount>s)
 If multi IP connection (+CIPMUX=1)
 +CIPTKA: (list of supported <id>s),(list of supported <mode>s),(list of supported <keepIdle>s),(list of supported <keepInterval>),(list of supported <keepCount>s)

OK

Read Command AT+CIPTKA?	Response If single IP connection (+CIPMUX=0) +CIPTKA: <mode>[,<keepIdle>,<keepInterval>,<keepCount>] If multi IP connection (+CIPMUX=1) +CIPTKA: 0,<mode>[,<keepIdle>,<keepInterval>,<keepCount>] +CIPTKA: 1,<mode>[,<keepIdle>,<keepInterval>,<keepCount>] +CIPTKA: 2,<mode>[,<keepIdle>,<keepInterval>,<keepCount>] +CIPTKA: 3,<mode>[,<keepIdle>,<keepInterval>,<keepCount>] +CIPTKA: 4,<mode>[,<keepIdle>,<keepInterval>,<keepCount>] +CIPTKA: 5,<mode>[,<keepIdle>,<keepInterval>,<keepCount>]
-----------------------------------	--

OK

Write Command 1) If single IP connection (+CIPMUX=0) AT+CIPTKA=<mode>[,<keepIdle>[,<keepInterval>[,<keepCount>]]]	Response OK If error is related to ME functionality: ERROR
2) If multi IP connection (+CIPMUX=1) AT+CIPTKA=<n>,<mode>[,<keepIdle>[,<keepInterval>[,<keepCount>]]]	

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	A numeric parameter which indicates the connection 0-5
<mode>	Set TCP keepalive option. 0 Disable TCP keep alive mechanism 1 Enable TCP keep alive mechanism
<keepIdle>	Integer type; Idle time (in second) before TCP send the initial

	keepalive probe. 30-7200 Default: 7200
<keepInterval>	Interval time (in second) between keepalive probes retransmission. 30-600 Default: 75
<keepCount>	Integer type; Max number of keepalive probes to be sent. 1-9 Default: 9

Example

```
AT+CIPTKA=?
+CIPTKA: (0-1),(30-7200),(30-600),(1-9)
```

OK

```
AT+CIPTKA?
+CIPTKA: 0
```

OK

NOTE

- If <keepIdle>, <keepInterval> and <keepCount> is not set, module will use the default values when <mode>=1.

7.2.26 AT+CIPMODE Open Transparent Mode

AT+CIPMODE Open Transparent Mode

Test Command AT+CIPMODE=?	Response +CIPMODE: (0-NORMAL MODE,1-TRANSPARENT MODE)
Read Command AT+CIPMODE?	Response +CIPMODE: <mode>
Execution Command AT+CIPMODE=<mode>	Response OK If set fail ERROR

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	Transparent mode 0 Disable transparent mode 1 Enable transparent mode
--------	---

Example

```
AT+CIPMODE=?  
+CIPMODE: (0-NORMAL MODE,1-TRANSPARENT MODE)
```

OK

```
AT+CIPMODE?  
+CIPMODE: 0
```

OK

NOTE

- The execution command of this command is valid only activates moving scene at the status of IP_INITIAL or IP_CLOSED
- The execution command of this command is valid only for single connection

7.2.27 AT+CIPCHAN Enter Transparent Mode

AT+CIPCHAN Enter Transparent Mode	
Test Command AT+CIPCHAN=?	Response OK
Execution Command AT+CIPCHAN	Response CONNECT or ERROR
Parameter Saving Mode	NO_SAVE

Max Response Time

-

Reference

Defined Values

<mode>	Transparent mode 0 Disable transparent mode 1 Enable transparent mode
--------	---

Example

AT+CIPCHAN=?

OK

NOTE

- This command is executed in single-connection mode.
- Before execute this command, "AT+CIPMODE=1" must be executed and the connection must be established successfully.
- When module is in transparent mode, if user tapped "+++", module would exit transparent mode.
- When user tapped "+++" to exit transparent mode, user can execute the command of "ATO" to return transparent mode.

8 AT Commands for HTTP(S) Application

8.1 Overview of AT Commands for HTTP(S) Application

Command	Description
AT+CHTTPCREATE	Create a HTTP client instance
AT+CHTTPCREATEEXT	Create a HTTPS client instance by multi packages for a long size command
AT+CHTTPCON	Establish the HTTP(S) connection
AT+CHTTPDISCON	Close the HTTP(S) connection
AT+CHTTPDESTROY	Destroy the HTTP(S) client instance
AT+CHTTPSEND	Send HTTP(S) package
AT+CHTTPSENDEXT	Send HTTP(S) package by multi packages for a long size command
AT+CHTTPPARA	Set parameter for AT command of AT+CHTTPSEND
AT+CHTPTOFS	Download File to Module System
AT+CHTTPCLRMULCRTBUF	Clear multi create buffer of AT+CHTTPCREATEEXT
AT+CHTTPCLRMULSNDBUF	Clear multi send buffer of AT+CHTTPSENDEXT
AT+CHTTPRESUMESEND	Set resume send package or not when HTTP(S) disconnected
+CHTTPNMIH	Header of the response from host
+CHTTPNMIC	Content of the response from host
+CHTTPERR	HTTP(S) client connection error indicator
+CHTPTOFS	HTTP(S) download indicate from host
+CHTPTOFSOK	HTTP(S) download finished indicate

8.2 Detailed Descriptions of AT Commands for HTTP(S) Application

8.2.1 AT+CHTTPCREATE Create a HTTP Client Instance

AT+CHTTPCREATE Create a HTTP Client Instance

Read Command AT+CHTTPCREATE?	Response +CHTTPCREATE: <httpclient_id>,<state>,<host>[<CR><LF> +CHTTPCREATE: <httpclient_id>,<state>,<host> [...]]
	OK
Write Command AT+CHTTPCREATE=<host>[<auth_user>,<auth_password>]	Response Create an HTTP or HTTPS client instance and set configuration. If the <host> is start with "https://", our device will create an HTTPS client. +CHTTPCREATE: <httpclient_id>
	OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<host>	HTTP server host
<auth_user>	Authorization name [option]
<auth_password>	Authorization password [option]
<httpclient_id>	An indicator of HTTP client instance created by the command.
<state>	The create state of the httpclient_id 1 Successfully 0 Failed

Example

```
AT+CHTTPCREATE?
+CHTTPCREATE: 0,0,(null)
+CHTTPCREATE: 1,0,(null)
+CHTTPCREATE: 2,0,(null)
+CHTTPCREATE: 3,0,(null)
+CHTTPCREATE: 4,0,(null)
```

OK

NOTE

- All optional parameter should be exist or not exist in one command.

8.2.2 AT+CHTTPCREATEEXT Create a HTTPS Client Instance by Multi Packages for a Long Size Command

AT+CHTTPCREATEEXT Create a HTTPS Client Instance by Multi Packages for a Long Size Command

Read Command AT+CHTTPCREATEEXT?	Response +CHTTPCREATEEXT: <httpclient_id>,<state>,<host>[<CR><LF> +CHTTPCREATEEXT: <httpclient_id>,<state>,<host> [...]]
	OK
Write Command AT+CHTTPCREATEEXT=<flag>,<total_len>,<len>,<host>[<auth_user>,<auth_pass word>,<server_cert_len>,<s erver_cert>,<client_cert_len >,<client_cert>,<client_pk_l en>,<client_pk>]	Response Create an HTTP or HTTPS client instance and set configuration. If the <host> is start with "https://", our device will create an HTTPS client. +CHTTPCREATEEXT: <httpclient_id> OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<flag>	1 Means there are more packages, 0 Means this package is the last one
<total_len>	The total length of the command
<len>	The length of current package
<host>	HTTP server host
<auth_user>	Authorization name [option]
<auth_password>	Authorization password [option]
<server_cert_len>	Server certification length, for https [option]
<server_cert>	Server certification, for https [option]
<client_cert_len>	Client certification length, for https [option]
<client_cert>	Client certification, for https [option]
<client_pk_len>	Client private key length, for https [option]
<client_pk>	Client private key, for https [option]

<httpclient_id>	An indicator of HTTP client instance created by the command.
<state>	The create state of the httpclient_id 1 Successfully 0 Failed

Example

```
AT+CHTTPCREATEEXT?
+CHTTPCREATEEXT: 0,0,(null)
+CHTTPCREATEEXT: 1,0,(null)
+CHTTPCREATEEXT: 2,0,(null)
+CHTTPCREATEEXT: 3,0,(null)
+CHTTPCREATEEXT: 4,0,(null)
```

OK

NOTE

- All optional parameter should be exist or not exist in one command.

8.2.3 AT+CHTTPCON Establish the HTTP(S) Connection

AT+CHTTPCON Establish the HTTP(S) Connection

Test Command	Response
AT+CHTTPCON=?	+CHTTPCON: (0-4)
	OK
Read Command	Response
AT+CHTTPCON?	+CHTTPCON: <httpclient_id>,<con_state>,<host>[<CR><LF> +CHTTPCON: <httpclient_id>,<con_state>,<host> [...]]
	OK
Write Command	Response
AT+CHTTPCON=<httpclient_id>	Use the created HTTP instance to connect to target host. OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command.
<con_state>	The connected state of the httpclient_id 1 OK 0 FAIL
<host>	HTTP server host

Example

AT+CHTTPCON=?

+CHTTPCON: (0-4)

OK

AT+CHTTPCON?

+CHTTPCON: 0,0,(null)

+CHTTPCON: 1,0,(null)

+CHTTPCON: 2,0,(null)

+CHTTPCON: 3,0,(null)

+CHTTPCON: 4,0,(null)

OK

NOTE

- AT+CHTTPCREATE should be set before this command.

8.2.4 AT+CHTTPDISCON Close the HTTP(S) Connection

AT+CHTTPDISCON Close the HTTP(S) Connection

Test Command	Response
AT+CHTTPDISCON=?	+CHTTPDISCON: (0-4)
	OK
Write Command	Response

AT+CHTTPDISCON=<httpclient_id>	Use the created HTTP instance to disconnect the connection with host. After disconnected and before destroy the HTTP instance, you can use AT+CHTTPCON to connect it again.
Parameter Saving Mode	OK or ERROR
Max Response Time	-
Reference	

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command.
------------------------------	--

Example

```
AT+CHTTPDISCON=?
+CHTTPDISCON: (0-4)
```

OK

NOTE

- AT+CHTTPCON should be set before this command.

8.2.5 AT+CHTTPDESTROY Destroy the HTTP(S) Client Instance

AT+CHTTPDESTROY Destroy the HTTP(S) Client Instance	
Test Command AT+CHTTPDESTROY=?	Response +CHTTPDESTROY: (0-4)
	OK
Read Command AT+CHTTPDESTROY?	Response +CHTTPDESTROY: <httpclient_id>,<state>,<host>[<CR><LF>+CHTTPDESTROY: <httpclient_id>,<state>,<host>

	[...]]
	OK
Write Command AT+CHTTPDESTROY=<httpclient_id>	Response Use the created HTTP instance to disconnect the connection with host. OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command.
<state>	The create state of the httpclient_id 1 Successfully 0 Failed
<host>	HTTP server host

Example

```
AT+CHTTPDESTROY=?
+CHTTPDESTROY: (0-4)
```

OK

NOTE

- AT+CHTTPCREATE should be set before this command

8.2.6 AT+CHTTPSEND Send HTTP(S) Package

AT+CHTTPSEND Send HTTP(S) Package

Test Command	Response
--------------	----------

AT+CHTTPSEND=?	+CHTTPSEND: (0-4),(0-3),"path","http header","http content type","http content"
	OK
Write Command	Response
AT+CHTTPSEND=<httpclient_id>,<method>,<path>[,<customer_header>,<content_type>,<content_string>]	OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command.
<method>	HTTP method 0 HTTPCLIENT_GET 1 HTTPCLIENT_POST 2 HTTPCLIENT_PUT 3 HTTPCLIENT_DELETE
<path>	The resource path on server, ex. "/html/login/index.html" means the url full path is "<host>/html/login/index.html".
<customer_header>	The string converted from customer header hex data.
<content_type>	A string indicates the content type of the content, if the method is not POST and PUT, it must be empty.
<content_string>	The string converted from content hex data.

Example

```
AT+CHTTPSEND=?
+CHTTPSEND: (0-4),(0-3),"path","http header","http content type","http content"
```

OK

NOTE

- AT+CHTTPCON should be set before this command

8.2.7 AT+CHTTPSENDEXT Send HTTP(S) Package by Multi Packages for a Long Size Command

AT+CHTTPSENDEXT Send HTTP(S) Package by Multi Packages for a Long Size Command

Test Command

AT+CHTTPSENDEXT=?

Response

+CHTTPSENDEXT:

(0-1),"total_len","current_len",(0-4),(0-3),"path_len","path",
 "header_len","header","content_type_len","content_type","content_string_len","content_string"

OK

Write Command

AT+CHTTPSENDEXT=<flag>,<total_len>,<len>,<httpclient_id>,<method>,<path_len>,<path>,<customer_header_len>,<customer_header>,<content_type_len>,<content_type_len>,<content_string_len>,<content_string>

Response

OK

or

ERROR

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<flag>	1 Means there are more packages 0 Means this package is the last one
<total_len>	The total length of the command
<len>	The length of current package
<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command.
<method>	HTTP method 0 HTTPCLIENT_GET 1 HTTPCLIENT_POST 2 HTTPCLIENT_PUT 3 HTTPCLIENT_DELETE
<path_len>	length of path
<path>	The resource path on server, ex. "/html/login/index.html" means the url full path is "<host>/html/login/index.html".

<code><customer_header_len></code>	Length of customer_header
<code><customer_header></code>	The string converted from customer header hex data.
<code><content_type_len></code>	The length of Content_type
<code><content_type></code>	A string indicate the content type of the content, if the method is not POST and PUT, it must be empty.
<code><content_string_len></code>	The length of Content_string
<code><content_string></code>	The string converted from content hex data.

Example

```
AT+CHTTPSENDEXT=?  
+CHTTPSENDEXT:  
(0-1),"total_len","current_len",(0-4),(0-3),"path_len","path","header_len","header",  
"content_type_len","content_type","content_string_len","content_string"
```

OK

NOTE

- AT+CHTTPCON should be set before this command

8.2.8 AT+CHTTPPARA Set Parameter for AT Command of AT+CHTTPSEND

AT+CHTTPPARA Set Parameter for AT Command of AT+CHTTPSEND

Test Command AT+CHTTPPARA=?	Response +CHTTPPARA: (0-1)
	OK
Read Command AT+CHTTPPARA?	Response +CHTTPPARA: <value>
	OK
Write Command AT+CHTTPPARA=<value>	Response OK or ERROR
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<value>	The parameter for sending 1 Can send AT+CHTTPSEND continuously 0 Can not send AT+CHTTPSEND continuously, until the server response
----------------------	--

Example

```
AT+CHTTPPARA=?  
+CHTTPPARA: (0-1)
```

OK

```
AT+CHTTPPARA?  
+CHTTPPARA: 0
```

OK

NOTE

- Use this command for setting send parameter, so that you can send "AT+CHTTPSEND" continuously, and no care of the response.

8.2.9 AT+CHTPTOFS Download File to Module System

AT+CHTPTOFS Download File to Module System

Test Command AT+CHTPTOFS=?	Response +CHTPTOFS: (0-4),"path"
	OK
Write Command AT+CHTPTOFS=<httpclient_id>,<path>	Response Use the created HTTP instance to connect to target host. OK or ERROR
Parameter Saving Mode	NO_SAVE

Max Response Time	-
Reference	

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command
<path>	The resource path on server, it should begin with "/". ex. "/html/login/index.html" means the url full path is "<host>/html/login/index.html".

Example

```
AT+CHTTPTOFS=?  
+CHTTPTOFS: (0-4), "path"
```

OK

NOTE

- AT+CHTTPCON should be set before this command.

8.2.10 AT+CHTTPCLRMULCRTBUF Clear Multi Create Buffer of AT+CHTTPCREATEEXT

AT+CHTTPCLRMULCRTBUF Clear Multi Create Buffer of AT+CHTTPCREATEEXT	
Execution Command	Response
AT+CHTTPCLRMULCRTBU	OK
F	or
	ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

NOTE

- Clear multi create buffer of AT+CHTTPCREATEEXT. When you do not AT+CHTTPCREATEEXT

the last package, but you want to AT+CHTTPCREATEEXT the new command, you can AT+CHTPCLRMULCRTBUF.

8.2.11 AT+CHTPCLRMULSNUF Clear Multi Send Buffer of AT+CHTPSENDEXT

AT+CHTPCLRMULSNUF Clear Multi Send Buffer of AT+CHTPSENDEXT

Execution Command	Response
AT+CHTPCLRMULSNUF	OK
	or
	ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

NOTE

- Clear multi send buffer of AT+CHTPSENDEXT. When you do not AT+CHTPSENDEXT the last package, but you want to AT+CHTPSENDEXT the new command, you can AT+CHTPCLRMULSNUF.

8.2.12 AT+CHTPRESUMESEND Set Resume Send Package or not when HTTP(S) Disconnected

AT+CHTPRESUMESEND Set Resume Send Package or not when HTTP(S) Disconnected

Test Command	Response
AT+CHTPRESUMESEND=?	+CHTPRESUMESEND: (0-1)
	OK
Read Command	Response
AT+CHTPRESUMESEND?	+CHTPRESUMESEND: <value>
	OK
Write Command	Response
AT+CHTPRESUMESEND=<value>	OK
	or

ERROR	
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<value>	Resume send package or not when HTTP disconnected. 1 Can resume send packages by AT+CHTTPSENDEXT when HTTP disconnected 0 Cannot resume send packages by AT+CHTTPSENDEXT when HTTP disconnected. Once HTTP disconnected, multi send buffer of AT+CHTTPSENDEXT is cleared automatically, you should always AT+CHTTPSENDEXT the first package
----------------------	---

Example

```
AT+CHTTPPRESUMESEND=?  
+CHTTPPRESUMESEND: (0-1)
```

OK

8.2.13 +CHTTPNMIH Header of the Response from Host

+CHTTPNMIH Header of the Response from Host	
	Response The response from host has 2 parts. This is the header part and content part will follow this URC. +CHTTPNMIH: <code><httpclient_id>,<response_code>,<header_length>,<header></code>

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command
<response_code>	The HTTP response code 100 Continue 101 Switching Protocols 200 OK

	201 Created 202 Accepted 203 Non-Authoritative Information 204 No Content 205 Reset Content 206 Partial Content 300 Multiple Choices 301 Moved Permanently 302 Found 303 See Other 304 Not Modified 305 Use Proxy 307 Temporary Redirect 400 Bad Request 401 Unauthorized 402 Payment Required 403 Forbidden 404 Not Found 405 Method Not Allowed 406 Not Acceptable 407 Proxy Authentication Required 408 Request Time-out 409 Conflict 410 Gone 411 Length Required 412 Precondition Failed 413 Request Entity Too Large 414 Request-URI Too Large 415 Unsupported Media Type 416 Requested Range Not Satisfiable 417 Expectation Failed 500 Internal Server Error 501 Not Implemented 502 Bad Gateway 503 Service Unavailable 504 Gateway Time-out 505 HTTP Version not supported
<header_length>	The length (buffer size) of the header string
<header>	Header data of response

8.2.14 +CHTPNMIC Content of The Response from Host

+CHTTPNMIC Content of The Response from Host

Response

The response from host has 2 parts. This is the content part and follows by the header part URC. And there are multi content URC follow one header URC.

+CHTTPNMIC:

<httpclient_id>,<flag>,<total_length><content_package_len>,<content_package_string>

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command
<flag>	The flag to indicate if there are more data of the HTTP content. 1 Means there are more packages 0 Means this package is the last one
<total_length>	The total length of the content. It is get from header "Content-Length: xxx", so if the response is not 200 OK, maybe the value is -1.
<content_package_len>	Content data length of current URC.
<content_package_string>	Content data string which is converted from content hex data. The length must be original content hex data size/2.

8.2.15 +CHTTPERR HTTP(S) Client Connection Error Indicator

+CHTTPERR HTTP Client Connection Error Indicator

Response

When the URC send, there is some error happen on the HTTP client. Normally is TCP connection is disconnected.

+CHTTPERR: <httpclient_id>[,<error_code>]

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command
<error_code>	-1 Means disconnected -2 Connection was closed by a remote host. -3 An unknown error occurred. -4 A protocol error occurred. -5 Could not resolve the hostname. -6 A URL parse error occurred.

If the URC send out, the HTTP client will be disconnected automatically. If user want to send HTTP message to server, he must use AT+CHTTPCON command to connect.

8.2.16 +CHTPTOFS HTTP(S) Download Indicate from Host

+CHTPTOFS HTTP(S) Download Indicate from Host

Response

HTTP download progress indicate

+CHTPTOFS: <httpclient_id>,<flag>,<content_len>,<len>

Defined Values

<httpclient_id>	The indicator of HTTP(S) client instance created by the AT+CHTTPCREATE command
<flag>	The flag to indicate if there are more data of the HTTP content 1 Means there are more packages 0 Means this package is the last one
<content_len>	Total length of content data
<len>	The length of all downloaded content data

8.2.17 +CHTPTOFSOK HTTP(S) Download Finished Indicate

+CHTPTOFSOK HTTP Download Finished Indicate

Response

+CHTPTOFSOK: <httpclient_id>,<content_len>,<len>

Defined Values

<httpclient_id>	The indicator of HTTP client instance created by the AT+CHTTPCREATE command
<content_len>	Total length of content data
<len>	The length of all downloaded content data

9 AT Commands for PING Application

9.1 Overview of AT Commands for PING Application

Command	Description
AT+CIPPING	Test IP network connectivity to a remote host

9.2 Detailed Descriptions of AT Commands for PING Application

9.2.1 AT+CIPPING Test IP Network Connectivity to A Remote Host

AT+CIPPING Test IP Network Connectivity to A Remote Host	
Test Command AT+CIPPING=?	Response +CIPPING: (list of supported <retryNum>s),(list of supported <dataLen>s),(list of supported <timeout>s) OK
Read Command AT+CIPPING?	Response +CIPPING: <retryNum>,<dataLen>,<timeout> OK
Write Command AT+CIPPING=<IPAddr>[,<retryNum>[,<dataLen>[,<timeout>]]]	Response OK +CIPPING: <replyId>,<ip Address>,<replyTime>,<ttl>[<CR><LF>]+CIPPING: <replyId>,<ip Address>,<replyTime>,<ttl> [...]] or BUSY (When previous command unfinished, AT+CIPPING again) or ERROR

	or +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<IPAddr>	IP address of the remote host, string type.
<retryNum>	The number of Ping Echo Request to send 1-100 Default: 4
<dataLen>	The length of Ping Echo Request data 0-5120 Default: 32
<timeout>	The timeout, in units of 100ms, waiting for a single Echo Reply 1-600 Default: 100(10 seconds)
<replyId>	Echo Reply number
<IP Address>	IP Address of the remote host
<replyTime>	Time, in units of 100ms, required to receive the response
<ttl>	Time to live

Example

```
AT+CIPPING=?  
+CIPPING: (1-100),(0-5120),(1-600)
```

OK

```
AT+CIPPING?  
+CIPPING: 4,32,100
```

OK

NOTE

- Before sending PING Request the PDP context must be activated.
- When the Echo Request timeout expires (no reply received on time), the response will contains **<replyTime>** setting to 100(default timeout)

10 AT Commands for LwM2M Application

10.1 Overview of AT Commands for LwM2M Application

Command	Description
AT+CLMCONF	Configure LwM2M instance and create the connection
AT+CLMADDOBJ	Add LwM2M object
AT+CLMDELOBJ	Delete LwM2M object
AT+CLMREAD	Read notification and command
AT+CLMWRITE	Write notification and command
AT+CLMEXECUTE	Execute notification and command
AT+CLMNOTIFY	Notify data change
AT+CLMDEL	Delete LwM2M instance
+CLMOBSERVE	Indicated an observe command
+CLMPARAMETER	Indicated an observer's parameter
+CLMERR	Indicated there are some errors

10.2 Detailed Descriptions of AT Commands for LwM2M Application

10.2.1 AT+CLMCONF Configure LwM2M Instance and Create the Connection

AT+CLMCONF Configure LwM2M Instance and Create the Connection	
Write Command	Response
AT+CLMCONF=<ip_addr>,<port>,<local_port>,<name>,<domain>,<lifetime>[,<pskid>,<psk>][,<binding_mode>]	+CLMCONF: <lwm2m_id>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-

Reference

Defined Values

<ip_addr>	String, LwM2M server IP address.
<port>	Integer, LwM2M server port.
<local_port>	Integer, local port.
<name>	String, Username for show in server.
<domain>	String, specifies the type of packet data protocol: IPv4 Internet Protocol (IETF STD 5) IPv6 Internet Protocol, version 6 (IETF RFC 2460).
<lifetime>	Integer, lifetime to register LwM2M server. The unit is second.
<pskid>	String, Mandatory for DTLS register.
<psk>	String, Mandatory for DTLS register.
<binding_mode>	Integer, binding mode supported by LwM2M client/server. 1 UDP mode 2 UDP queue mode

10.2.2 AT+CLMADDOBJ Add LwM2M Object

AT+CLMADDOBJ Add LwM2M Object

Write Command	Response
AT+CLMADDOBJ=<lwm2m_id>,<object_id>,<instance_id>,<resource_count>,<resource_id>,...	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response. Range is 0-32.
<object_id>	Integer, object id. range is 0-65535.
<instance_id>	Integer, instance id. Range is 0-32.
<resource_count>	Integer, resource count. Range is 0-32.
<resource_id>	Integer, resource id. Range is 0-32.

NOTE

- AT+CLMCONF should be set before this command.

10.2.3 AT+CLMDELOBJ Delete LwM2M Object

AT+CLMDELOBJ Delete LwM2M Object

Write Command	Response
AT+CLMDELOBJ=<lwm2m_id>,<object_id>	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response.
<object_id>	Integer, object id.

NOTE

- AT+CLMADDOBJ should be set before this command.

10.2.4 AT+CLMREAD Read Notification and Command

AT+CLMREAD Read Notification and Command

Write Command	Response
AT+CLMREAD=<lwm2m_id>,<object_id>,<instance_id>,<resource_cnt>,<resource_id>,<value_type>,<len>,<value>,<resource_id>,<value_type>,<len>,<value>,<resource_id>,<value_type>,<len>,<value>	This command used to indicated there is received a read operation. And then using this command to send the read operation result. OK +CLMREAD: <lwm2m_id>,<object_id>,<instance_id>,<count>,<resource_id>,<resource_id>,<resource_id>

<value>,...

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response.
<object_id>	Integer, object id.
<instance_id>	Integer, instance id.
<resource_cnt>	Integer, if it is 0, means all readable resources of the instance.
<resource_id>	Integer, if count is 0, the resource id is not exist.
<value_type>	Char, value type. I Integer F Float B Boolean D UINT8 array data S String
<len>	Integer, value length.
<values>	Value type, value context.

10.2.5 AT+CLMWRITE Write Notification and Command

AT+CLMWRITE Write Notification and Command

Write Command	Response
AT+CLMWRITE=<lwm2m_id>,<result>	This command used to indicated there is received a write operation. And then using this command to send the write operation result. OK
	+CLMWRITE: <lwm2m_id>,<object_id>,<instance_id>,<resource_cnt>,<resource_id>,<value_type>,<len>,<value>,<resource_id>,<value_type>,<len>,<value>,...
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response.
<result>	I Integer, write result, result of write command, error code. 0 Success Other value is error code in Spec.
<object_id>	Integer, object id.
<instance_id>	Integer, instance id.
<resource_cnt>	Integer, if resource_id== -1, there will be set count.
<resource_id>	Integer, resource id. -1 All of resource about the instance.
<value_type>	Char, value type. I Integer F Float B Boolean D UINT8 array data S String
<len>	Integer, value length.
<value>	Value type, value context.

10.2.6 AT+CLMEXECUTE Execute Notification and Command

AT+CLMEXECUTE Execute Notification and Command

Write Command

AT+CLMEXECUTE=<lwm2m_id>,<result>

Response

This command used to indicated there is received a execute operation. And then using this command to send the execute operation result.

OK

+CLMEXECUTE:

<lwm2m_id>,<object_id>,<instance_id>,<resource_id>,<len>,<buffer>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response.
<result>	Integer, result of write command, error code. 0 Success Other value is error code in Spec.

<object_id>	Integer, object id.
<instance_id>	Integer, instance id.
<resource_id>	Integer, resource id. -1 All of resource about the instance.
<len>	Integer, data size.
<buffer>	Raw data in hex value but char format, execute command.

10.2.7 AT+CLMNOTIFY Notify Data Change

AT+CLMNOTIFY Notify Data Change	
Write Command	Response
AT+CLMNOTIFY=<lwm2m_id>,<object_id>,<instance_id>,<resource_id>	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response
<object_id>	Integer, object id
<instance_id>	Integer, instance id
<resource_id>	Integer, resource id

10.2.8 AT+CLMDEL Delete LwM2M Instance

AT+CLMDEL Delete LwM2M Instance	
Write Command	Response
AT+CLMDEL=<lwm2m_id>	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response
------------	--

10.2.9 +CLMOBSERVE Indicated an observe command

+CLMOBSERVE Indicated an observe command

Response

This command used to indicated there is received an observe command.

+CLMOBSERVE:

<lwm2m_id>,<code>,<object_id>[,<instance_id>],<resource_id>

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response.
<code>	Integer, 0 Add observe 1 Cancel observe
<object_id>	Integer, object id.
<instance_id>	Integer, instance id. -1 All of instances of the object.
<resource_id>	Integer, resource id. -1 All of resource about the instance.

10.2.10+CLMPARAMETER Indicated an observer's parameter

+CLMPARAMETER Indicated an observer's parameter

Response

This command used to indicated there is received an observer's parameter command.

+CLMPARAMETER:

<lwm2m_id>,<object_id>,<instance_id>,<resource_id>,<toSet>,<toClear>,<minPeriod>,<maxPeriod>,<greaterThan>,<lessThan>,<step>

Defined Values

<lwm2m_id>	AT+CLMCONF result
------------	-------------------

<object_id>	Object id.
<instance_id>	Instance id -1 All of instances and resources
<resource_id>	Resource id -1 All of resource about the instance
<toSet>	Integer, to Set value
<toClear>	Integer, to Clear value
<minPeriod>	Integer, min Period
<maxPeriod>	Integer, max Period
<greaterThan>	Float, greater than
<lessThan>	Float, less than
<step>	Float, step

10.2.11 +CLMERR Indicated there are Some Errors

+CLMERR Indicated there are Some Errors

Response

This command Indicated there are some errors.

+CLMERR: <lwm2m_id>,<error_code>

Defined Values

<lwm2m_id>	Integer, LwM2M id, AT+CLMCONF's response.
<error_code>	Integer, error code. 1 Reset by peer point 2 Network disconnect

11 AT Commands for MQTT Application

11.1 Overview of AT Commands for MQTT Application

Command	Description
AT+CMQNEW	New MQTT
AT+CMQCON	Send MQTT Connection Packet
AT+CMQDISCON	Disconnect MQTT
AT+CMQSUB	Send MQTT Subscribe Packet
AT+CMQUNSUB	Send MQTT Unsubscribe Packet
AT+CMQPUB	Send MQTT Publish Packet
+CMQDISCON	MQTT Disconnect Indication
AT+CMQALICFG	Configure Alibaba Cloud Parameters
AT+CMQALICON	Send MQTT Connection Packet to Alibaba Cloud
AT+CMQTTSENW	New MQTTS
AT+CMQTTSENWEXT	New a MQTTS Instance by Multi Packages for a Long Size Command
AT+CMQAZURECFG	Configure Microsoft Azure IoT Parameters
AT+CMQAZURECON	Send MQTT Connection Packet to Azure IoT
AT+CMQTSYNC	Configure MQTT Synchronization Mode

11.2 Detailed Descriptions of AT Commands for MQTT Application

11.2.1 AT+CMQNEW New MQTT

AT+CMQNEW New MQTT	
Test Command AT+CMQNEW=?	Response +CMQNEW: "server","port", (list of supported <command_timeout_ms> s),(list of supported <bufsize> s) OK

Read Command AT+CMQNEW?	Response +CMQNEW: <mqtt_id>,<used_state>,<server>
	OK
Write Command AT+CMQNEW=<server>,<port>,<command_timeout_ms>,<bufsize>[,<cid>]	Response +CMQNEW: <mqtt_id>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mqtt_id>	Integer, MQTT id
<used_state>	The used result of mqtt_id 0 Not used 1 Used
<server>	String, null or server IP address(or MQTT server name). Max length is 50.
<port>	String, MQTT server port, can be from 0 to 65535.
<command_timeout_ms>	Integer, AT command timeout (ms), can be from 0 to 60000.
<bufsize>	Integer, buffer size, can be from 20 to 1132.
<cid>	Integer, PDP context ID, AT+CGACT response. [option]

Example

```
AT+CMQNEW=?
+CMQNEW: "Server name or IP address",(0-65535),(0-60000),(20-1132)
```

OK

11.2.2 AT+CMQCON Send MQTT Connection Packet

AT+CMQCON Send MQTT Connection Packet

Test Command AT+CMQCON=?	Response +CMQCON: <mqtt_id>,<version>,<client_id>,<keepalive_interval>,<cleansession>,<will_flag>
------------------------------------	---

	OK
Read Command AT+CMQCON?	Response +CMQCON: <mqtt_id>,<connected_state>,<server>
	OK
Write Command AT+CMQCON=<mqtt_id>,<version>,<client_id>,<keepalive_interval>,<cleansession>,<will_flag>[,<will_options>][,<username>,<password>]	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mqtt_id>	Integer, MQTT id, AT+CMQNEW's response
<connected_state>	The connected result of mqtt_id, 0 Not connected 1 Connected
<server>	String, null(not connect) or MQTT server IP address
<version>	Integer, MQTT version. 3 MQTT 3.1 4 MQTT 3.1.1
<client_id>	String, client ID, should be unique. Max length is 120.
<keepalive_interval>	Integer, keep alive interval, don't suggest to set it to a small value because server may disconnect the device for some reason, can be from 0 to 64800. Unit is second.
<cleansession>	Integer, clean session, can be 0 or 1.
<will_flag>	Integer, will flag, can be 0 or 1.
<will_option>	String, will options, mandatory if <will_flag> is 1, the format is as follows: topic=xxx,QoS=xxx,retain=xxx,message_len=xxx,message=xxx
<username>	String, user name (option). Max length is 100
<password>	String, password (option). Max length is 100

Example

```
AT+CMQCON=?
+CMQCON: (0-0),(3,4),"client ID", (0-64800),(0,1),(0,1)
```

OK

AT+CMQCON?

+CMQCON: 0,0,null

OK

NOTE

- AT+CMQNEW should be set before this command.
- If <will_flag> is 0, then we don't need input <will_options>.

11.2.3 AT+CMQDISCON Disconnect MQTT

AT+CMQDISCON Disconnect MQTT

Test Command

AT+CMQDISCON=?

Response

+CMQDISCON: <mqtt_id>

OK

Write Command

AT+CMQDISCON=<mqtt_id>

Response

OK

>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<mqtt_id>

Integer type, MQTT id, AT+CMQNEW's response.

Example

AT+CMQDISCON=?

+CMQDISCON: (0-0)

OK

NOTE

- AT+CMQCON should be set before this command.

11.2.4 AT+CMQSUB Send MQTT Subscribe Packet

AT+CMQSUB Send MQTT Subscribe Packet

Test Command AT+CMQSUB=?	Response +CMQSUB: <mqtt_id>,<topic>,<QoS>
	OK
Write Command AT+CMQSUB=<mqtt_id>,<topic>,<QoS>	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mqtt_id>	Integer, MQTT id, AT+CMQNEW's response.
<topic>	String, topic of subscribe message. Max length is 128.
<QoS>	Integer, message QoS, can be 0, 1 or 2.

Example

```
AT+CMQSUB=?  
+CMQSUB: (0-0),"topic",(0-2)
```

OK

11.2.5 AT+CMQUNSUB Send MQTT Unsubscribe Packet

AT+CMQUNSUB Send MQTT Unsubscribe Packet

Test Command	Response
--------------	----------

AT+CMQUNSUB=?	+CMQUNSUB: <mqtt_id>,<topic>
	OK
Write Command	Response
AT+CMQUNSUB=<mqtt_id>,<topic>	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mqtt_id>	Integer, MQTT id, AT+CMQNEW's response.
<topic>	String, topic of subscribe message. Max length is 128

Example

```
AT+CMQUNSUB=?
+CMQUNSUB: (0-0),"topic"

OK
```

11.2.6 AT+CMQPUB Send MQTT Publish Packet

AT+CMQPUB Send MQTT Publish Packet	
Test Command	Response
AT+CMQPUB=?	+CMQPUB: <mqtt_id>,<topic>,<QoS>,<retained>,<dup>,<message_len>,<message>
	OK
Write Command	Response
AT+CMQPUB=<mqtt_id>,<topic>,<QoS>,<retained>,<dup>,<message_len>,<message>	OK Unsolicited result code: If the topic has been subscribed, then return: +CMQPUB: <mqtt_id>,<topic>,<QoS>,<retained>,<dup>,<message_len>,<message>
Parameter Saving Mode	NO_SAVE
Max Response Time	-

Reference

Defined Values

<mqtt_id>	Integer, MQTT id, AT+CMQNEW's response.
<topic>	String, topic of publish message. Max length is 128
<Qos>	Integer, message QoS, can be 0, 1 or 2.
<retained>	Integer, retained flag, can be 0 or 1.
<dup>	Integer, duplicate flag, can be 0 or 1.
<message_len>	Integer, length of publish message, can be from 2 to 1000.If message is HEX data streaming, then <message_len> should be even.
<message>	Default should be a hex data streaming, but if we set AT+CREVHEX=0 then we can send a RAW data message. And if we want to send a HEX data streaming again, we can set AT+CREVHEX=1.

Example

```
AT+CMQPUB=?  
+CMQPUB: (0-0),"topic", (0-2), (0,1), (0,1), (2-1000), "message"
```

OK

11.2.7 +CMQDISCON MQTT Disconnect Indication

+CMQDISCON MQTT Disconnect Indication

Response	When the URC send, there is some error happen on the MQTT connection. This is probably because the MQTT server has disconnected the device for some reasons. +CMQDISCON: <mqtt_id>
----------	---

11.2.8 AT+CMQALICFG Configure Alibaba Cloud Parameters

AT+CMQALICFG Configure Alibaba Cloud Parameters

Test Command AT+CMQALICFG=?	Response +CMQALICFG:
---------------------------------------	--------------------------------

	<mqtt_id>,<productKey>,<deviceName>,<deviceSecret>
	OK
Write Command AT+CMQALICFG=<mqtt_id>,<productKey>,<deviceName>,<deviceSecret>	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mqtt_id>	Integer, MQTT id, AT+CMQNEW's response
<productKey>	Product Key, get it from Alibaba Cloud. Length from 1 to 20.
<deviceName>	Device Name, get it from Alibaba Cloud. Length from 1 to 32.
<deviceSecret>	Device Secret, get it from Alibaba Cloud. Length from 1 to 40.

NOTE

- AT+CMQNEW should be set before this command.
- This command is a special command to connect to Alibaba Cloud.

11.2.9 AT+CMQALICON Send MQTT Connection Packet to Alibaba Cloud

AT+CMQALICON Send MQTT Connection Packet to Alibaba Cloud

Test Command AT+CMQALICON=?	Response +CMQALICON: <mqtt_id>,<keepalive_interval>,<cleansession>
	OK
Write Command AT+CMQALICON=<mqtt_id>,<keepalive_interval>,<cleansession>	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mqtt_id>	Integer, MQTT id, AT+CMQNEW's response
<keepalive_interval>	Integer, keep alive interval, don't suggest to set it to a small value because server may disconnect the device for some reason, can be from 0 to 64800.
<cleansession>	Integer, clean session, can be 0 or 1

Example

```
AT+CMQALICON=?
+CMQALICON: (0-0),(0-64800),(0,1)
```

OK

NOTE

- AT+CMQNEW and AT+CMQALICFG should be set before this command.
- This command is a special command to connect to Alibaba Cloud.

11.2.10 AT+CMQTTSNEW New MQTTS

AT+CMQTTSNEW New MQTTS	
Test Command AT+CMQTTSNEW=?	Response +CMQTTSNEW: "server","port",,(list of supported <command_timeout_ms>s),(list of supported <bufsize>s) OK
Read Command AT+CMQTTSNEW?	Response +CMQTTSNEW: <mqtt_id>,<used_state>,<server> OK
Write Command AT+CMQTTSNEW=<server>,<port>,<command_timeout_ms>,<bufsize>	Response +CMQTTSNEW: <mqtt_id> OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-

Reference

Defined Values

<mqtt_id>	Integer, MQTT id
<used_state>	The used result of mqtt_id 0 Not used 1 Used
<server>	String, null or server IP address(or MQTT server name). Max length is 50.
<port>	String, MQTT server port, can be from 0 to 65535.
<command_timeout_ms>	Integer, AT command timeout (ms), can be from 0 to 60000.
<bufsize>	Integer, buffer size, can be from 20 to 1132.

Example

AT+CMQTTNEW=?**+CMQTTNEW: "Server name or IP address",(0-65535),(0-60000),(20-1132)**

OK

AT+CMQTTNEW?**+CMQTTNEW: 0,0,null**

OK

NOTE

- AT+CSETCA should be set before this command, we need to set the certificates first!

11.2.11 AT+CMQTTNEWEXT NEW a MQTTS Instance by Multi Packages for a Long Size Command**AT+CMQTTNEWEXT New a MQTTS Instance by Multi Packages for a Long Size Command**

Read Command

AT+CMQTTNEWEXT?

Response

+CMQTTNEWEXT: <mqtt_id>,<used_state>,<server>

	OK
Write Command AT+CMQTTNEWEXT=<flag> >,<total_len>,<len>,<server> >,<port>,<command_timeout_ms>,<bufsize>,<server_cert_len>,<server_cert>,<client_cert_len>,<client_cert>,<client_pk_len>,<client_pk>	Response +CMQTTNEWEXT: <mqtt_id>
	OK
	or
	ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<flag>	1 Means there are more packages 0 Means this package is the last one
<total_len>	The total length of the command
<len>	The length of current package
<server>	String, null or server IP address(or MQTT server name). Max length is 50.
<port>	String, MQTT server port, can be from 0 to 65535.
<command_timeout_ms>	Integer, AT command timeout (ms), can be from 0 to 60000.
<bufsize>	Integer, buffer size, can be from 20 to 1132.
<server_cert_len>	Server certification length, for mqtts.
<server_cert>	Server certification, for mqtts, should be HEX format.
<client_cert_len>	Client certification length, for mqtts.
<client_cert>	Client certification, for mqtts, should be HEX format.
<client_pk_len>	Client private key length, for mqtts.
<client_pk>	Client private key, for mqtts, should be HEX format.
<mqtt_id>	Integer, MQTT id.
<used_state>	The used result of mqtt_id 0 Not used 1 Used

Example

```
AT+CMQTTNEWEXT?  
+CMQTTNEWEXT: 0,0,null
```

OK

11.2.12 AT+CMQAZURECFG Configure Microsoft Azure IoT Parameters

AT+CMQAZURECFG Configure MicroSoft Azure IoT Parameters

Test Command AT+CMQAZURECFG=?	Response +CMQAZURECFG: <mqtt_id>,<hostName>,<deviceId>,<deviceKey>,<expiry_time>
	OK
Write Command AT+CMQAZURECFG=<mqtt_id>,<hostName>,<deviceId>,<deviceKey>,<expiry_time>	Response OK
>	
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mqtt_id>	Integer, MQTT id, AT+CMQTTNEW 's response
<hostName>	Host Name, get it from Azure IoT Connection String.
<deviceId>	Device Id, get it from Azure IoT.
<deviceKey>	Device Primary Key, get it from Azure IoT.
<expiry_time>	Expiration Time, from 0 to 31536000.

Example

```
AT+CMQAZURECFG=?
+CMQAZURECFG: (0-0),"hostName","deviceID","deviceKey",(0-31536000)
```

OK

NOTE

- AT+CMQTTNEW should be set before this command.
- This command is a special command to connect to Azure IoT.

11.2.13 AT+CMQAZURECON Send MQTT Connection Packet to Azure IoT

AT+CMQAZURECON	Send MQTT Connection Packet to Azure IoT
Test Command AT+CMQAZURECON=?	Response +CMQAZURECON: <mqtt_id>,<keepalive_interval>,<cleansession> OK
Write Command AT+CMQAZURECON=<mqtt_id>,<keepalive_interval>,<cleansession>	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mqtt_id>	Integer, MQTT id, AT+CMQTTNEW 's response
<keepalive_interval>	Integer, keep alive interval, don't suggest to set it to a small value because server may disconnect the device for some reason, can be from 0 to 64800.
<cleansession>	Integer, clean session, can be 0 or 1

Example

```
AT+CMQAZURECON=?  
+CMQAZURECON: (0-0),(0-64800),(0,1)  
  
OK
```

NOTE

- AT+CMQTTNEW and AT+CMQAZURECFG should be set before this command.
- This command is a special command to connect to Azure IoT.

11.2.14 AT+CMQTSYNC Configure MQTT Synchronization Mode

AT+CMQTSYNC Configure MQTT Synchronization Mode

Test Command AT+CMQTSYNC=?	Response +CMQTSYNC: (list of supported <n>s) OK
Read Command AT+CMQTSYNC?	Response +CMQTSYNC: <n> OK
Write Command AT+CMQTSYNC=<n>	Response OK If error is related to wrong AT syntax or incorrect parameters. ERROR
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<n>	0 Disable MQTT synchronization mode
	1 Enable MQTT synchronization mode

Example

AT+CMQTSYNC=?
+CMQTSYNC: (0,1)

OK

AT+CMQTSYNC?
+CMQTSYNC: 0

OK

12 AT Commands for CoAP Application

12.1 Overview of AT Commands for CoAP Application

Command	Description
AT+CCOAPNEW	Create a CoAP client instance
AT+CCOAPSEND	Send CoAP data
AT+CCOAPCSEND	Send CoAP data
AT+CCOAPDEL	Destroy the CoAP client instance
+CCOAPNMI	Content from CoAP server

12.2 Detailed Descriptions of AT Commands for CoAP Application

12.2.1 AT+CCOAPNEW Create a CoAP Client Instance

AT+CCOAPNEW Create a CoAP Client Instance	
Test Command	Response
AT+CCOAPNEW=?	+CCOAPNEW: (0-255).(0-255).(0-255),(0-255),(0-65535),(0-10)
	OK
Write Command	Response
AT+CCOAPNEW=<ip_addr> ,<port>,<cid>	+CCOAPNEW: <coap_id>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<ip_addr>	String, CoAP server IP address.
<port>	Integer, CoAP server port(spec default 5683).
<cid>	Integer, PDP context ID, AT+CGACT response.
<coap_id>	Integer, CoAP client instance id created by the command.

Example

```
AT+CCOAPNEW=?
+CCOAPNEW: (0-255).(0-255).(0-255).(0-255),(0-65535),(0-10)

OK
```

12.2.2 AT+CCOAPSEND Send CoAP Data

AT+CCOAPSEND Send CoAP Data	
Test Command	Response
AT+CCOAPSEND=?	+CCOAPSEND: (1-2),(4-512),"data"
	OK
Write Command	Response
AT+CCOAPSEND=<coap_id>	OK
>,<data_len>,<data>	
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<coap_id>	Integer, CoAP client instance id created by the AT+CCOAPNEW command.
<data_len>	Integer, Send data length (by byte).
<data>	String, the hex data streaming.

Example

```
AT+CCOAPSEND=?
+CCOAPSEND: (1-2),(4-512),"data"
```

OK

NOTE

- AT+CCOAPNEW should be set before this command.

12.2.3 AT+CCOAPCSEND Send CoAP Data

AT+CCOAPCSEND Send CoAP Data

Test Command AT+CCOAPCSEND=?	Response +CCOAPCSEND: (1-2),(1),(0-3),(0-7),(0-31),"token","option",(0-512),"data" OK
Write Command AT+CCOAPCSEND=<coap_id>,<version>,<type>,<h_code>,<l_code>,<token>,<option>,<data_len>,<data>	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<coap_id>	Integer, CoAP client instance id created by the AT+CCOAPNEW command.
<version>	Integer, version information, the current value is 1.
<type>	Integer, the message type. 0 CON, confirmable message (requires ACK/RST). 1 NON, non-confirmable message (one-shot message). ACK, used to acknowledge confirmable messages. 3 RST, indicates error in received messages.
<h_code>	Integer, the first three bits of the <code> value. 0 Empty message or request 1 Reserved 2-5 Response 6-7 Reserved
<l_code>	Integer, the last five bits of the <code> value (0-31).

<code> Function code or response code. Code takes different forms in CoAP request message and response message. Code takes one byte and is divided into two parts, the first three bits <h_code> and the last five bits <l_code>. In order to describe it conveniently, it is written into c.dd structure (such as 0.01, 2.01, 4.02 and so on).

For example, if <h_code> is 4 and <l_code> is 12, so <code> is 4.12.

Request:

- [0.01]GET method, get resource
- [0.02]POST method, create resource
- [0.03]PUT method, update resource
- [0.04]DELETE method, delete resource

Response:

- [2.01]Created
- [2.02]Deleted
- [2.03]Valid
- [2.04]Changed
- [2.05]Content.
- [4.00]Bad Request.
- [4.01]Unauthorized.
- [4.02]Bad Option.
- [4.03]Forbidden.
- [4.04]Not Found.
- [4.05]Method Not Allowed.
- [4.06]Not Acceptable.
- [4.12]Precondition Failed.
- [4.15]Unsupported Content-Type.
- [5.00]Internal Server Error.
- [5.01]Not Implemented.
- [5.02]Bad Gateway.
- [5.03]Service Unavailable.
- [5.04]Gateway Timeout.
- [5.05]Proxying Not Supported.

<token>	String, the hex data streaming, request id, relate the response to the request (option).
<option>	String, the hex data streaming, zero or more options (option).
<data_len>	Integer, Send data length (by byte).
<data>	String, the hex data streaming (payload).

Example

AT+CCOAPCSEND=?

+CCOAPCSEND: (1-2),(1),(0-3),(0-7),(0-31),"token","option",(0-512),"data"

OK

NOTE

- AT+CCOAPNEW should be set before this command.

12.2.4 AT+CCOAPDEL Destroy the CoAP Client Instance

AT+CCOAPDEL Destroy the CoAP Client Instance

Test Command	Response
AT+CCOAPDEL=?	+CCOAPDEL: (1-2)
	OK
Write Command	Response
AT+CCOAPDEL=<coap_id>	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<coap_id>	Integer, CoAP client instance id created by the AT+CCOAPNEW command.
-----------	--

Example

```
AT+CCOAPDEL=?  
+CCOAPDEL: (1-2)  
  
OK
```

NOTE

- AT+CCOAPNEW should be set before this command.

12.2.5 +CCOAPNMI Content from CoAP server

+CCOAPNMI Content from CoAP server

Response

+CCOAPNMI: <coap_id>,<data_len>,<data>

Defined Values

<coap_id>	Integer, CoAP client instance id created by the AT+CCOAPNEW command.
<data_len>	Integer, data length (by byte).
<data>	String, the hex data streaming.

13 AT Commands for SNTP Application

13.1 Overview of AT Commands for SNTP Application

Command	Description
AT+CSNTPSTART	Start to query network time
AT+CSNTPSTOP	Stop to query network time
+CSNTP	Received network time

13.2 Detailed Descriptions of AT Commands for SNTP Application

13.2.1 AT+CSNTPSTART Start to Query Network Time

AT+CSNTPSTART Start to Query Network Time	
Write Command	Response
AT+CSNTPSTART=<url>[,zone]	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<url>	A string of SNTP server name or IP address.
<zone>	String type value; On behalf of the time zone, range -47...+48. The eastern region is denoted as "+32".

13.2.2 +CSNTP Received Network Time

+CSNTP Received Network Time

Response

Indicated there is received some data from network.

+CSNTP: <time>[,zone]

Defined Values

<time>	String type value; format is yy/MM/dd, hh:mm:ss:ms, where characters indicate year (two last digits), month, day, hour, minutes, seconds and millisecond . E.g 10/05/06,00:01:52:62
<zone>	String type value; On behalf of the time zone, range -47...+48.The eastern region is denoted as "+32".

14 AT Commands for TLS Application

14.1 Overview of AT Commands for TLS Application

Command	Description
AT+CTLSCFG	Configure TLS parameters
AT+CTLSCONN	Create a TLS connection
AT+CTLSCLOSE	Close a TLS connection
AT+CTLSSEND	Send data
AT+CTLSRECV	Receive data
AT+CSETCA	Set the certificate parameters
AT+CSETCIPHER	Set the encryption suite used by the TLS handshake

14.2 Detailed Descriptions of AT Commands for TLS Application

14.2.1 AT+CTLSCFG Configure TLS Parameters

AT+CTLSCFG Configure TLS Parameters	
Write Command	Response
AT+CTLSCFG=<tid>,<type>,<value>[,<type>,<value>[,<type>,<value>[...]]]	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<tid>	Integer type. It is the identifier of the TLS connection to be created.
-------	---

	The values(1-6).
<type>	<p>Integer type. It is the type of the parameter to be configured.</p> <p>1 Server name (string) 2 Port (int, default value is 443) 3 Socket type (0-tcp, tcp supported only, default value is 0) 4 Auth_mode (int, 0-none, 1-optional, 2-required, default value is 2) 5 Debug level (int, 0~4, 0-no log, 4-all log enabled, default value is 0) 6 Server CA (<size><more><certificate>, size (int)-total size of the certificate without the terminate null; more(int)-is there more certificate content needed to be sent, 1-yes, 0-no; certificate (string)-the total or partial of the certificate content. default value for type 6 is null) 7 Client certificate (same as 6-server CA, default value for type 7 is null) 8 Client private key (<size><more><private-key>, size and more is the same as 6-server CA, private-key (string)-the total or partial of the private-key, default value for type 8 is null)</p>
<value>	Integer type. It is the value of the parameter to be configured.

14.2.2 AT+CTLSCONN Create a TLS Connection

AT+CTLSCONN Create a TLS Connection

Write Command	Response
AT+CTLSCONN=<tid>,<cid>	OK
+CTLSCONN: <tid>,<ret>	
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<tid>	Integer type. It is the identifier of the TLS connection to be created. It should be the same as the one in CTLSCFG.
<ret>	Integer type. It tells the result of the TLS connection. If the connection succeeds, it is 1. Otherwise, it is the error code. See 20.4 Summary of TLS ERROR Codes for details.

14.2.3 AT+CTLSCLOSE Close a TLS Connection

AT+CTLSCLOSE Close a TLS Connection

Write Command	Response
AT+CTLSCLOSE=<tid>	OK
	+CTLSCLOSE: <tid>,<ret>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<tid>	Integer type. It is the identifier of the TLS connection to be created. It should be the same as the one in CTLSCFG.
<cid>	Integer type. It is a numeric parameter specifying a particular PDP context returned by CGACT.
<ret>	Integer type. It tells the result of the TLS connection closure. If the closure succeeds, it is 1. Otherwise, it is the error code. See 20.4 Summary of TLS ERROR Codes for details.

14.2.4 AT+CTLSEND Send Data

AT+CTLSEND Send Data

Write Command	Response
AT+CTLSEND=<tid>,<data_len>,<data>[,<encod_meth od>]	OK
	+CTLSEND: <tid>,<ret>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<tid>	Integer type. It is the identifier of the TLS connection to be created. It should be the same as the one in CTLSCFG.
<data_len>	Integer type. It is the length of the <data>. Max length of a single transmission 1024.
<data>	It is the data sent.

<encod_method>	<p>Integer type. It is the encode method used for <data>.</p> <p>801 String encoding and it is the default value which can be omitted.</p> <p>802 Hex encoding</p> <p>803 Base64 encoding</p>
<ret>	<p>Integer type. It tells the result of the data sending. If it is greater than 0, it is the actual number of data send. Otherwise, it is the error code. See 20.4 Summary of TLS ERROR Codes for details.</p>

14.2.5 AT+CTLSRECV Receive Data

AT+CTLSRECV Receive Data	
Write Command	Response
AT+CTLSRECV=<tid>,<max_num>[,<encod_method>]	OK
	+CTLSRECV: <tid>,<ret>[,<data>[,<encode_method>]]
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<tid>	Integer type. It is the identifier of the TLS connection to be created. It should be the same as the one in CTLSCFG.
<max_num>	Integer type. It is the maximum number of plain data without encoding that could be received. When encod_method=801, the maximum receiving length of a single time is 1024, Otherwise the maximum receiving length of a single time is 512.
<encod_method>	Integer type. It is the encode method used for <data>.
	801 String encoding and it is the default value which can be omitted.
	802 Hex encoding.
	803 Base64 encoding.
<ret>	Integer type. If it is greater than 0, it is the length of data received after encoding .Otherwise, it is the error code. See 20.4 Summary of TLS ERROR Codes for details.
<data>	It is the data received with encoding.

14.2.6 AT+CSETCA Set the Certificate Parameters

AT+CSETCA Set the Certificate Parameters

Read Command	Response
AT+CSETCA?	<type>: <total_len> OK
Write Command	Response
AT+CSETCA=<type>,<total_len>,<is_end>,<encod_method>,<ca_data>	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<type>	String type. 0 Root CA, root certificate. 1 Client CA, client certificate. 2 Client Private Key. 3 PSKID 4 PSK
<total_len>	Integer type. The total length of the certificate.
<is_end>	Is there more certificate content needed to be sent. 0 No 1 Yes
<encod_method>	Integer type. It is the encode method used for <ca_data>. 0 String encoding 1 Hex encoding
<ca_data>	String type. Content of the certificate.

Example

AT+CSETCA?

OK

14.2.7 AT+CSETCIPHER Set the Encryption Suite Used by the TLS Handshake

AT+CSETCIPHER Set the Encryption Suite Used by the TLS Handshake

Read Command	Response
AT+CSETCIPHER?	<type>: <num>

	OK
Execution Command AT+CSETCIPHER	Response List of all currently supported encryption suites OK
Write Command AT+CSETCIPHER=<enable> ,<num>	Response OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<enable>	Whether to enable the set encryption suite function 0 Close 1 Open
<num>	Encryption package number selected.

Example

```
AT+CSETCIPHER?  
+CETCIPHER: 0,0
```

OK

15 AT Commands for OneNet Application

15.1 Overview of AT Commands for OneNet Application

Command	Description
AT+MIPLCREATE	Create a OneNet instance
AT+MIPLCREATEEXT	Another method to Create a OneNet instance
AT+MIPLDELETE	Delete a OneNet instance
AT+MIPLOPEN	Register to OneNet.
AT+MIPLCLOSE	Deregister to OneNet
AT+MIPLADDOBJ	Add an object
AT+MIPLDELOBJ	Delete an object
AT+MIPLUPDATE	Update registration
AT+MIPLREADRSP	Read response from user
AT+MIPLWRITERSP	Write response from user
AT+MIPLEXECUTERSP	Execute response from user
AT+MIPLOBSERVERSP	Observe response from user
AT+MIPLDISCOVERRSP	Discover response from user
AT+MIPLPARAMETERRSP	Set parameter from user
AT+MIPLNOTIFY	Notify data value change from user
AT+MIPLVER	Read version
+MIPLREAD	Read request to user
+MIPLWRITE	Write request to user
+MIPLEXECUTE	Execute request to user
+MIPLOSERVE	Observe request to user
+MIPLDISCOVER	Discover request to user
+MIPLPARAMETER	Set parameter request to user
+MIPLEVENT	Event indication to user

15.2 Detailed Descriptions of AT Commands OneNet Application

15.2.1 AT+MIPLCREATE Create a OneNet Instance

AT+MIPLCREATE Create a OneNet Instance

Test Command AT+MIPLCREATE=?	Response +MIPLCREATE: (list of supported <totalsize>),(list of supported <config>),(list of supported <index>),(list of supported <currentsize>),(list of supported <flag>)
	OK
Read Command AT+MIPLCREATE?	Response +MIPLCREATE: <id>,<used_state>
	OK
Write Command AT+MIPLCREATE=<totalsize>,<config>,<index>,<currentsize>,<flag>	Response OK --message received correctly if index not equals to 0 +MIPLCREATE: <id>
	OK --message received correctly and return OneNet instance or +CIS ERROR: <err>
Execution Command AT+MIPLCREATE	Response +MIPLCREATE: <id>
	OK or +CIS ERROR: <err> Create OneNet default configuration as host of "183.230.40.39" with bootstrap.
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<totalsize>	Integer, configuration file total size(it is byte size)
<config>	Hex string, configuration file, ex: 130033f1.....
<index>	Integer, configuration file index, from 0 to 1024
<currentsize>	Integer, configuration file size in current AT command(it is byte size)
<flag>	Integer, message flag 1 First message 2 Middle message

	0 Last message
<id>	Integer, create OneNet id
<used_state>	Integer, the used result of AT+MIPLCREATE 0 Not used 1 Used

Example

AT+MIPLCREATE=?

+MIPLCREATE: (0-1024),"config", (0-1024), (0-512), (0-2)

OK

AT+MIPLCREATE=?

+MIPLCREATE: 0,0

OK

15.2.2 AT+MIPLCREATEEXT Another Method to Create a OneNet Instance

AT+MIPLCREATEEXT Another Method to Create a OneNet Instance	
Test Command	Response
AT+MIPLCREATEEXT=?	+MIPLCREATEEXT: (0-255).(0-255).(0-255).(0-255),(0,1)
	OK
Read Command	Response
AT+MIPLCREATEEXT?	+MIPLCREATEEXT: <id>,<used_state>
	OK
Write Command	Response
AT+MIPLCREATEEXT=<add r>,<bs>	+MIPLCREATEEXT: <id> OK --message received correctly and return OneNet instance or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<addr>	String. OneNet host IP address
<bs>	Integer. OneNet host bootstrap value 0 Bootstrap disabled 1 Bootstrap enabled Such as: 183.230.40.39, bs value is set to 1 183.230.40.40, bs value is set to 0
<id>	Integer, Create OneNet id
<used_state>	Integer. The used result of AT+MIPLCREATE 0 Not used 1 Used

Example

```
AT+MIPLCREATEEXT=?  
+MIPLCREATEEXT: (0-255).(0-255).(0-255).(0-255),(0-1)
```

OK

```
AT+MIPLCREATEEXT?  
+MIPLCREATEEXT: 0,0
```

OK

NOTE

- The parameter of "BS" is necessary from OneNet Version 2.2.0, but it is needless before OneNet Ver2.2.0.

15.2.3 AT+MIPLDELETE Delete a OneNet Instance

AT+MIPLDELETE Delete a OneNet Instance	
Test Command	Response
AT+MIPLDELETE=?	+MIPLDELETE: (list of supported <id>)
	OK
Write Command	Response
AT+MIPLDELETE=<id>	OK

	or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
-------------------	--

Example

AT+MIPLDELETE=?

+MIPLDELETE: (0)

OK

15.2.4 AT+MIPOPEN Register to OneNet

AT+MIPOPEN Register to OneNet	
Test Command	Response
AT+MIPOPEN=?	+MIPOPEN: (list of supported <id>),(list of supported <lifetime>),(list of supported <param>)
	OK
Read Command	Response
AT+MIPOPEN?	+MIPOPEN: <id>,<connected_state>
	OK
Write Command	Response
AT+MIPOPEN=<id>,<lifetime>[,<param>]	OK or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<lifetime>	Integer, lifetime to register ONENET server. The unit is second.
<param>	Reserved
<connected_state>	The connected result of AT+MIPOPEN 0 Not connected 1 Connected

Example

```
AT+MIPOPEN=?  
+MIPOPEN: (0),(15-268435455),(0-1024)
```

OK

```
AT+MIPOPEN?  
+MIPOPEN: 0,0
```

OK

15.2.5 AT+MIPLCLOSE Deregister to OneNet

AT+MIPLCLOSE Deregister to OneNet

Test Command	Response
AT+MIPLCLOSE=?	+MIPLCLOSE: (list of supported <id>) OK
Write Command	Response
AT+MIPLCLOSE=<id>	OK or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
------	--

Example

AT+MIPLCLOSE=?

+MIPLCLOSE: (0)

OK

15.2.6 AT+MIPLADDOBJ Add an Object

AT+MIPLADDOBJ Add an Object

Test Command

AT+MIPLADDOBJ=?

Response

+MIPLADDOBJ: (list of supported <id>),(list of supported <objectid>),(list of supported <instancecount>),(list of supported <instancebitmap>),(list of supported <attributecount>),(list of supported <actioncount>)

OK

Read Command

AT+MIPLADDOBJ?

Response

+MIPLADDOBJ: <object_num>

OK

Write Command

AT+MIPLADDOBJ=<id>,<objectid>,<instancecount>,<instancebitmap>,<attributecount>,<actioncount>

Response

OK

or

+CIS ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<objectid>	Integer, object id
<instancecount>	Integer, instance count
<instancebitmap>	Binary string, instance bitmap, ex: "00101" (5 instances, only instance 1 & 3 are available)
<attributecount>	Integer, attribute count(The Object that has read or write operation, has the attribute)
<actioncount>	Integer, action count(The Object that has execute operation, has the action)
<object_num>	Current OneNet object number

Example

```
AT+MIPLADDOBJ=?  
+MIPLADDOBJ: (0),(0-4294967295),(1-64),"instancebitmap", (0-1024), (0-1024)  
  
OK  
  
AT+MIPLADDOBJ?  
+MIPLADDOBJ: 0  
  
OK
```

15.2.7 AT+MIPLDELOBJ Delete an Object

AT+MIPLDELOBJ Delete an Object

Test Command	Response
AT+MIPLDELOBJ=?	+MIPLDELOBJ: (list of supported <id>), (list of supported <objectid>) OK
Write Command	Response
AT+MIPLDELOBJ=<id>,<objectid>	OK or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<objectid>	Integer, object id

Example

```
AT+MIPLDELOBJ=?  
+MIPLDELOBJ: (0),(0-4294967295)  
  
OK
```

15.2.8 AT+MIPLUPDATE Update Registration

AT+MIPLUPDATE Update Registration

Test Command AT+MIPLUPDATE=?	Response +MIPLUPDATE: (list of supported <id>),(list of supported <lifetime>),(list of supported <withObjectFlag>) OK
Write Command AT+MIPLUPDATE=<id>,<life time>,<withObjectFlag>	Response OK or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE.
<lifetime>	Integer, lifetime to update registration. The unit is second.
<withObjectFlag>	Integer, whether to update objects 0 Not update objects 1 Update objects

Example

```
AT+MIPLUPDATE=?
+MIPLUPDATE: (0),(15-268435455),(0-1)
```

OK

15.2.9 AT+MIPLREADRSP Read Response from User

AT+MIPLREADRSP Read Response from User

Test Command AT+MIPLREADRSP=?	Response +MIPLREADRSP: (list of supported <id>),(list of supported
---	--

<msgid>),(list of supported <result>),(list of supported
 <objectid>),(list of supported <instanceid>),(list of supported
 <resourceid>),(list of supported <valuetype>),(list of supported
 <len>),(list of supported <value>),(list of supported <index>),(list of
 supported <flag>)

OK

Write Command	Response
AT+MIPLREADRSP=<id>,<msgid>,<result>,<objectid>,<instanceid>,<resourceid>,<valuetype>,<len>,<value>,<index>,<flag>	OK or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id, the same to +MIPLREAD
<result>	Integer, read result, 1 indicates read success, should provide read content in the same time 1 Read/Observe/Discover OK 2 Write/Execute/ Set parameter OK 11 400 Bad request 12 401 Unauthorized 13 404 Not Found 14 405 Method Not Allowed 15 406 Not Acceptable
<objectid>	Integer, object id
<instanceid>	Integer, instance id
<resourceid>	Integer, resource id
<valuetype>	Integer, read data value type 1 String 2 Opaque 3 Integer 4 Float 5 Bool
<len>	Integer, read data length. It can be omitted, if valuetype is Integer or Float, or Bool
<value>	Integer, read data value
<index>	Integer, message index, from 0 to 1024

<flag>	Integer, message flag 1 First message 2 Middle message 0 Last message
---------------------	--

Example

```
AT+MIPLREADRSP=?
+MIPLREADRSP:
(0),(0-4294967295),(1-2,11-15),(0-4294967295),(0-63),(0-4294967295),(1-5),(0-1024),"v
alue",(0-1024),(0-2)
```

OK

15.2.10 AT+MIPLWRITERSP Write Response from User

AT+MIPLWRITERSP Write Response from User	
Test Command	Response
AT+MIPLWRITERSP=?	+MIPLWRITERSP: (list of supported <id>),(list of supported <msgid>),(list of supported <result>)
	OK
Write Command	Response
AT+MIPLWRITERSP=<id>,<msgid>,<result>	OK or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id, the same to +MIPLWRITE
<result>	Integer, write result, 2 indicates write success 1 Read/Observe/Discover OK 2 Write/Execute/ Set parameter OK 11 400 Bad request 12 401 Unauthorized 13 404 Not Found

- | | |
|--|---------------------------|
| | 14 405 Method Not Allowed |
| | 15 406 Not Acceptable |

Example

```
AT+MIPLWRITERSP=?
+MIPLWRITERSP: (0),(0-4294967295),(1-2,11-15)
```

OK

15.2.11 AT+MIPLEXECUTERSP Execute Response from User

AT+MIPLEXECUTERSP Execute Response from User

Test Command

AT+MIPLEXECUTERSP=?

Response

+MIPLEXECUTERSP: (list of supported <id>),(list of supported <msgid>),(list of supported <result>)

OK

Write Command

AT+MIPLEXECUTERSP=<id>
><msgid>,<result>

Response

OK

or

+CIS ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id, the same to +MIPLEXECUTE
<result>	Integer, execute result, 2 indicates execute success 1 Read/Observe/Discover OK 2 Write/Execute/ Set parameter OK 11 400 Bad request 12 401 Unauthorized 13 404 Not Found 14 405 Method Not Allowed 15 406 Not Acceptable

Example

```
AT+MIPLEXECUTERSP=?  
+MIPLEXECUTERSP: (0),(0-4294967295),(1-2,11-15)
```

OK

15.2.12 AT+MIPLOBSERVERSP Observe Response from User

AT+MIPLOBSERVERSP Observe Response from User	
Test Command AT+MIPLOBSERVERSP=?	Response +MIPLOBSERVERSP: (list of supported <id>),(list of supported <msgid>),(list of supported <result>) OK
Write Command AT+MIPLOBSERVERSP=<id><msgid>,<result>	Response OK or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id, the same to +MIPLOBSERVE
<result>	Integer, (cancel) observe result, 1 indicates (cancel) observe success 1 Read/Observe/Discover OK 2 Write/Execute/ Set parameter OK 11 400 Bad request 12 401 Unauthorized 13 404 Not Found 14 405 Method Not Allowed 15 406 Not Acceptable

Example

```
AT+MIPLOBSERVERSP=?  
+MIPLOBSERVERSP: (0),(0-4294967295),(1-2,11-15)
```

OK

15.2.13 AT+MIPLDISCOVERRSP Discover Response from User

AT+MIPLDISCOVERRSP Discover Response from User

Test Command

AT+MIPLDISCOVERRSP=?

Response

+MIPLDISCOVERRSP: (list of supported <id>),(list of supported <msgid>),(list of supported <result>),(list of supported <length>),(list of supported <valuestring>)

OK

Write Command

AT+MIPLDISCOVERRSP=<i>,<msgid>,<result><length>,<valuestring>

Response

OK

or

+CIS ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id, the same to +MIPLDISCOVER
<result>	Integer, discover result, 1 indicates discover success 1 Read/Observe/Discover OK 2 Write/Execute/Set parameter OK 11 400 Bad request 12 401 Unauthorized 13 404 Not Found 14 405 Method Not Allowed 15 406 Not Acceptable
<length>	Integer, length of value string
<valuestring>	String, value string (resourceId; resourceId; ...; resourceId), must start with "" and end with ""

Example

AT+MIPLDISCOVERRSP=?

+MIPLDISCOVERRSP: (0),(0-4294967295),(1-2,11-15),(0-1024),"valuestring"

OK

15.2.14 AT+MIPLPARAMETERRSP Set Parameter from User

AT+MIPLPARAMETERRSP Set Parameter from User

Test Command

AT+MIPLPARAMETERRSP=?

Response

+MIPLPARAMETERRSP: (list of supported <id>),(list of supported <msgid>),(list of supported <result>)

OK

Write Command

AT+MIPLPARAMETERRSP=<id>,<msgid>,<result>

Response

OK

or

+CIS ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id, the same to +MIPLPARAMETER
<result>	Integer, set parameter result, 2 indicates set parameter success 1 Read/Observe/Discover OK 2 Write/Execute/Set parameter OK 11 400 Bad request 12 401 Unauthorized 13 404 Not Found 14 405 Method Not Allowed 15 406 Not Acceptable

Example

AT+MIPLPARAMETERRSP=?
+MIPLPARAMETERRSP: (0),(0-4294967295),(1-2,11-15)

OK

15.2.15 AT+MIPLNOTIFY Notify Data Value Change from User

AT+MIPLNOTIFY Notify Data Value Change from User

Test Command AT+MIPLNOTIFY=?	Response +MIPLNOTIFY: (list of supported <id>),(list of supported <msgid>),(list of supported <objectid>),(list of supported <instanceid>),(list of supported <resourceid>),(list of supported <valuetype>),(list of supported <len>),(list of supported <value>),(list of supported <index>),(list of supported <flag>),(list of supported <ack>)
	OK
Write Command AT+MIPLNOTIFY=<id>,<msgid>,<objectid>,<instanceid>,<resourceid>,<valuetype>,<len>,<value>,<index>,<flag>[,<ack>]	Response OK or +CIS ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id
<objectid>	Integer, object id
<instanceid>	Integer, instance id
<resourceid>	Integer, resource id
<valuetype>	Integer, read data value type 1 String 2 Opaque 3 Integer 4 Float 5 Bool
<len>	Integer, write data length. It can be omitted, if valuetype is Integer or Float, or Bool
<value>	Integer, write data value
<index>	Integer, message index, from 0 to 1024
<flag>	Integer, message flag 1 First message 2 Middle message

	0 Last message
<ack>	Integer, ack id [option] If omit it, there is no result URC after this command

Example

```
AT+MIPLNOTIFY=?
+MIPLNOTIFY:
(0),(0-4294967295),(0-4294967295),(0-63),(0-4294967295),(1-5),(0-1024),"value",(0-102
4),(0-2),(0-4294967294)

OK
```

15.2.16 AT+MIPLVER Read Version

AT+MIPLVER Read Version	
Read Command	Response
AT+MIPLVER?	+MIPLVER: <version>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<version>	OneNet version, such as 2.2.0
------------------------	-------------------------------

Example

```
AT+MIPLVER?
+MIPLVER: 2.3.0

OK
```

15.2.17+MIPLREAD Read Request to User

+MIPLREAD Read Request to User

Response

+MIPLREAD: <id>,<msgid>,<objectid>,<instanceid>,<resourceid>

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id
<objectid>	Integer, object id
<instanceid>	Integer, instance id, read all resources of all instances of the object if instanceid equals -1
<resourceid>	Integer, resource id, read all resources of the instance if resourceid equals -1

15.2.18+MIPLWRITE Write Request to User

+MIPLWRITE Write Request to User

Response

+MIPLWRITE:
<id>,<msgid>,<objectid>,<instanceid>,<resourceid>,<valuetype>
<len>,<value>,<flag>,<index>

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id
<objectid>	Integer, object id
<instanceid>	Integer, instance id
<resourceid>	Integer, resource id
<valuetype>	Integer, write data value type 1 String 2 Opaque 3 Integer 4 Float 5 Bool
<len>	Integer, write data length. It can be omitted, if valuetype is Integer or

	Float, or Bool
<value>	Integer, write data value
<flag>	Integer, message flag 1 First message 2 Middle message 0 Last message
<index>	Integer, message index, from 0 to 1024

15.2.19 +MIPLEXECUTE Execute Request to User

+MIPLEXECUTE Execute Request to User

	Response +MIPLEXECUTE: <id>,<msgid>,<objectid>,<instanceid>,<resourceid>,<len>,<arguments>
--	---

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id
<objectid>	Integer, object id
<instanceid>	Integer, instance id
<resourceid>	Integer, resource id
<len>	Integer, parameter length
<arguments>	String, parameter string

15.2.20 +MIPLOBSERVE Observe Request to User

+MIPLOBSERVE Observe Request to User

	Response +MIPLOBSERVE: <id>,<msgid>,<flag>,<objectid>,<instanceid>,<resourceid>
--	--

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
-------------------	--

<msgid>	Integer, message id
<flag>	Integer, observe flag. 1 Indicates observe 0 Indicates cancel observe
<objectid>	Integer, object id
<instanceid>	Integer, instance id, observe all resources of all instances of the object if instanceid equals -1
<resourceid>	Integer, resource id, observe all resources of the instance if resourceid equals -1

15.2.21 +MIPLDISCOVER Discover request to User

+MIPLDISCOVER Discover request to User

Response

+MIPLDISCOVER: <id>,<msgid>,<objectid>

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id
<objectid>	Integer, object id

15.2.22 +MIPLPARAMETER Set Parameter Request to User

+MIPLPARAMETER Set Parameter Request to User

Response

+MIPLPARAMETER:
<id>,<msgid>,<objectid>,<instanceid>,<resourceid>,<len>,<parameter>

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<msgid>	Integer, message id
<objectid>	Integer, object id
<instanceid>	Integer, instance id, observe all resources of all instances of the object if instanceid equals -1

<resoreceid>	Integer, resource id, observe all resources of the instance if resourceid equals -1
<len>	Integer, parameter length
<parameter>	String, parameter string, must start with "and end with" pmin=xxx; pmax=xxx; gt=xxx; lt=xxx; stp=xxx

15.2.23+MIPLEVENT Event Indication to User

+MIPLEVENT Event Indication to User

Response

+MIPLEVENT: <id>,<evtid>[,<extend>]

Defined Values

<id>	Integer, OneNet instance returned by AT+MIPLCREATE
<evtid>	Integer, event id 1 BOOTSTRAP_START 2 BOOTSTRAP_SUCCESS 3 BOOTSTRAP_FAILED 4 CONNECT_SUCCESS 5 CONNECT_FAILED 6 REG_SUCCESS 7 REG_FAILED 8 REG_TIMEOUT 9 LIFETIME_TIMEOUT 10 STATUS_HALT 11 UPDATE_SUCCESS 12 UPDATE_FAILED 13 UPDATE_TIMEOUT 14 UPDATE_NEED 15 UNREG_DONE 20 RESPONSE_FAILED 21 RESPONSE_SUCCESS 25 NOTIFY_FAILED 26 NOTIFY_SUCCESS
<extend>	Integer, extend parameter [option] The events of RESPONSE_FAILED and NOTIFY_FAILED can take msgid The events of UPDATE_NEED can take LIFETIME(unit is second) The events of RESPONSE_SUCCESS can take ack

16 AT Commands for NVRAM Application

16.1 Overview of AT Commands for NVRAM Application

Command	Description
AT+CNVMR	Read data from NVRAM
AT+CNVMW	Write data to NVRAM
AT+CNVMIVD	Invalidate a specific data item in NVRAM
AT+CNVMGET	Get all Customer Data Item IDs from NVRAM

16.2 Detailed Descriptions of AT Commands for NVRAM Application

16.2.1 AT+CNVMR Read Data from NVRAM

AT+CNVMR Read Data from NVRAM	
Test Command	Response
AT+CNVMR=?	+CNVMR: "Data item name"
	OK
Write Command	Response
AT+CNVMR=<data_item_na me>	+CNVMR: <read_status>[,<data_item_name>,<length>,<nvram_data>]
	OK
	or
	ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<read_status>	If the succeeds, it is 0.Otherwise, it is the error code. 0 Success -4 Means the data item wasn't found by the NVRAM. There may be other error codes.
<data_item_name>	A string parameter which indicates the NVRAM data item name, the string length can be from 1 to 20.
<length>	Integer, the length of the <data_item_name> item NVRAM Data.
<nvram_data>	A string parameter which indicates the NVRAM data.

Example

```
AT+CNVMR=?  
+CNVMR: "Data item name"
```

OK

16.2.2 AT+CNVMW Write Data to NVRAM

AT+CNVMW Write Data to NVRAM

Test Command	Response
AT+CNVMW=?	+CNVMW: "Data item name","Data item value",,(1-1024)
	OK
Write Command	Response
AT+CNVMW=<data_item_name>,<nvram_data>,<length>>	+CNVMR: +CNVMW: <write_status> OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<write_status>	If the succeeds, it is 0.Otherwise, it is the error code. 0 Success
-----------------------------	--

	-7 Means no enough customers NVRAM space. There may be other error codes.
<data_item_name>	A string parameter which indicates the data item name you want to write, the string length can be from 1 to 20.
<nvram_data>	A string parameter which indicates the data you want to write in to NVRAM, the data length can be from 1 to 1024.
<length>	Integer, the length of the <nvram_data>,can be from 1 to 1024.

Example

```
AT+CNVMW=?
+CNVMW: "Data item name","Data item value",(1-1024)
```

OK

16.2.3 AT+CNVMIVD Invalidate a Specific Data Item in NVRAM

AT+CNVMIVD Invalidate a Specific Data Item in NVRAM

Test Command AT+CNVMIVD=?	Response +CNVMIVD: "Data item name" OK
Write Command AT+CNVMIVD=<data_item_name>	Response +CNVMIVD: <status> OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<status>	If the succeeds, it is 0.Otherwise,it is the error code. 0 Success -4 Means the data item wasn't found by the NVRAM. There may be other error codes.
<data_item_name>	A string parameter which indicates the data item name you want to write, the string length can be from 1 to 20.

Example

```
AT+CNVMIVD=?  
+CNVMW: "Data item name","Data item value",,(1-1024)  
  
OK
```

16.2.4 AT+CNVMGET Get all Customer Data Item IDs from NVRAM

AT+CNVMGET Get all Customer Data Item IDs from NVRAM

Execution Command

AT+CNVMGET

Response

If successful, return:

+CNVMGET: <id>,<group_name>,<data_item_name>

OK

If no customer NVRAM data item, return:

+CNVMGET: NULL

OK

or

ERROR

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<id>	The id of the data item.
<group_name>	A string parameter which indicates the group name you have wrote in to NVRAM.
<data_item_name>	A string parameter which indicates the data item name you have wrote in to NVRAM with AT+CNVMW.

17 AT Commands for CT IOT Platform

17.1 Overview of AT Commands for CT IOT Platform

Command	Description
AT+CM2MCLINEW	Register to CT IOT Platform
AT+CM2MCLISEND	Send data to CT IOT Platform
AT+CM2MCLIDEL	Deregister to CT IOT Platform
AT+CM2MCLIGET	Get the latest 6 received data
AT+CCTUPNUM	Set update registration retry times
AT+CCTLASTSTAT	Query the latest status of IoT
+CM2MCLI	CT IOT client notification
+CM2MCLIRECV	Receive data from CT IOT platform

17.2 Detailed Descriptions of AT Commands for CT IOT Platform

17.2.1 AT+CM2MCLINEW Register to CT IOT Platform

AT+CM2MCLINEW Register to CT IOT Platform	
Write Command	Response
AT+CM2MCLINEW=<server> >,<port>,<endpoint>[,<lifetime>[,<pskid>,<psk>]]	OK +CM2MCLI: 1 +CM2MCLI: 4 or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<server>	String, LwM2M server IP address of CT IOT platform.
<port>	Integer, LwM2M server port of CT IOT platform.
<endpoint>	String, Endpoint name, the format should be "xxx", xxx is the IMEI of device.
<lifetime>	Integer, The time interval to send "update registration" to CT IOT platform, Don't update by default.
<pskid>	String, Mandatory for DTLS register, use device's IMEI for CT IOT platform.
<psk>	String, Mandatory for DTLS register, supply by CT IOT platform.

17.2.2 AT+CM2MCLISEND Send Data to CT IOT Platform

AT+CM2MCLISEND Send Data to CT IOT Platform

Write Command	Response
AT+CM2MCLISEND=<data>	OK +CM2MCLI: 5 or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<data>	String, HEX format, should be even, the supported characters are 0~9, A~F, a~f.
---------------------	---

17.2.3 AT+CM2MCLIDEL Deregister to CT IOT Platform

AT+CM2MCLIDEL Deregister to CT IOT Platform

Execute Command	Response
AT+CM2MCLIDEL	OK +CM2MCLI: 3 or

	ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

17.2.4 AT+CM2MCLIGET Get the Latest 6 Received Data

AT+CM2MCLIGET Get the Latest 6 Received Data	
Read Command	Response
AT+CM2MCLIGET?	No Data!
	OK
	or
	+CM2MCLIRECV: <data>
	[[+CM2MCLIRECV: <data>]
	[...]
	OK
	or
	ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Example

AT+CM2MCLIGET?

No Data!

OK

17.2.5 AT+CCTUPNUM Set Update Registration Retry Times

AT+CCTUPNUM Set Update Registration Retry Times	
Test Command	Response
AT+CCTUPNUM=?	+CCTUPNUM: (range of supported <num>s)
	OK

Read Command AT+CCTUPNUM?	Response +CCTUPNUM: <num>
	OK
Write Command AT+CCTUPNUM=<num>	Response OK or ERROR
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<num>	Integer, retry times when update registration fail. 0-100
--------------------	--

Example

```
AT+CCTUPNUM=?
+CCTUPNUM: (0-100)
```

OK

```
AT+CCTUPNUM=?
+CCTUPNUM: 0
```

OK

17.2.6 AT+CCTLASTSTAT Query the Latest Status of IoT

AT+CCTLASTSTAT Query the Latest Status of IoT	
Read Command AT+CCTLASTSTAT?	Response +CCTLASTSTAT: <status>
	OK
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<status>	Integer, see the following IoT client notification chapter.
----------	---

Example

```
AT+CCTLASTSTAT?
```

```
+CCTLASTSTAT: 0
```

```
OK
```

17.2.7 +CM2MCLI CT IOT Client Notification

+CM2MCLI CT IOT Client Notification

Response

```
+CM2MCLI: <n>
```

Defined Values

<n>	Integer, Notification. 0 Response error 1 Device registered to CT IOT platform successfully 2 Device updated registration to CT IOT platform successfully 3 Device deregistered to CT IOT platform successfully 4 Device received object 19 observation successfully from CT IOT platform 5 Device sent data to CT IOT platform 6 Reserve, define later 7 Device registered to CT IOT platform failed
-----	---

17.2.8 +CM2MCLIRECV Receive data from CT IOT Platform

+CM2MCLIRECV Receive data from CT IOT platform

Response

```
+CM2MCLIRECV: <data>
```

Defined Values

<data>	String, HEX format, should be even, the supported characters are 0~9, A~F, a~f.
---------------------	---

SIMCom
Confidential

18 AT Commands for DM Application

18.1 Overview of AT Commands for DM Application

Command	Description
AT+DMCONFIGEXT	Configure parameters for DM
AT+DMSET	Set DM state

18.2 Detailed Descriptions of AT Commands for DM Application

18.2.1 AT+DMCONFIGEXT Configure parameters for DM

AT+DMCONFIGEXT Configure parameters for DM	
Test Command AT+DMCONFIGEXT=?	Response +DMCONFIGEXT: (0-255).(0-255).(0-255).(0-255), (0,1), "appkey", "pwd", (list of supported <lifetime>) OK
Write Command AT+DMCONFIGEXT=<addr>,<bs>,<appkey>,<pwd>,<life time>	Response OK or ERROR
Parameter Saving Mode	AUTO_SAVE
Max Response Time	-
Reference	

Defined Values

<addr>	String, DM host IP address
<bs>	Integer, DM host bootstrap value 0 Bootstrap disabled

	1 Bootstrap enabled Such as: 117.161.2.7, bs value is set to 0
<appkey>	String, appkey for register DM
<pwd>	String, secret key for register DM
<lifetime>	Integer, lifetime for register DM

Example

```
AT+DMCONFIGEXT=?  
+DMCONFIGEXT:  
(0-255).(0-255).(0-255).(0-255),(0-1),"appkey","pwd",(15-268435455)
```

OK

18.2.2 AT+DMSET Set DM State

AT+DMSET Set DM State	
Test Command	Response
AT+DMSET=?	+DMSET: (0-1) OK
Read Command	Response
AT+DMSET?	+DMSET: (value) OK
Write Command	Response
AT+DMSET=<value>	OK or ERROR
Parameter Saving Mode	AUTO_SAVE_REBOOT
Max Response Time	-
Reference	

Defined Values

<value>	Integer, set DM on or off state 0 DM off 1 DM on
---------	--

Example

AT+DMSET=?

+DMSET: (0-1)

OK

AT+DMSET?

+DMSET: 0

OK

19 AT Commands for FOTA Application

19.1 Overview of AT Commands for FOTA Application

Command	Description
AT+CFOTA	FOTA Operation
AT+CFLE	Flash Erase
AT+CFLW	Flash Write
AT+CFLR	Flash Read

19.2 Detailed Descriptions of AT Commands for FOTA Application

19.2.1 AT+CFOTA FOTA Operation

AT+CFOTA FOTA Operation	
Write Command	Response
AT+CFOTA=<mode>[,version][,n][,<len>,<md5>]	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	Operation type 1 Download and update differential package by TCP 2 Download differential package by TCP, not update 3 Update differential package after <mode>=2
--------	---

	4 Report update result to FOTA server 5 Update differential package after local download
<len>	The update differential package length
<md5>	The update differential package MD5 check value

NOTE

- When **<mode>=1 or 2**
The PDP connect should be OK.
Domain name resolution should be OK.
- **<version>** The new version which customer want to update, if you omit it, the module will update to the newest version in the OTA server. The **<version>** just support when **<mode>=1 or 2**.
- When **<mode>=5**
need parameter **<len>** and **<md5>**.
Local download need use AT+CFLE and AT+CFLW.

19.2.2 AT+CFLE Flash Erase

AT+CFLE Flash Erase	
Write Command	Response
AT+CFLE=<mode>,<addr>,<num>	OK If error is related to ME functionality: +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	0 Erase FOTA update partition 1 Erase flash reserved partition
<addr>	Erase address 0 FOTA partition address is fixed when <mode>=0 138346496-138412032 Flash reserved partition valid address area (0x083F0000-0x08400000), the value should be decimal format, when <mode>=1 .
<num>	Flash block number 1-145 Flash block number when <mode>=0 1-16 Flash block number when <mode>=1

NOTE

- FOTA partition 0x0830F000-0x083A5000,600KB
- FOTA update partition 0x08313000- 0x083A4000,580KB
- FLASH reserved partition 0x083F0000-0x08400000,64KB
- The size one flash block is 4KB

19.2.3 AT+CFLW Flash Write

At+CFLW Flash Write

Write Command

AT+CFLW=<mode>,<addr>,<len>,<offset>,<timeout>

Response

">"

Then enter data mode for inputting data until <len> is meet, and write data to flash.

OK

If <timeout> expired, cancel the operation

ERROR

If error is related to ME functionality:

+CME ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<mode>	0 Write FOTA update partition 1 Write Flash reserved partition
<addr>	Write address 0 FOTA partition address is fixed when <mode>=0 138346496-138412032 Flash reserved partition valid address area (0x083F0000-0x08400000), the value should be decimal format
<len>	The data-length for writing, maximum 512 bytes each time
<offset>	The offset added for writing not exceeding 580KB when <mode>=0 not exceeding 64KB when <mode>=1
<timeout>	Timeout for writing, unit: s, maximum 100s

NOTE

- Before write flash, should erase flash first

19.2.4 AT+CFLR Flash Read

AT+CFLR Flash Read

Write Command

AT+CFLR=<addr>,<len>

Response

+CFLR: <data>**OK**

If error is related to ME functionality:

+CME ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<addr>	138346496-138412032 Flash reserved partition valid address area (0x083F0000-0x08400000), the value should be decimal format. 137441280-138035200 FOTA update partition (0x08313000-0x083A4000), the value should be decimal format.
<len>	The data-length for reading, maximum 512 bytes each time
<data>	The data which is read will be putted out by UART port

NOTE

- FOTA update partition not support read.

20 AT Commands for SIM Toolkit Application

20.1 Overview of AT Commands for SIM Toolkit Application

Command	Description
AT*MSTLOCK	APP Registering for SIM Toolkit (And Locking To A Channel)
AT*MSTPD	SIM Toolkit Terminal Profile Download
AT*MSTMODE	Setting Format for SIM Toolkit Output
AT*MSTICREC	Obtaining Icon Records
AT*MSTICIMG	Obtaining Icon Image
AT*MSTGC	APP Request for Parameters Associated with a Previously Reported Proactive Command
AT*MSTCR	APP Informing PS of Response to Proactive Command
AT*MSTMS	Menu Selection by User
AT*MSTEV	APP Specific Monitored Event Occurrence

20.2 Detailed Descriptions of AT Commands for SIM Toolkit Application

20.2.1 AT*MSTLOCK APP Registering for SIM Toolkit (and locking to a channel)

AT*MSTLOCK APP Registering for SIM Toolkit (and locking to a channel)	
Write Command AT*MSTLOCK=<data>[,<timeout>]	This command registers/de-registers the CI task with the SIMAT task so it receives any relevant SIM toolkit activity. The channel on which this AT command is received is used as the channel allocation for the unsolicited results and data. A further optional parameter supplies the length of time to set the modem user response timer. Response OK or

	+CME ERROR: <err> +STC: 0
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<data>	Decimal digit 0 Applications processor de-registers for SIM Toolkit activity 1 Register applications processor for SIM toolkit activity. (The same channel used for this command will be used for all unsolicited result codes from receipt of this.)
<timeout>	User response timer – time set in seconds. Max timeout value is 3600 seconds. When enabled the timeout value remains operational until the command is re-entered with a timeout value of 0 or the ME is powered down(default 0).

20.2.2 AT*MSTPD SIM Toolkit Terminal Profile Download

AT*MSTPD SIM Toolkit Terminal Profile Download	
Write Command	AT command to provide/modify MMI specific terminal profile parameters to the CI Task. The MMI profile is stored in NVRAM on the modem and read at start-up. The value stored in NVRAM may be changed using this command. If this is modified after SAT initialization the modified value will not be sent to the (U)SIM until after a power cycle.
AT*MSTPD=<length>[,<data>]	Response OK or +CME ERROR: <err> +STC: 0
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<length>	Integer, determines the number of bytes of <data> used for the APP
-----------------------	--

	data for the terminal profile.
<data>	Hexadecimal representation of the <length> number of bytes with bits set by APP to indicates which of the parameters in the byte definition table given above are to be enabled in the terminal profile.

20.2.3 AT*MSTMODE Setting format for SIM Toolkit Output

AT*MSTMODE Setting format for SIM Toolkit Output	
Test Command AT*MSTMODE=?	AT Command for setting the format of SIM Application Toolkit output. The format may be set to PDU or Text Mode.
	Response *MSTMODE: (list of supported <mode>s) or +CME ERROR: <err>
Read Command AT*MSTMODE?	Response *MSTMODE: <mode> or +CME ERROR: <err>
Write Command AT*MSTMODE=<mode>	Response OK or +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<mode>	Integer 0 PDU Mode 1 Text Mode 2 CMGF Mode (default, will use AT+CMGF setting)
---------------------	---

Example

AT*MSTMODE=? *MSTMODE: (0-2)
OK

AT*MSTMODE?

*MSTMODE: 2

OK

20.2.4 AT*MSTICREC Obtaining Icon records

AT*MSTICREC Obtaining Icon records

Read Command

AT*MSTICREC?

AT command for obtaining ICON image record information. – proactive commands may include an icon record in command data – this should be displayed as part of any user interaction for the proactive command.

Response

*MSTICREC: <number of icon records on the SIM/UICC>

or

+CME ERROR: <err>

Write Command

AT*MSTICREC=<rNum>

Response

*MSTICREC: <rNum>,<numInstances>,[<CR><LF>*MSTICREC:<width>,<height>,<cs>,<efld>,<offset>,<length>[...]]

or

+CME ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<rNum>	Integer, the number of the icon record to be read from the SIM/UICC.
<numInstances>	Integer, the number of instance data records within this image record.
<width>	Integer, width of this image instance expressed in raster image points.
<height>	Integer, height of this image instance expressed in raster image points.
<cs>	Integer, coding scheme. 0 basic coding(default) 1 color coding
<efld>	Hexadecimal representation of the Image Instance file to be read on the SIM/UICC – two bytes of data ordered MSB LSB.
<offset>	Integer, number of bytes offset from start of the file to begin reading.
<length>	Integer, number of bytes to be read.

20.2.5 AT*MSTICIMG Obtaining Icon image

AT*MSTICIMG Obtaining Icon image

Write Command

AT*MSTICIMG=<efID>[,<offset>],<length>

AT command to get ICON image instance data. This image instance data is referenced in the icon record to make up the icon to display.

Response

***MSTICIMG: <length>,<data>**

or

+CME ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<efId>	Hexadecimal representation of the Image Instance file to be read on the SIM/UICC – two bytes of data ordered MSB LSB.
<offset>	Integer, Number of bytes offset from start of the file to begin reading from.
<length>	Integer, Number of bytes of image instance data to read/was read.
<data>	String containing a list of hex values for bytes of image instance data.

20.2.6 AT*MSTGC APP request for parameters associated with a previously reported Proactive Command

AT*MSTGC APP request for parameters associated with a previously reported Proactive Command

Write Command

AT*MSTGC=<cmdId>

AT command to Get Command parameters for a proactive SIM command from the CI Task. This will be sent from the application after unsolicited result code *MSTC: <cmdId> informs it the SIM has issued a proactive SIM command which requires user interaction.

Response

***MSTGC: <cmdId>,<data>**

or

+CME ERROR: <err>

Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<cmdId>	Decimal notation, Command Type value.
<data>	Proactive command specific data, dependent on <cmdId>.

20.2.7 AT*MSTCR APP Informing PS of Response to Proactive Command

AT*MSTCR APP Informing PS of Response to Proactive Command	
Write Command	AT command to provide Command Response parameters for a previously fetched proactive SIM command. Its purpose is to relay response data to the lower layers of the protocol stack to allow the Terminal Response SIM command to be returned to the SIM for the current proactive command.
AT*MSTCR=<cmdId>,<result>[,<data>]	Response OK or +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<cmdId>	Decimal notation, Command Type value.
<result>	Decimal notation, dependent on the command type – see following sections for each proactive command supported.
<data>	Additional data provided for certain commands, as required for the Terminal Response returned to the SIM after processing a proactive SIM command.

20.2.8 AT*MSTMS Menu Selection by User

AT*MSTMS Menu Selection by User

Test Command

AT*MSTMS=?

AT Command for selecting a menu option. On power-up the SIM will send the Set-Up-Menu proactive indication. The Application Processor (M4) loads and displays the menu structure. This AT command is used when an item from this menu is selected.

Response

***MSTMS: <first menu item id – last menu item id>,<0-1>**

or

+CME ERROR: <err>

Write Command

AT*MSTMS=<item>[,<help>]

Response

OK

or

+CME ERROR: <err>

Parameter Saving Mode

NO_SAVE

Max Response Time

-

Reference

Defined Values

<mode>	Integer, identifying an item in the menu items list.
<help>	Integer. 0 no help requested 1 help requested

NOTE

- For example, AT*MSTMS=2,1 will select item 2 from the main menu with help. (This response would result in an ENVELOPE command being passed to the SIM/UICC to indicate the item and that help is requested – as a result of this a proactive command – DISPLAY TEXT would be generated to supply the help information to the user)

20.2.9 AT*MSTEV APP specific monitored event occurrence

AT*MSTEV APP specific monitored event occurrence

Test Command

AT*MSTEV=?

This command is used to inform the MS that an MMI specific event has occurred.

Response

	<p>*MSTEV: (supported <event> list)</p> <p>or</p> <p>+CME ERROR: <err></p>
Write Command	Response
AT*MSTEV=<event>[,<language>][,<charsDownDisplay>[,<sizingSupported>[,<charsAcrossDisplay>[,<variableFontSupport>[,<displayResize>[,<textWrapping>[,<textScrolling>[,<menuWidthReduction>]]]]]]]]]	OK or +CME ERROR: <err>
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<event>	Hex two digits. 05 User Activity Event* 06 Idle Screen Available Event* 08 Language Selection Event 0C Display Parameters Changed
<language>	two character string representation of the language code.
<charsDownDisplay>	numeric type to indicate how many characters down are displayed (1-15)
<sizingSupported>	numeric type 0 or 1 to indicate FALSE/TRUE.
<charsAcrossDisplay>	numeric type to indicate how many characters across are displayed (1-127).
<variableFontSupport>	numeric type 0 or 1 to indicate FALSE/TRUE.
<displayResize>	numeric type 0 or 1 to indicate FALSE/TRUE.
<textWrapping>	numeric type 0 or 1 to indicate FALSE/TRUE.
<textScrolling>	numeric type 0 or 1 to indicate FALSE/TRUE.
<menuWidthReduction>	numeric type to indicate the allowed menu size reduction (0-7).

NOTE

- The <language> parameter is applicable only to Language Selection Event. For example, AT*MSTEV=08,"en" indicates that a language selection of English. The language code mapping is as per reference 11.
- The display parameters are only valid for the Display Parameters Changed event.
- * These events are only monitored for once – once they have occurred and are reported they

should be removed from the Event List automatically.

20.2.10 *MSTC:<cmdId> Proactive Command Indication

*MSTC: <cmdId> Proactive Command Indication

*MSTC: <cmdId>	The unsolicited result code *MSTC: informs the application processor (M4) that there is a proactive command that requires some APP activity awaiting retrieval.
Parameter Saving Mode	NO_SAVE
Max Response Time	-
Reference	

Defined Values

<cmdId>	Decimal format of Type of Command. Unique identifier for the current SIM Toolkit proactive command issued by the SIM. The following values are supported: '01' Refresh '05' Set Up Event List command '15' Launch Browser command '20' Play Tone command '21' Display Text command '22' Get Inkey command '23' Get Input command '24' Select Item command '25' Set Up Menu command '28' Set Up Idle Mode Text command '40' Open Channel '42' Receive Data '43' Send Data '81' End of proactive session
----------------------	---

NOTE

- The special case *MSTC: 0 is issued when there are no SIM Toolkit applications accessible on the SIM/UICC i.e. a non-proactive SIM is being used.
- Receipt of this result code by the application processor (M4) – except in the special cases of *MSTC: 0 and *MSTC: 81 - should result in an AT*MSTGC=<cmdId> being sent by to request the associated proactive command information. This information is supplied in the AT command

result.

SIMCom
Confidential

21 Supported Unsolicited Result Codes and Error Codes

21.1 Summary of CME ERROR Codes

Final result code **+CME ERROR: <err>** indicates different meaning. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

21.1.1 CME Error Codes Related to mobile equipment or network

Code of <err>	Meaning
0	phone failure
1	no connection to phone
2	phone-adaptor link reserved
3	operation not allowed
4	operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	memory full
21	invalid index
22	not found
23	memory failure

24	text string too long
25	invalid characters in text string
26	dial string too long
27	invalid characters in dial string
30	no network service
31	network timeout
32	network not allowed - emergency call only
40	network personalization PIN required
41	network personalization PUK required
42	network subset personalization PIN required
43	network subset personalization PUK required
44	service provider personalization PIN required
45	service provider personalization PUK required
46	corporate personalization PIN required
47	corporate personalization PUK required
48	hidden key required
50	Incorrect Parameters
100	Unknown

21.1.2 CME Error Codes related to PSD and Packet Domain

Final result code **+CME ERROR: <err>** indicates an error related to PSD and Packet Domain. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
103	Illegal MS
106	Illegal ME
107	GPRS services not allowed
111	PLMN not allowed
112	Location area not allowed
113	Roaming not allowed in this location area
132	service option not supported
133	requested service option not subscribed
134	service option temporarily out of order
148	unspecified GPRS error
149	PDP authentication failure
150	invalid mobile class
151	Last PDN Disconnection not allowed

577	PSD - activation rejected by GGSN
578	PSD - unspecified activation rejection
579	PSD - bad code or protocol rejection
580	PSD - can't modify address
581	PSD - CHAP close
582	PSD - profile (cid) currently unavailable
583	PSD - a profile (cid) is currently active
584	PSD - combined services not allowed
585	PSD - conditional IE error
586	PSD - context activation rejected
587	PSD - duplicate TI received
588	PSD - feature not supported
589	PSD - service not available
590	PSD - unknown IE from network
591	PSD - implicitly detached
592	PSD - insufficient resources
593	PSD - invalid activation state (0-1)
594	PSD - invalid address length
595	PSD - invalid character in address string
596	PSD - invalid cid value
597	PSD - invalid dial string length
598	PSD - mode value not in range
599	PSD - invalid MAND information
600	PSD - SMS service preference out of range
601	PSD - invalid TI value
602	PSD - IPCP negotiation timeout
603	PSD - LCP negotiation timeout
604	PSD - LLC error
605	PSD - LLC or SNDCP failure
606	PSD - lower layer failure
607	PSD - missing or unknown APN
608	PSD - mobile not ready
609	PSD- MS identity not in network
610	PSD- MSC temporarily not reachable
611	PSD- message incompatible with state
612	PSD- message type incompatible with state
613	PSD- unknown message from network
614	PSD- NCP close
615	PSD- network failure
616	PSD- no echo reply
617	PSD- no free NSAPIs

618	PSD- processing of multiple cids not supported
619	PSD- no PDP context activated
620	PSD- normal termination
621	PSD- NSAPI already used
622	PSD- address element out of range
623	PSD- PAP close
624	PSD- PDP context w/o TFT already activated
625	PSD- pdp type not supported
626	PSD- peer refuses our ACCM
627	PSD- peer refuses our IP address
628	PSD- peer refuses our MRU
629	PSD- peer re-requested CHAP
630	PSD- profile (cid) not defined
631	PSD- unspecified protocol error
632	PSD- QOS not accepted
633	PSD- QOS validation fail
634	PSD- reactivation required
635	PSD- regular deactivation
636	PSD- semantic error in TFT operation
637	PSD- semantic errors in packet filter
638	PSD- semantically incorrect message
639	PSD- service type not yet available
640	PSD- syntactical error in TFT operation
641	GPRS - syntactical errors in packet filter
642	PSD- too many RXJs
643	PSD- unknown PDP address or type
644	PSD- unknown PDP context
645	PSD- user authorization failed
646	PSD- QOS invalid parameter
647	PSD- FDN failure
649	PSD- bad pdp context parameters
650	PSD- PDP context already active
651	PSD- LCP termination negotiation timeout
652	more than one double colon in IPv6 address
653	IPv6 address ended with part of an IPv4 address
654	IPv6 address used dotted-decimal form outside an IPv4 address
655	in an IPv6 address, a byte of an IPv4 address was too big, causing overflow
656	in an IPv6 address, a byte of an IPv4 address was missing
657	in an IPv6 address, a byte of an IPv4 address was more than 255
658	in an IPv6 address, a byte pair was more than hex ffff

659	in an IPv6 address, a byte of an IPv4 address was too short or contained invalid characters
660	an IPv6 address was too short or contained invalid characters
661	in an IPv6 address, a byte pair was too big, causing overflow
662	an IPv6 address started with a single colon
663	an IPv6 address ended with a single colon
664	an IPv6 address contained an IPv4 address other than at the end
665	an IPv6 address was too long
666	an IPv6 address was followed by invalid characters
670	PSD - operator Determined Barring
671	PSD - activation rejected by GW or PDNGW
672	PSD – PTI already in use
673	PSD – EPS Bearer Context without TFT already activated
674	PSD - PTI mismatch
675	PSD - PDN Type IPV4 only allowed
676	PSD – PDN Type IPV6 only allowed
677	PSD – single address bearers only allowed
678	PSD – ESM information not received
679	PSD – PDN connection does not exist
680	PSD – multiple PDN connection not allowed for one APN
681	PSD – collision with network initiated request
682	PSD – unsupported QCI value
683	PSD – invalid PTI value
684	PSD – incompatible APN restriction value
685	PSD – reactivation request
690	LTE - IMSI unknown in HSS
691	LTE - illegal UE
692	LTE - EPS service not allowed
693	LTE - EPS and non EPS Service not allowed
694	LTE - UE ID cannot be derived
695	LTE - EPS tracking area not allowed
696	LTE - roaming not allowed in TA
697	LTE - roaming not allowed in PLMN
698	LTE - no suitable cells in TA
699	LTE - CS domain not available
700	LTE - ESM failure
701	LTE - MAC failure
702	LTE - synch failure
703	LTE - congestion
704	LTE - UE security capability mismatch
705	LTE - security mode rejected, unspecified

706	LTE - UE not authorized in CSG cell
707	LTE – non-EPS authorization unacceptable
708	LTE - CS domain temporarily unavailable
709	LTE - no EPS bearer context activated
710	PSD – PSD Mode not possible
711	PSD – invalid connection type
712	PSD – no free PSD bearer IDs
713	PSD – no free PSD PTIs
714	PSD – unable to open data connection
715	PSD- Incorrect username/password

21.1.3 CME Error Codes related to select TE character set

Final result code **+CME ERROR: <err>** indicates an error related to select TE character set. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
737	+CSCS type not supported
738	+CSCS type not found

21.1.4 CME Error Codes related to preferred operator list

Final result code **+CME ERROR: <err>** indicates an error related to preferred operator list. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
741	must include <format> with <oper>
742	incorrect <oper> format
743	<oper> length too long
744	SIM full
745	unable to change PLMN list
746	network operator not recognized
747	access technology missing
748	access technology not supported

21.1.5 CME Error Codes related to Restricted/Generic SIM Access

Final result code **+CME ERROR: <err>** indicates an error related to Restricted/Generic SIM Access. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
749	invalid command length
750	invalid input string
751	command not allowed for 3G SIM
752	Invalid <pathid> parameter
753	missing required command parameter
754	invalid SIM command
755	invalid File Id
756	missing required P1/2/3 parameter
757	invalid P1/2/3 parameter
758	missing required command data
759	invalid characters in command data

21.1.6 CME Error Codes related to Miscellaneous Proprietary

Final result code **+CME ERROR: <err>** indicates an error related to Miscellaneous Proprietary. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
720	SIM toolkit menu has not been configured
721	SIM toolkit already in use
722	SIM toolkit not enabled
724	MMI profile not updated
725	invalid SIM toolkit proactive command ID
726	invalid SIM proactive command response data
765	invalid input value
766	unsupported value or mode
767	operation failed

768	multiplexer already active
769	unable to get control of required
770	SIM invalid - network reject
772	SIM powered down
773	SIM File not present
794	invalid input value
795	No valid GId

21.1.7 CME Error Codes related to report Network State

Final result code **+CME ERROR: <err>** indicates an error related to report Network State. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
840	No Service state
841	In cell search state
842	ERRC is deactivated
843	In cell reselection state
844	In L1 test mode
845	In reestablishment state
846	In PSM state
847	No data transfer in idle state

21.1.8 CME Errors Codes related to SIM Toolkit Operations

The following CME errors are used for reporting of SIM Toolkit specific problems:

Verbose CME Error	CME error code	Used in response to commands	Description
sim toolkit not enabled	707	MSTGC; MSTCR; MSTEV; MSTMS;	There is no current SIM Toolkit session
sim toolkit already in use	706	MSTGC; MSTCR; MSTEV; MSTMS;	A proactive SIM Toolkit session is already running for a different entity.
sim toolkit menu has not been configured	705	MSTMS;	Either there are no menu, or items in the STK menu or the menu has been removed

APP profile not updated	709	MSTPD;	The new APP profile download has failed
invalid SIM toolkit proactive command ID	710	MSTCR;	The command id entered for the MSTCR does not conform with the current proactive command
invalid SIM proactive command response data	711	MSTCR;	The input data associated with the current proactive command is not valid.
Invalid characters in text string	25	MSTEV; MSTMS;	Invalid characters in string (i.e. characters in expected numeric string)
Invalid index	21	MSTMS;	The operation failed because the menu or the help item index was not for a valid option

21.2 Summary of CMS ERROR Codes

Final result code **+CMS ERROR: <err>** indicates an error related to message service or network. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
1	Unassigned(unallocated) number
8	Operator determined barring
10	Call barred
21	Short message transfer rejected
27	Destination out of service
28	Unidentified subscriber
29	Facility rejected
30	Unknown subscriber
38	Network out of order
41	Temporary failure
42	Congestion
47	Resources unavailable, unspecified
50	Requested facility not subscribed
69	Requested facility not implemented
81	Invalid short message transfer reference value
95	Invalid message, unspecified
96	Invalid mandatory information

97	Message type non-existent or not implemented
98	Message type not compatible with protocol state
99	Information element non-existent or not implemented
111	Protocol error, unspecified
127	Interworking, unspecified
300	ME failure
301	SMS reserved
302	operation not allowed
303	operation not supported
304	invalid PDU mode parameter
305	invalid text mode parameter
310	SIM not inserted
311	SIM pin necessary
312	PH SIM pin necessary
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	memory failure
321	invalid memory index
322	memory full
330	SMSC address unknown
331	no network
332	network timeout
340	No +CNMA acknowledgment expected
500	Unknown
512	SIM not ready
513	unread records on SIM
515	PS busy
516	Couldn't read SMS parameters from SIM
517	SM BL not ready
518	invalid parameter
519	ME temporary not available
528	Invalid (non-hex) chars in PDU
529	Incorrect PDU length
530	Invalid MTI
531	Invalid (non-hex) chars in address
532	Invalid address (no digits read)
533	Incorrect PDU length (UDL)

534	Incorrect SCA length
536	Invalid First Octet (should be 2 or 34)
537	Invalid Command Type
538	SRR bit not set
539	SRR bit set
540	Invalid User Data Header IE

21.3 Summary of CIS ERROR Codes

Final result code **+CIS ERROR: <err>** indicates an error related to OneNet. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
651	Memory error
652	Parameter error
653	Unsupported format
654	SDK error
655	Not find

21.4 Summary of TLS ERROR Codes

Final result code **+TLS ERROR: <err>** indicates an error related to message service or network. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
-66	Failed to open a socket
-67	Buffer is too small to hold the data
-68	The connection to the given server / port failed
-69	The context is invalid, e.g. because it was free
-70	Binding of the socket failed
-72	Could not listen on the socket
-74	Could not accept the incoming connection

-76	Reading information from the socket failed
-78	Sending information through the socket failed
-80	Connection was reset by peer
-82	Failed to get an IP address for the given hostname
-8320	Unavailable feature, e.g. RSA hashing/encryption combination
-8448	Requested OID is unknown
-8576	The CRT/CRL/CSR format is invalid, e.g. different type expected
-8704	The CRT/CRL/CSR version element is invalid
-8832	The serial tag or value is invalid
-8960	The algorithm tag or value is invalid
-9088	The name tag or value is invalid
-9216	The date tag or value is invalid
-9344	The signature tag or value invalid
-9472	The extension tag or value is invalid
-9600	CRT/CRL/CSR has an unsupported version number
-9728	Signature algorithm (oid) is unsupported
-9856	Signature algorithms do not match
-9984	Certificate verification failed e.g. CRL, CA or signature check failed
-10112	Format not recognized as DER or PEM
-10240	Input invalid
-10368	Allocation of memory failed
-10496	Read/write of file failed
-10624	Destination buffer is too small
-28800	The requested feature is not available
-28928	Bad input parameters to function
-29056	Verification of the message MAC failed
-29184	An invalid SSL record was received
-29312	The connection indicated an EOF
-29440	An unknown cipher was received
-29568	The server has no ciphersuites in common with the client
-29696	No RNG was provided to the SSL module
-29824	No client certification received from the client, but required by the authentication mode
-29952	Our own certificate(s) is/are too large to send in an SSL message
-30080	The own certificate is not set, but needed by the server.
-30208	The own private key or pre-shared key is not set, but needed
-30336	No CA Chain is set, but required to operate
-30464	An unexpected message was received from our peer
-30592	A fatal alert message was received from our peer
-30720	Verification of our peer failed
-30848	The peer notified us that the connection is going to be closed

- 30976	Processing of the ClientHello handshake message failed
- 31104	Processing of the ServerHello handshake message failed
- 31232	Processing of the Certificate handshake message failed
- 31360	Processing of the CertificateRequest handshake message failed
- 31488	Processing of the ServerKeyExchange handshake message failed
- 31616	Processing of the ServerHelloDone handshake message failed
- 31744	Processing of the ClientKeyExchange handshake message failed
- 31872	Processing of the ClientKeyExchange handshake message failed in DHM / ECDH Read Public
- 32000	Processing of the ClientKeyExchange handshake message failed in DHM / ECDH Calculate Secret
- 32128	Processing of the CertificateVerify handshake message failed
- 32256	Processing of the ChangeCipherSpec handshake message failed
-32384	Processing of the Finished handshake message failed
-32512	Memory allocation failed
-26624	The operation timed out
-26496	The client initiated a reconnect from the same port.
-26368	Record header looks valid but is not expected
-26240	The alert message received indicates a non-fatal error
- 26112	Couldn't set the hash for verifying CertificateVerify
-16000	Incomplete or incorrect certificate

21.5 Summary of Unsolicited Result Codes

URC	Description	AT Command
*MATREADY: 1		
+CREG: <stat>[,<lac>,<ci>]	There is a change in the MT network registration status or a change of the network cell.	AT+CREG=<n>
+CSMINS: <n>,<SIM inserted>	Indicates whether SIM card has been inserted.	AT+CSMINS=1
+CENG: <cell>,"<arfcn>,<rxi>,<rxq>,<mcc>,<mnc>,<bsic>,<cellid>,<rla>,<txp>,<lac>,<TA>"	Report of network information.	AT+CENG=<mode>[,<Ncell>] <mode>=2
+CPIN: <code>	Indicates whether some password is required or not.	AT+CPIN
+CPIN: NOT READY	SIM Card is not ready.	
+CPIN: NOT INSERTED	SIM Card is not inserted.	

+CSQN: <rss>,<ber>	Displays signal strength and channel bit error rate when <rss>,<ber>values change.	AT+EXUNSOL="SQ",1
+CR: <serv>	An intermediate result code is transmitted during connect negotiation when the TA has determined the speed and quality of service to be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. CONNECT) appears.	AT+CR=1
NORMAL POWER DOWN	SIM7020 is powered down by the PWRKEY pin or AT command "AT+CPOWD=1".	
UNDER-VOLTAGE POWER DOWN	Under-voltage automatic power down.	
UNDER-VOLTAGE WARNNING	under-voltage warning	
OVER-VOLTAGE POWER DOWN	Over-voltage automatic power down.	
OVER-VOLTAGE WARNNING	over-voltage warning	
+CDNSGIP: 1,<domain name>,<IP>[,<IP2>]	DNS successful	AT+CDNSGIP
+CGREG: <stat>[,<lac>,<ci>]	Network Registration Status	AT+CGREG=<n>

■ 22 ATC Differences among SIM7020 Series

22.1 AT+CSCLK

SIM7020C,SIM7020E,SIM7020G,SIM7060,SIM7060R SIM7030	
AT+CSCLK=? +CSCLK: (0-2)	AT+CSCLK=? +CSCLK: (0,2)
OK	OK
Difference: SIM7030 only support the parameter <n> equal to 0 and 2.	

22.2 AT+CEER

SIM7020G and SIM7060G do not support this command.

22.3 AT+CPLS

SIM7020G and SIM7060G do not support this command.

22.4 AT*MEDRXCFG

From 1752B07SIM7020C/E version supports the command.

22.5 OneNet

Only SIM7020C support OneNet function.