

UWB Unit AT command Set

version V1.0

Contents

AT command	3
1 AT /TEST.....	3
2 AT+switchdis /Set whether to enable ranging.....	3
3 AT+interval /Set the ranging interval.....	3
4 AT+version /Check version.....	4
5 AT+RST /Reset.....	4
6 AT+anchor_tag /Set device mode.....	5

AT command

1 AT TEST Command

Description:

Whether the basic function of the test module is normal.

grammar

execute	response
AT	OK

2 AT+switchdis

Description:

This command controls whether to switch the distance measurement, and it is valid in the unique label mode

grammar

execute	response
AT+switchdis=value	<value> = 0 , turn off, return ok
	<value> = 1 , turn on, return ok

3 AT+interval

Description:

This command can set the ranging interval

grammar

execute	response
AT+interval=value	OK

parameter

<value> set the ranging interval

Remarks

- The range is 5–50 meters, and the setting is how many times to get the data and start the output distance, the larger the value, the slower the refresh speed;

4 AT+version

Description:

Check version

grammar

execute AT+version?	response AIT-BU01-DB V000 T2020-4-17 OK
-------------------------------	--

Remarks

- Get manufacturer, module series, version number

5 AT+RST

Description:

Reset module

grammar

execute AT+RST Description: Reset module	response OK
---	----------------

6 AT+anchor_tag

Description:

Set device mode and ID

grammar

execute AT+anchor_tag=model,ID	response OK

parameter

Model 1 is to select the anchor mode, 0 is to select the tag mode ID

Set the base station and tag ID

Remarks

- Up to four base station IDs
- The default mode of production is anchor