

# Module LoRaWAN P2P

## Example

## API

Get data

◦ uiflow\_block\_lorawan\_data

Set point to point with frq 1

◦ uiflow\_block\_lorawan\_initp2p

LoRaWAN init Rx Mode with data

◦ uiflow\_block\_lorawan\_initrx

Send string “ ”

◦ uiflow\_block\_lorawan\_txt