

Unit Laser Rx

| 案例程序

```
from m5stack import *
from m5ui import *
from uiflow import *
import unit

setScreenColor(0x222222)
laser_rx_0 = unit.get(unit.LASERRX, unit.PORTB)
laser_tx_0 = unit.get(unit.LASERTX, unit.PORTB)

while True:
    print(laser_rx_0.value())
    wait_ms(2)
```

| 功能说明

Get laser_rx_0 value

```
print((str('value: ') + str((laser_rx_0.value()))))
```

- 获取Unit Laser RX接收的数据